

Material Library

User's Guide

Material Library User's Guide

© 1998–2017 COMSOL

Protected by U.S. Patents listed on www.comsol.com/patents, and U.S. Patents 7,519,518; 7,596,474; 7,623,991; 8,457,932; 8,954,302; 9,098,106; 9,146,652; 9,323,503; 9,372,673; and 9,454,625. Patents pending.

This Documentation and the Programs described herein are furnished under the COMSOL Software License Agreement (www.comsol.com/comsol-license-agreement) and may be used or copied only under the terms of the license agreement.

COMSOL, the COMSOL logo, COMSOL Multiphysics, Capture the Concept, COMSOL Desktop, LiveLink, and COMSOL Server are either registered trademarks or trademarks of COMSOL AB. All other trademarks are the property of their respective owners, and COMSOL AB and its subsidiaries and products are not affiliated with, endorsed by, sponsored by, or supported by those trademark owners. For a list of such trademark owners, see www.comsol.com/trademarks.

Version: COMSOL 5.3

Contact Information

Visit the Contact COMSOL page at www.comsol.com/contact to submit general inquiries, contact Technical Support, or search for an address and phone number. You can also visit the Worldwide Sales Offices page at www.comsol.com/contact/offices for address and contact information.

If you need to contact Support, an online request form is located at the COMSOL Access page at www.comsol.com/support/case. Other useful links include:

- Support Center: www.comsol.com/support
- Product Download: www.comsol.com/product-download
- Product Updates: www.comsol.com/support/updates
- COMSOL Blog: www.comsol.com/blogs
- Discussion Forum: www.comsol.com/community
- Events: www.comsol.com/events
- COMSOL Video Gallery: www.comsol.com/video
- Support Knowledge Base: www.comsol.com/support/knowledgebase

Part number: CM021201

C o n t e n t s

Chapter 1: Introduction

The Material Library Environment	6
About the Material Library	6
Where Do I Access the Documentation and Application Libraries?	7

Chapter 2: Using the Material Library

Working with Materials	12
The Material Browser Window	12
The Add Material Window	16
Materials	19
The Settings Window for Material	20
Property Groups	26
Material Link	29
Switch for Materials.	29
Material Properties	31
Viewing Material Property Information	31
Functions Default Values in the Material Library	32
Available Material Library Material Properties	33
Checking the Validity of Properties in the Material Library	34
Other Material Properties Reference	39
About Model Inputs.	39
About the Output Material Properties.	41
Acoustics Material Properties	43
Electrochemistry Material Properties	44
Electromagnetic Models	45
Equilibrium Discharge	47
Gas Models	47
Piezoelectric Models	48

Piezoresistive Models	48
Semiconductors Material Properties	49
Solid Mechanics Material Properties.	54
Solid Mechanics Material Properties: Nonlinear Structural Materials Module	56
Solid Mechanics Material Properties: Fatigue Module	57
Solid Mechanics Material Properties: Geomechanics Material Model	59
Using Functions	61
Adding a Function to the Material	61
Defining an Analytic Function	62

Introduction

Welcome to the Material Library, an add-on product that provides predefined material data, primarily as piecewise polynomial functions of temperature. The Material Library contains more than 20,000 property functions; these functions specify various material properties of over 2500 materials.

The Material Library is ideal for multiphysics couplings such as electrical-thermal analysis and structural-thermal analysis because most of the properties are available as functions of temperature.

The Material Library Environment

When working with the Material Library, it is the same as working with any other material database. Below are descriptions about the predefined material databases, the Material Library folders, and the windows and pages you work in to add any material to your model.



See [Materials](#) in the *COMSOL Multiphysics Reference Manual* for an overview of working with material properties, material databases, and the Material Browser.

About the Material Library

The Material Library stores the material data in folders. A search engine on the **Material Browser** makes it easy to find materials to add to models — you can search by name, UNS number, or DIN number.

The following is some basic information about the available material properties contained in the Material Library.

- The Material Library incorporates mechanical, thermal, and electrical properties primarily for solid materials.
- The material properties are described as a function of some variable, typically temperature, and focus on elastic and thermal properties.
- Where applicable, data is given for a material's solid, liquid, and vapor phases. A material can also contain data for multiple orientations or variations.
- The properties are analytic functions over a given interval of the argument.
- Smoothing is used to interpolate the values of the properties between different intervals. You can choose the smoothing settings in order to obtain continuous first and second derivatives of the property functions.
- Materials can be copied to a *User-Defined Library* where you can add and edit properties. You can also plot and inspect the definition of a function.
- The material property data in the Material Library is based on the Material Property Database (MPDB) from JAHM Software, Inc.
- For all properties contained in the Material Library, you can view the literature reference, notes, and reference temperature (where applicable) by first selecting a

material property and then on the **Material Browser**, under **Properties**, click a specific property. Then information, when available, displays under **Property reference**.



- [Working with Materials](#)
- [The Material Browser Window](#)
- [The Add Material Window](#)

Where Do I Access the Documentation and Application Libraries?

A number of internet resources have more information about COMSOL, including licensing and technical information. The electronic documentation, topic-based (or context-based) help, and the application libraries are all accessed through the COMSOL Desktop.




If you are reading the documentation as a PDF file on your computer, the [blue links](#) do not work to open an application or content referenced in a different guide. However, if you are using the Help system in COMSOL Multiphysics, these links work to open other modules (as long as you have a license), application examples, and documentation sets.



THE DOCUMENTATION AND ONLINE HELP


The *COMSOL Multiphysics Reference Manual* describes the core physics interfaces and functionality included with the COMSOL Multiphysics license. This book also has instructions about how to use COMSOL Multiphysics and how to access the electronic Documentation and Help content.

Opening Topic-Based Help


The Help window is useful as it is connected to many of the features on the GUI. To learn more about a node in the Model Builder, or a window on the Desktop, click to highlight a node or window, then press F1 to open the Help window, which then


displays information about that feature (or click a node in the Model Builder followed by the **Help** button (). This is called *topic-based* (or *context*) *help*.

Win	<p>To open the Help window:</p> <ul style="list-style-type: none">• In the Model Builder, Application Builder, or Physics Builder click a node or window and then press F1.• On any toolbar (for example, Home, Definitions, or Geometry), hover the mouse over a button (for example, Add Physics or Build All) and then press F1.• From the File menu, click Help ().• In the upper-right corner of the COMSOL Desktop, click the Help () button.
-----	--

Mac	<p>To open the Help window:</p> <ul style="list-style-type: none">• In the Model Builder or Physics Builder click a node or window and then press F1.• On the main toolbar, click the Help () button.• From the main menu, select Help>Help.
Linux	

Opening the Documentation Window

Win	<p>To open the Documentation window:</p> <ul style="list-style-type: none">• Press Ctrl+F1.• From the File menu select Help>Documentation ().
-----	---

Mac	<p>To open the Documentation window:</p> <ul style="list-style-type: none">• Press Ctrl+F1.• On the main toolbar, click the Documentation () button.• From the main menu, select Help>Documentation.
Linux	

THE APPLICATION LIBRARIES WINDOW

Each application includes documentation with the theoretical background and step-by-step instructions to create a model application. The applications are available in COMSOL as MPH-files that you can open for further investigation. You can use the step-by-step instructions and the actual applications as a template for your own modeling and applications. In most models, SI units are used to describe the relevant properties, parameters, and dimensions in most examples, but other unit systems are available.

Once the Application Libraries window is opened, you can search by name or browse under a module folder name. Click to view a summary of the application and its properties, including options to open it or a PDF document.





[The Application Libraries Window](#) in the *COMSOL Multiphysics Reference Manual*.

Opening the Application Libraries Window

To open the **Application Libraries** window ():




- From the **Home** toolbar, **Windows** menu, click () **Applications Libraries**.
- From the **File** menu select **Application Libraries**.

To include the latest versions of model examples, from the **File>Help** menu, select () **Update COMSOL Application Library**.



Select **Application Libraries** from the main **File>** or **Windows>** menus.



To include the latest versions of model examples, from the **Help** menu select () **Update COMSOL Application Library**.

CONTACTING COMSOL BY EMAIL

For general product information, contact COMSOL at info@comsol.com.

To receive technical support from COMSOL for the COMSOL products, please contact your local COMSOL representative or send your questions to

support@comsol.com. An automatic notification and a case number are sent to you by email.

COMSOL ONLINE RESOURCES


COMSOL website	www.comsol.com
Contact COMSOL	www.comsol.com/contact
Support Center	www.comsol.com/support
Product Download	www.comsol.com/product-download
Product Updates	www.comsol.com/support/updates
COMSOL Blog	www.comsol.com/blogs
Discussion Forum	www.comsol.com/community
Events	www.comsol.com/events
COMSOL Video Gallery	www.comsol.com/video
Support Knowledge Base	www.comsol.com/support/knowledgebase

Using the Material Library

This chapter describes the material properties in the Material Library and how to use them in your COMSOL Multiphysics® models. It also contains information about using functions to define material properties.

Working with Materials

The Material Browser Window

The **Material Browser** window () contains a number of databases with a broad collection of elastic, solid mechanics, electromagnetic, fluid, chemical, thermal, piezoelectric, and piezoresistive properties of materials. The number of material databases depends on which COMSOL products your license includes. Use the Material Browser to find predefined materials and add them to the Model Builder, or create a custom material library.

Win



To open the **Material Browser** :


- On the **Materials** toolbar, click **Browse Materials**.
 - From the **Home** toolbar, select **Windows>Material Browser**.
-

Mac

To open the **Material Browser** :

- On the **Model Toolbar**, click **Browse Materials**.
 - Select **Windows>Material Browser**.
-

The **Material Browser** is similar to [The Add Material Window](#) but it includes detailed property information about each material. From this window you can also create a new material library and import a material library. See [Adding Materials to a Component](#) for information about adding materials to your model's components (geometries). Click **Done** () to close the **Material Browser** and add the materials in the **Added to model** list to the model. Click **Cancel** () , press Escape, or click in the main toolbar to exit the **Material Browser** without adding any materials.

You can browse all of the available material databases or search for specific materials. There is also a  **Recent Materials** folder where you find the most recently used materials. **Search** a specific material by name (or, for the Material Library product, by UNS number or DIN number, which are listed in the Material Browser when available).

When browsing the material databases, in particular the **Material Library**, some materials include additional information — UNS number, DIN number, and composition.

As in [Figure 2-1](#), the following information is included in the window to the right of the material tree. Navigate in the material tree and click a material to display the information.



Material availability is based on the type of COMSOL Multiphysics license. For example, if you have the MEMS Module, you have the **Built-In, Liquids and Gases**, **MEMS**, and **Piezoelectric** material libraries.

PROPERTIES



While browsing the databases, predefined material properties for the selected material are listed in a table in the columns **Property**, **Expression**, **Unit**, and the **Property group** to which the material property belongs. If **Property group** is empty, the material property is a **Basic** property.

Under **Property reference**, for the materials in the Material Library product, reference information about a material's properties appears when you click a property above.

INPUTS

For some materials, predefined function inputs are listed in a table in the columns **Input**, **Variable**, and **Unit**. Inputs appear for material properties defined using functions that require the input. Typical inputs are temperature and pressure, for temperature- and pressure-dependent material properties, respectively.

CREATE A NEW MATERIAL LIBRARY OR IMPORT A MATERIAL LIBRARY

Click the **New Material Library** button () to open the **New Material Library** dialog box. You can also right-click a material and select **Add to New Library** () to create a new material library and add that material to the new library. Go to [Creating a New Material Library and Adding Materials](#) in the *COMSOL Multiphysics Reference Manual*.

Click the **Import Material Library** button () to open the **Choose Material Library** dialog box. Go to [Importing a Material Library](#) in the *COMSOL Multiphysics Reference Manual*.

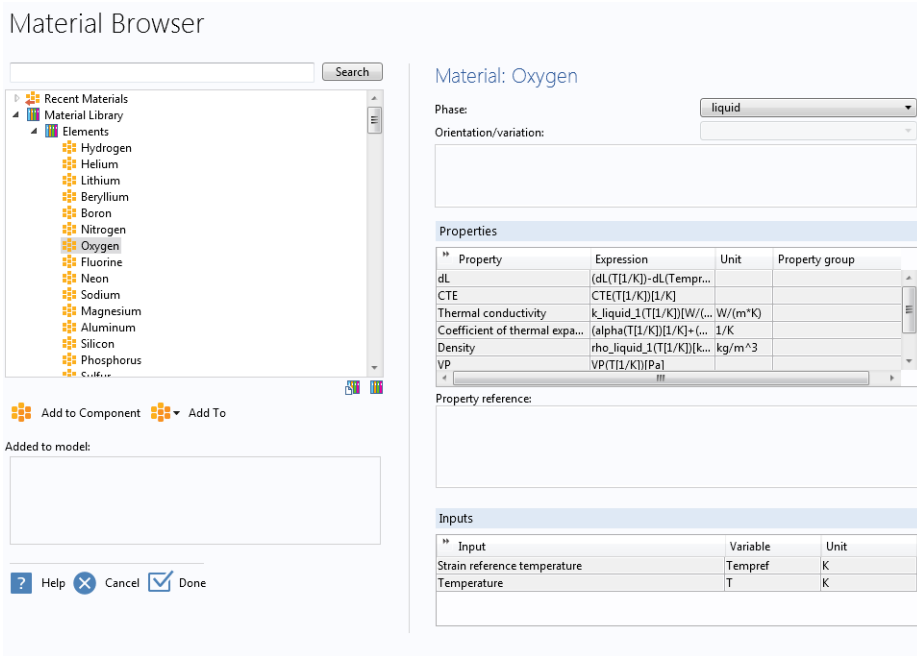


Figure 2-1: The Material Browser details a material's properties after selection. In this example, the properties of Oxygen are listed to the right of the Material Browser folders.

MATERIAL LIBRARY FOLDERS

TABLE 2-1: MATERIAL LIBRARY FOLDERS

FOLDER
Elements
Iron Alloys
Nickel Alloys
Aluminum Alloys
Copper Alloys
Magnesium Alloys
Titanium Alloys
Simple Oxides
Complex Oxides/Silicates
Carbides
Cermets
Tool Steels
Carbons
Thermal Insulators
Intermetallics and TBC
Refractory Metal Alloys
Nylons and Polyamides
Polyethers and Polyesters
Acetal Resins
PVDF (poly(vinylidene fluoride))
EVA (ethylene-vinyl acetate)
Miscellaneous Polymers
Polymer Composites
Elastomers
Epoxies
Minerals, Rocks, and Soils
Woods
Polypropylenes
PET Compounds
Controlled Expansion Alloys

TABLE 2-1: MATERIAL LIBRARY FOLDERS

FOLDER
Thermocouple Alloys
Semiconductors and Optical Materials
Organics and Hydrocarbons
Other Materials
Solders, Low Melting, and Dental
Cobalt Alloys
Resistance Alloys
Magnetic Alloys
Metal Matrix Composites
Ceramic Matrix Composites
Salts
Fuel Cell, Battery, and Electro-ceramics
Silicides
Borides
Glasses and Metallic Glasses
Nitrides and Beryllides
Cast Irons
Mold Materials

The Add Material Window

The **Add Material** window is similar to [The Material Browser Window](#). It has the same material libraries available but does not include the detailed properties about each material. The number of material libraries depends on which COMSOL Multiphysics products your license includes. This window is a quick way to add materials to models.

To open the **Add Material** window :

- From the **Materials** toolbar, click **Add Material**.
- Right-click the **Materials** node () and select **Add Material from Library**.

As in [Figure 2-2](#) you can browse all the available material databases or search for specific materials. There is also a **Recent Materials** folder where you find the most recently used materials. **Search** a specific material by name (or, for the Material Library product, by UNS number or DIN number).

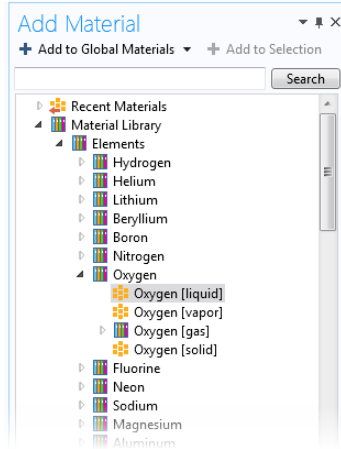


Figure 2-2: The Add Material window. In this example, the liquid phase of Oxygen is selected and can be added to the Material node in the Model Builder.

ADDING MATERIALS TO A COMPONENT

You can add materials to Component nodes using either the **Add Material** or **Material Browser** windows. In either window, use the **Search** field to find materials by name, UNS number, or DIN number. Or click any of the folders and subfolders to locate and add a specific material.

For example, click the arrow to the left of **Elements** to expand that folder, and then click **Oxygen**.





In the **Add Material** window, all the materials are listed with a description of the phase and orientation/type next to the primary name (for example, **Oxygen [liquid]**, **Oxygen [vapor]**). This is different in the **Material Browser**, where you select these options from the **Phase** or **Orientation/variation** lists.

Using the Add Material Window


- 1 Open the **Add Material** window (see [The Add Material Window](#)).
- 2 In the **Add Material** window, select a material by phase (liquid, vapor, gas, or solid) and orientation/variation, when available.

- 3 Click the **Add to Component** or **Add to Selection** buttons, or right-click the material and select the same options from the context menu. If there is more than one Component in the model tree, add the material to the applicable geometry.
 - Click the **Add to Component** button to add the material to the active component in the **Model Builder** and then make it an active material in the domains (or other geometric entities) where it is selected. You can also click the menu button to the right of **Add to Component** and select **Global Materials** to add it under the global **Materials** node, select any of the components in the model to add it to its **Materials** node, or select **Add to Switch 1**, for example, to add it under a **Switch** node for materials under the global **Materials** node. Right-click the **Material** node to rename it, for example, using the name of the material it represents.
 - For **Add to Selection**, the material is added to the geometric entity chosen in the Graphics window and a new node is added to the Model Builder. This is a method called preselection and once the second node is added, the first node displays **(overridden)** in the selection list.

Using the Material Browser Window

- 1 Open the **Material Browser** window (see [The Material Browser Window](#)).
- 2 In the **Material Browser**, select options from the **Phase** and **Orientation/variation** lists, when available (only included for some materials in the Material Library product). In this window you can review the material **Properties** and **Input** sections. See [Viewing Material Property Information](#) for information about viewing information about, for example, references for a specific material property.
- 3 Click the **Add to Component** button () under the list of materials to add the selected material to the current model component. Alternatively, click the **Add To** button () to add the material to any available model component or to an existing or new user-defined material library. You can also right-click the selected material node to add that material to a model component or user-defined material library. Materials that you have selected to add to any of the model components appear in the **Added to model** list.
- 4 Click **Done** () to add the materials to the model tree in the **Model Builder** and close the **Material Browser**. If it is the first material in that model component, the material in the **Model Builder** becomes the default material; otherwise, the material is initially not used anywhere but becomes the active material in the domains (or other geometric entities) that you pick to add to that material's selection list.

Materials

Use the nodes under **Materials** () to add predefined or user-defined materials, to specify material properties using model inputs, functions, values, and expressions as needed, or to create a custom material library. Also see [Material Link](#), [Switch for Materials](#), [Working with External Materials](#), and [About the Material Databases](#) in the *COMSOL Multiphysics Reference Manual*.


MATERIAL OVERVIEW

This section provides an overview of the materials in the Component node and where they are used.

The **Material** column lists the current materials in the Component using the materials' node labels from the model tree according to the settings defined in [Displaying Node Names, Tags, and Types in the Model Builder](#).

The **Selection** column lists the geometric entities selected for the material (the domains, boundaries, or edges where the material is defined).

ERRORS RELATING TO THE MATERIAL NODES

If a material property in a physics interface takes its value from a material and no material is defined for the same geometric selection, a stop sign () displays in the leftmost column and the **Material** column contains **Entities needing a material**. The **Selection** column contains the geometric entities in which a material definition is missing. The Materials node also indicates when there is a material error (see [Figure 2-3](#)). For example, if some property is deleted but needed in a part of the geometry, then the icon indicates where the error is located.

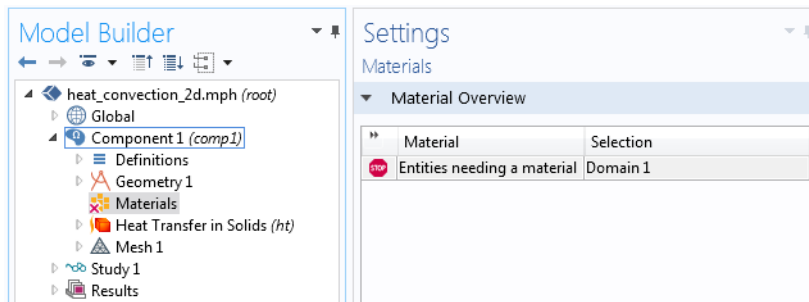



Figure 2-3: An example of a Materials node error.

The Settings Window for Material

The **Settings** window for **Material** () summarizes the predefined or user-defined material properties for a material. This is where you can add or change material properties to fit your model and assign the material to all types of geometric entities: domains (most common), boundaries, edges (3D models only), or points. Also see [Material Link](#) and [Switch for Materials](#).

After adding a material (see [The Add Material Window](#) and [The Material Browser Window](#)), click the Material node (for example, **Material 1** or **Copper**) in the **Model Builder**. The **Settings** window for **Material** opens.

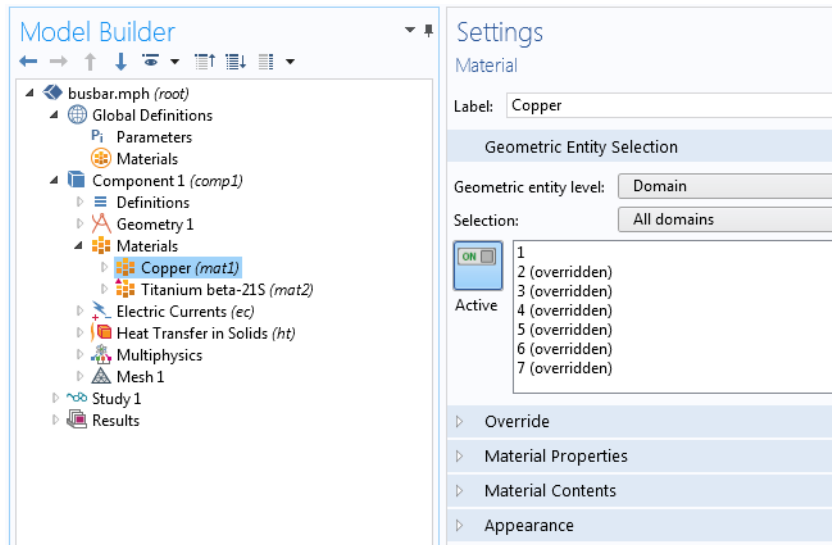


Figure 2-4: Click the Copper node to open the Settings window for Material for the node.

GEOMETRIC ENTITY SELECTION

Assign the material to some or all entities on a specific **Geometric entity level** — **Domain**, **Boundary**, **Edge** (3D only), or **Point** — on the geometry in the **Graphics** window (the geometry in the model).



By default, the first material in the Component is active in all domains (or all boundaries or edges if the Component only contains surfaces or edges). By assigning other materials to some or all domains, the first material is overridden and remains active only in domains where no other material, added below it in the **Materials** branch, is active.



If the Component contains features on different geometric entity levels, such as solid mechanics in domains coupled to beams on edges, and the features use the same material, you need to add two Material nodes with the same material, one defined in the domains, and the other defined on the edges.

OVERRIDE

This section shows if the material, in some or all parts of the geometry where it is active, is overridden by another material added underneath it in the Materials branch, or if it overrides another material above it.

The **Overridden by** list shows the names of the materials that override this material. The **Selection** list in the **Geometric Entity** section displays (**overridden**) for the geometric entities in which this material is overridden.

The **Overrides** list shows the names of the materials that this material overrides.



- [Physics Exclusive and Contributing Node Types](#)
 - [Physics and Variables Selection](#)
 - [Physics Node Status](#)
-

MATERIAL PROPERTIES

You can add material properties to the Component if they are not already included. To do so, browse the available material property categories (**Basic Properties**, **Acoustics**, and so on), and select a material property or a collection of material properties in one of the property groups or material models that appear under the main level of material


property categories. Right-click the material property or property group and select **Add to Material**, or click the **Add to material** button (**+**) to add the material property or group of properties to the material.



Review the properties listed in the **Material Contents** table before adding new material properties.

For example, under **Acoustics>Viscous Model** select **Bulk viscosity (muB)** and right-click to **Add to Material** or click the **Add** button (**+**). If you add a material model like the **Viscous Model** with more than one property, all of its material properties are added to the **Material Contents**. In this example, a **Viscous model** node is added to the **Model Builder** and its associated properties are added to the **Material Contents** table.



To delete a property group, right-click the property group node (in the **Model Builder**) and select **Delete** (). The **Basic** property group cannot be deleted.

A Note About Adding Basic Material Properties

Material properties can be added to the **Basic** group or to any **User-Defined Property Group** from two locations—the **Settings** windows for **Material** and **Property Group**.

- When material properties are added from the **Basic** node's or a user-defined group node's **Settings** window for **Property Group**, they are listed under **Output Properties and Model Inputs** in that **Settings** window.
- When material properties are added from the **Settings** window for **Material**, the available material properties are listed under **Material Properties** and are added to the list under **Material Contents** with the property group listed. The list under **Material Contents** also contains material properties added from a subnode with a **Settings** window for **Property Group**.

Material Type




The **Material type** setting decides how materials behave and how material properties are interpreted when the mesh is deformed. Select **Solid** for materials whose properties change as functions of material strain, material orientation, and other variables evaluated in a material reference configuration (material frame). Select **Non-solid** for materials whose properties are defined only as functions of the current local state at each point in the spatial frame and for which no unique material reference configuration can be defined.

Simply put, **Solid** materials associate material properties with specific pieces of the material, and the properties follow the material as it moves around. In particular, a solid material may be inherently anisotropic, meaning that its axes rotate together with the material. The **Non-solid** choice, in contrast, applies typically to liquids and gases whose properties are associated with fixed points in space and insensitive to local rotation of the material. Such materials are inherently isotropic when studied in isolation, but may exhibit anisotropy induced by external fields. In practice, this means that any anisotropic tensor properties in a Non-solid material must be functions of some external vector field.

MATERIAL CONTENTS

This section lists all of the material properties that are defined for the material or required by the physics in the model. The table lists the **Property**, **Name**, **Value**, and **Unit** for the material property as well as the **Property group** to which the material property belongs. The **Property group** corresponds to the subnodes in the **Model Builder** with the same name. If required, edit the values or expression for the property's **Value**.

The left column provides visual cues about the status of each property:

- A stop sign () indicates that an entry in the **Value** column is required. It means that the material property is required by a physics feature in the model but is undefined. When you enter a value in the **Value** column, the material property is added to its property group.
- A warning sign () indicates that the material property has been added to the material but is still undefined. An entry is only required if the material property is to be used in the model.
- A green check mark () indicates that the property has a **Value** and is currently being used in the physics of the model.
- Properties with no indication in the left column are defined but not currently used by any physics in the model.

APPEARANCE

The settings in this section make it possible to control or change the default appearance of a material in the Graphics window when working in the materials or physics parts of the model tree.



In 3D components, the material is rendered including color and texture when **Scene Light** is active. In 2D models and in 3D components, when **Scene Light** is turned off, only a change of color is visible.

The **Family** list provides quick settings approximating the appearance of a number of common materials — **Air, Aluminum, Brick, Concrete, Copper, Gold, Iron, Lead, Magnesium, Plastic, Steel, Titanium,** and **Water**. Select **Custom** to make further adjustments of the specific settings for colors, texture, reflectance, and so on. The default custom settings are inherited from the material selected last from the **Family** list.



The texture and reflectance properties only take effect when the preference settings for the visualization are optimized for quality. When optimized for performance, the appearance includes color only. To set this, open [The Preferences Dialog Box](#), click **Graphics and Plot Windows**, and click to select the **Show material color and texture** check box to display material texture and color.

Specular Color, Diffuse Color, and Ambient Color

For each of these properties, click the **Color** button to assign a **Custom** specular color or select a standard color from the list: **Black, Blue, Cyan, Gray, Green, Magenta, Red, White,** or **Yellow**.

The combination of **Specular color, Diffuse color,** and **Ambient color** gives a 3D object its overall color:

- **Specular color** is the color of the light of a specular reflection (specular reflection is the type of reflection that is characteristic of light reflected from a shiny surface).
- **Diffuse color** represents the true color of an object; it is perceived as the color of the object itself rather than a reflection of the light. The diffuse color gets darker as the surface points away from the light (shading). As with Ambient color, if there is a

texture, this is multiplied by the colors in the texture, otherwise it is as if it has a white texture.

- **Ambient color** is the color of all the light that surrounds an object; it is the color seen when an object is in low light. This color is what the object reflects when illuminated by ambient light rather than direct light. Ambient color creates the effect of having light hit the object equally from all directions. As with Diffuse color, if there is a texture, this is multiplied by the colors in the texture; otherwise, it is as if it has a white texture.



For examples of specular, diffuse, and ambient light, which are related to these definitions, see [About the 3D View Light Sources and Attributes](#) in the *COMSOL Multiphysics Reference Manual*.

Noise

The **Noise** check box is selected by default, with the default **Normal vector noise scale** and **Normal vector noise frequency** taken from the material. Enter other values as needed, or click to clear the **Noise** check box.

- Noise is a texture that disturbs the normals when calculating lighting on the surface. This causes the surface to look rough and textured.
- Normal vector noise scale is the power of the noise texture. A high value creates a stronger texture of the surface. A value between 0–1 is suitable.
- Normal vector noise frequency is the size of the noise disturbances. A small value creates smaller features on the texture. A value between 0–10 is suitable.

Diffuse and Ambient Color Opacity

The default **Diffuse and ambient color opacity** is 1.

Lighting Model

The default **Lighting model** — **Blinn-Phong** or **Cook-Torrance** — is based on the material. Select **Simple** instead as needed.

The different lighting models provide a set of techniques used to calculate the reflection of light from surfaces to create the appropriate shading. For example, a specular highlight is the bright spot of light that appears on shiny objects when illuminated. Specular highlights are important in 3D computer graphics because they provide a strong visual cue for the shape of an object and its location with respect to light sources in the scene.

For **Blinn-Phong**, the default **Specular exponent** is 64. The specular exponent determines the size of the specular highlight. Typical values for this property range from 1 to 500, with normal objects having values in the range 5 to 20. This model is particularly useful for representing shiny materials.

For **Cook-Torrance**, the default **Reflectance at normal incidence** and **Surface roughness** are taken from the material. The Cook-Torrance lighting model accounts for wavelength and color shifting and is a general model for rough surfaces. It is targeted at metals and plastics, although it can also represent many other materials.

- Reflectance at normal incidence is the amount of incoming light (0–1) from the normal direction (of the surface) that is reflected.
- Surface roughness is a value that describes microreflectance on the surface. Higher values create a rougher look of the surface with fewer highlights. A value from 0–1 is suitable.

Property Groups

The **Settings** window for **Property Group** is where output properties and the model inputs are added, local properties are defined, and expressions for material properties are entered in a specific property group such as **Basic**. The property groups are subnodes to a material node. The **Settings** window for **Property Group** is displayed when you click the property group node (for example, **Basic**) under the material node (typically with the material's name— **Aluminum**, for example) in the **Model Builder**.

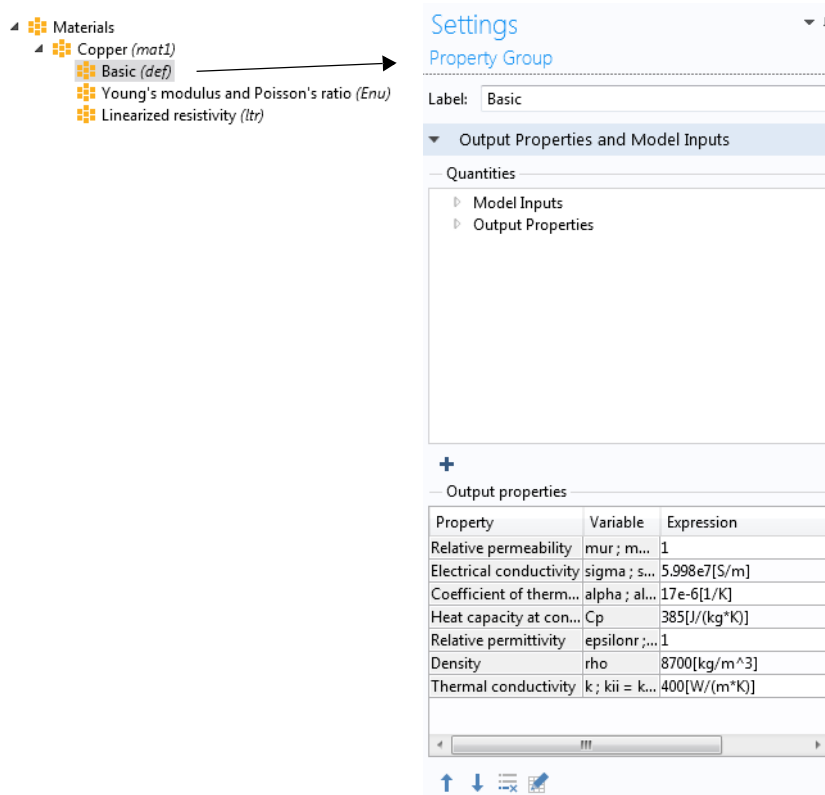


Figure 2-5: An example of a Basic Settings window for Property Group.

OUTPUT PROPERTIES AND MODEL INPUTS


The predefined material properties in the property group appear in the **Output properties** table. Under **Quantities** you can add additional material properties to the **Output properties** list or add model inputs to the **Model inputs** list.






Output Properties under **Quantities** is only available from the **Basic** material properties and with user-defined property groups.




The model inputs are physical quantities, such as temperature, that are used as inputs in the expressions that define the output properties (for example, to describe a temperature-dependent physical quantity). For example, adding **Temperature** as a

model input with the variable name T makes it possible to use an expression for the heat capacity at constant pressure C_p , such as $300[\text{J}/(\text{kg}\cdot\text{K})]*\text{T}[1/\text{K}]$, which works regardless of the name of the actual dependent variable for temperature in the model that uses the temperature-dependent material. Without the model input, the expression above only works with a temperature variable called T.

If required, edit the expressions in the **Output properties** list's **Expression** column. Edit directly in the table or by clicking the **Edit** button () , which opens a dialog box for easier specification of orthotropic and anisotropic material properties (tensors). Select **Isotropic**, **Diagonal**, **Symmetric**, or **Anisotropic** when entering the data in the material property's dialog box. In the **Expression** column, use a syntax with curly braces such as {k11, k21, k31, k12, k22, k32, k13, k23, k33} to enter anisotropic material properties for a 3-by-3 tensor k_{ij} in the order $k_{11}, k_{21}, k_{31}, k_{12}, k_{22}, k_{32}, k_{13}, k_{23}$, and k_{33} . 1, 2, and 3 represent the first, second, and third direction in the active coordinate system. In many cases (for example, when entering the elasticity matrix for structural mechanics), the matrix must for physical reasons be symmetric. The upper diagonal part of the matrix you enter will then be mirrored when forming the actual constitutive matrix, and the lower diagonal part is ignored.

Use the **Move up** () , **Move down** () , and **Delete** () buttons to organize the tables as needed.


LOCAL PROPERTIES

Here you can enter a user-defined **Property** and its corresponding **Expression** and organize the table as needed. These local properties are useful for parameterizing functions that describe material properties if they contain inputs other than those that are model inputs (such as temperature and pressure). For example, a local property can be a reference value at a certain temperature. Use the **Move up** () , **Move down** () , and **Delete** () buttons to organize the tables as needed.



You can use local properties to parameterize a material (for example, to create a generic “template” material for a particular symmetry class of anisotropic materials). You can then adjust the local property values for each instance of the material.



About Automatic Adding of Property Groups to a Material

Material property groups are automatically added to the material node in the **Model Builder**. You can also add additional predefined property groups or create a **User-Defined Property Group** (on the **Materials** toolbar, click **User-defined Property Group** () or

right-click the **Material** node). The available properties are collected in property groups according to the physical context.

Each property group has a **Settings** window for **Property Group**. When a **Model Builder** node is clicked (for example, **Basic**), the **Settings** window for **Property Group** displays specific information about that property group. The physical properties for all property groups are summarized in a **Material Contents** table on the **Settings** window for **Material**.

Material Link


Add a **Material Link** node () under a **Materials** node in a model component to add a link to a material that you have added under the global **Materials** node () and use it as a material in that component's geometry. The **Material Link** node's **Settings** window is similar to the **Settings** window for a material node (see [The Settings Window for Material](#)), with the exception that there is no **Material Properties** section. Instead, it includes the following section:

LINK SETTINGS

From the **Material** list, select the global material that you want to link to:

- Any material node, to use that material in the component.
- Any **Switch** node, if you want to run a material sweep.
- **None**, to not link to any global material.

Switch for Materials

Use the **Switch** node () to switch between materials during a solver sweep. You add the materials as subnodes under the **Switch** node. Right-click to add a **Blank Material** or select **Add Material from Library** to select materials from the libraries in the **Add Material** window. The switch for materials acts essentially as a switch statement in a programming language; that is, it dynamically selects one of its underlying branches depending on a parameter that can be controlled from the solvers, using a [Material Sweep](#) study.




The **Switch** node's **Settings** window contains the following sections:

MATERIAL CONTENTS

This section lists all of the material properties that are defined for the material or required by the physics in the model on domains where the **Switch** node is the active domain material. The table lists the **Property**, **Name**, **Value**, and **Unit** for the material

property as well as the **Property group** to which the material property belongs. The **Property group** corresponds to the subnodes in the **Model Builder** with the same name. If required, edit the values or expression for the property's **Value**.

The list includes properties that are defined by any of the materials under the **Switch** node. The left column provides visual cues about the status of each property:

- A stop sign () indicates that some subnode is missing a required **Value**. That is, the material property is required by a physics feature in the model but is not defined for all switch cases.
- A warning sign () indicates that the material property has been added to some material subnode but is still undefined.
- A green check mark () indicates that the property has a **Value** in all subnodes and is currently being used in the physics of the model.

APPEARANCE

The settings in this section make it possible to control or change the default appearance of the material switch in the Graphics window when working in the materials or physics parts of the model tree. See [The Settings Window for Material](#) for more information.

Material Properties

The materials included in the Material Library are defined by unique material properties, each available as a function of temperature or another appropriate argument. [Table 2-3](#) lists most of the material properties in the Material Library.



It is important to check the validity of the material property function under the conditions that you are interested in investigating. See [Checking the Validity of Properties in the Material Library](#).



Individual material properties contained in the Material Library are based on the Material Property Database (MPDB) from JAHM Software, Inc.

Viewing Material Property Information

For all properties contained in the Material Library, you can view applicable literature references, notes, and reference temperatures in the Material Browser's **Property reference** section.

- 1 Open the Material Browser.
- 2 Under **Material Library**, click to select a material. For example, **Nitrogen**. The information about this material displays on the right-hand side of the window.
- 3 Under **Properties** in the table, click a **Property** to see if it has a **Property reference**. See [Figure 2-6](#).

Properties

Property	Expression	Unit	Property
dL	(dL(T[1/K])-dL(Tempref		
CTE	CTE(T[1/K])[1/K]		
Thermal conductivity	k_liquid_2(T[1/K])[W/(m	W/(m*K)	
Coefficient of thermal expans	(alpha(T[1/K])[1/K]+(Tε	1/K	
Density	rho_liquid_1(T[1/K])[kg.	kg/m^3	
VP	VP_liquid_2(T[1/K])[Pa]		

Property reference:

Density

Reference: R.B. Scott, Cryogenic Engineering, Pub. D. van Nostrand Comp (1962)

Note: saturated liquid; interpolated between 63.1K and 64.8K

Inputs

Figure 2-6: An example of where you can find the property reference information for a material. In this example, Density has information available in the Property reference section. You can hover over the section and drag to expand it if required.

Functions Default Values in the Material Library

The material property expressions stored in the Material Library contain calls to the corresponding material property functions using input variables (arguments) as in Table 2-2. The default variable name can be changed in the property expressions to match actual variable names in a model. When a material property is used by a physics feature set to retrieve the property **From material** this is not necessary. In that case, the actual variable are retrieved from the **Model Inputs** section of the same feature and automatically substituted into the material property expression.

If you, on the other hand, want to access material properties from a material explicitly, you need to make sure that the function argument variables used in the property expressions exist and can be evaluated in the model. For example, if the variable T2 is

used for temperature, change the argument of the property functions from T to T2 in the expressions.



The argument does not have to be a variable defined by the model (such as dependent variables) — it can also be a user-defined constant or variable. In general, COMSOL Multiphysics tries to find the best match for evaluating function arguments when material properties are accessed explicitly.

TABLE 2-2: DEFAULT FUNCTION ARGUMENTS IN MATERIAL PROPERTY EXPRESSIONS

ARGUMENT	DEFAULT VARIABLE	UNIT
Temperature	T	K
Time	t	h
Effective plastic strain	epe	-
Number of cycles	n	-
Norm of H field	normH_emnc	A/m
Norm of B field	normB_emqa	T

Available Material Library Material Properties

The following table lists the material properties in the Material Library:

TABLE 2-3: MATERIAL LIBRARY: AVAILABLE MATERIAL PROPERTIES

PROPERTY	SHORT NAME	ARGUMENT	SI UNIT
Coefficient of thermal expansion	alpha	Temperature	1/K
Creep strength	CS	Time	Pa
Density	rho	Temperature	kg/m ³
Dynamic viscosity	eta	Temperature	Pa·s
Electrical conductivity	sigma	Temperature	S/m
Resistivity	res	Temperature	ohm·m
Elongation	elong	Temperature	-
Fatigue E-N curve	FEN	Number of cycles	Pa
Fatigue S-N curve	FSN	Number of cycles	Pa
Heat capacity	C	Temperature	J/(kg·K)
Bulk modulus	K	Temperature	Pa
Shear modulus	G	Temperature	Pa

TABLE 2-3: MATERIAL LIBRARY: AVAILABLE MATERIAL PROPERTIES

PROPERTY	SHORT NAME	ARGUMENT	SI UNIT
Instantaneous coefficient of thermal expansion	CTE	Temperature	1/K
Linear expansion	dL	Temperature	-
Molar heat capacity	HC	Temperature	J/(mol·K)
Nonlinear magnetic flux density, norm	normB	Norm of H field	T
Nonlinear magnetic field, norm	normH	Norm of B field	A/m
Normal total emissivity	nemiss	Temperature	-
Poisson's ratio	nu	Temperature	-
Relative permeability	mur	Norm of H field	-
Stress rupture	SR	Time	Pa
Surface emissivity	epsilon	Temperature	-
Tensile strength	Syt	Temperature	Pa
Thermal conductivity	k	Temperature	W/(m·K)
Thermal diffusivity	TD	Temperature	m ² /s
True stress–true strain curve in tension	Syfunc	Strain	Pa
True stress–true strain curve in compression	Syfunccomp	Strain	Pa
Vapor pressure	VP	Temperature	Pa
Yield strength level	Sys	Temperature	Pa
Young's modulus	E	Temperature	Pa

Checking the Validity of Properties in the Material Library

The following section lists points to consider about the definition, error estimate, and conditions for some of the Material Library properties listed in [Table 2-3](#).



The property functions listed below have a literature reference where you can find more details about the conditions and validity range for that specific property.

COEFFICIENT OF THERMAL EXPANSION

- The coefficient is defined as $(\Delta L/L)_T/(T - T_{\text{ref}})$ and in most cases, it is calculated from the $\Delta L/L$ values.
- The error is expected to be in the range of 10–15%, but it might be higher near room temperature due to the small value of $T - T_{\text{ref}}$.

ELASTIC AND INITIAL SHEAR MODULUS

- The data accuracy is approximately 5–10%.
- For solder alloys the literature reports a wide spread of values. Data from several sources (when available) are evaluated, and representative values are given; the error is estimated to be 10–25%.
- For some polymers the flexural modulus is used as the elastic modulus, and it is typically within 10% of the elastic modulus.
- Typically, values measured with a strain gauge are approximately 10% lower than those measured with a dynamic technique.
- Values measured by a dynamic technique are preferred over those measured by strain gauge techniques.
- For cubic materials where the elastic and shear modulus are calculated from the elastic constants (C11, C12, and C44), the Material Library uses the average of the Reuss and Voigt equations (see R.F.S. Hearmon, *Advances in Physics*, vol. 5, 1956, p. 232).
- For isotropic solids (glasses), it uses methods from L.D. Landau and E.M. Lifshitz, *Theory of Elasticity*, Addison-Wesley, New York, 1966.

POISSON'S RATIO AND INITIAL BULK MODULUS

- Calculated from the elastic modulus and the shear modulus using standard relationships, and in this sense they are self-consistent and accurate.
- Data accuracy is approximately 10–20%. Because these are derived quantities the error can be significantly higher.
- The curves for these properties often show improbable shapes that are most likely due to their derived nature and are not believed to be real. If the elastic and shear modulus were determined in a self-consistent manner, the curves would likely be much better behaved. However, all of the data are presented “as is” from the original references and are self-consistent within the Material Library.

THERMAL CONDUCTIVITY

- Can be very sensitive to impurities, heat treatment, and mechanical worked state, especially at very low temperatures.
- The sensitivity is somewhat decreased above room temperature and decreases as the amount of alloying increases. Compare 4340-QT (quenched and tempered) and 4340-NT (annealed).

THERMAL DIFFUSIVITY

- For metals this property can be very sensitive to impurities, heat treatment, and mechanical worked state, especially at very low temperatures.
- This sensitivity is somewhat decreased above room temperature and decreases as the amount of alloying increases. To see an example of this, compare the data for elemental (high purity) Fe and Armco iron (commercial purity).

ELECTRIC RESISTIVITY

This property is very sensitive to impurities, heat treatment, and mechanical worked state, especially at very low temperatures.

ELECTRICAL CONDUCTIVITY

This property is very sensitive to impurities, heat treatment, and mechanical worked state, especially at very low temperatures.

SURFACE EMISSIVITY (ϵ_T)

This property is the measured emissivity over all wavelengths and 2π radians. This is the emissivity used in the Stefan-Boltzmann law.

NORMAL TOTAL EMISSIVITY ($\epsilon_{T,n}$)

- The measured emissivity is over all wavelengths at a direction normal to the surface. This is the most commonly reported value.
- For polished metal, this assumption is valid: $\epsilon_T/\epsilon_{T,n} = 1.15-1.20$.
- Both emissivities are sensitive to the surface condition (roughness and oxide thickness).

DENSITY (ρ)

- The density for solids is calculated from the room-temperature density and the linear expansion coefficient and is given by $\rho/(1 + \Delta L/L)^3$.
- The data for oxides, carbides, and nitrides depend on the material's porosity.
- For gases the ideal gas law is used.

TENSILE STRENGTH, YIELD STRENGTH LEVEL, AND ELONGATION



Most of the data for tensile strength, yield strength level, and elongation is from supplier product brochures. When using this data, remember it is only representative of the actual material properties.

- The variation with temperature is usually not smooth. Many of these materials are precipitation hardening alloys, and the temperature affects the aging processes in different ways at different temperatures.
- Unless otherwise stated, the data are for “short” times at the indicated temperatures and not for the equilibrium structure.
- These properties are very sensitive to the details of the processing and heat treatments. Comparison of data from different suppliers indicate that the spread in the published values is approximately 20% for materials with similar processing. The spread in the elongation data can be as high as 50–100%.

FATIGUE S-N CURVE

- Fatigue data is given as the maximum stress, σ_{\max} , as function of the number of cycles. The stress amplitude, maximum stress, and minimum stress are related through the stress ratio, R .

$$\sigma_a = \frac{(\sigma_{\max} - \sigma_{\min})}{2} \quad R = \frac{\sigma_{\max}}{\sigma_{\min}}$$

- The maximum stress, σ_{\max} , is given together with the stress ratio for all fatigue data. Then calculate the stress amplitude as:

$$\sigma_a = \frac{\sigma_{\max} \left(1 - \frac{1}{R}\right)}{2}$$

CREEP STRENGTH AND STRESS-RUPTURE CURVES

This property is very sensitive to the test atmosphere as well as the microstructure and heat treatment of the material.

POLYMERS AND POLYMER-BASED COMPOSITES

Properties of polymers and polymer-based composites are sensitive to moisture and processing conditions, and they can show time-dependence at higher temperatures.

The errors/uncertainties can be large compared to those of other materials. Keep these aspects in mind when using the properties of these materials.

GENERAL

The magnitude of the errors reported by authors for a given property is usually smaller by a factor of 2–3 than the error between different sources for the same data. This is especially true for materials such as ceramics.

Other Material Properties Reference

In addition to the specific properties included with the Material Library, the other material databases also contain predefined variables for various material properties that can be used when creating a model.

The material properties for the predefined materials are accessible from most physics interfaces. Using this information, either create a material property group or define a completely new material.

In the **Basic>Property Group** window, you can add **Output Properties** under the **Quantities** subsection. You can also add **Model Inputs** to, for example, create a temperature- dependent material property.

About Model Inputs

The following model inputs (which are scalar or vector-field physical quantities that appear as inputs in, for example, a temperature-dependent material property) can be

added to models from the **Property Group** window (vector fields have three components enclosed by curly braces).

TABLE 2-4: MODEL INPUTS

MODEL INPUT	NAME/VARIABLE
Absolute Pressure	p_A
Concentration	c
Current Density	$\mathbf{J} \{J_1, J_2, J_3\}$
Effective Plastic Strain	ϵ_{pe}
Electric Field	$\mathbf{E} \{E_1, E_2, E_3\}$
Frequency	f
Magnetic Field	$\mathbf{H} \{H_1, H_2, H_3\}$
Magnetic Flux Density	$\mathbf{B} \{B_1, B_2, B_3\}$
Number Density	n_d
Relative Humidity	ϕ
Strain Reference Temperature	T_{ref}
Stress Tensor	$\sigma \{\sigma_1, \sigma_2, \sigma_3\}$
Temperature	T
Velocity Field	$\mathbf{u} \{u_1, u_2, u_3\}$



Selection of Model Inputs is standard in most cases. Extra information is included in the documentation as applicable.

To define the absolute pressure for heat transfer, see the settings for the [Fluid](#) node in the *COMSOL Multiphysics Reference Manual*.

To define the absolute pressure for a Fluid Flow interface, see the settings for the [Fluid Properties](#) node (described for the Laminar Flow interface in the *COMSOL Multiphysics Reference Manual*).

If you have a license for a Nonisothermal Flow interface, see that documentation for further information.



[Model Inputs and Multiphysics Couplings](#) in the *COMSOL Multiphysics Reference Manual*

About the Output Material Properties



Some of these material groups are only used by physics interfaces in the add-on modules and detailed information is in the applicable documentation.

This section describes all available property groups and the material properties that they contain. These material properties can be added to models from two **Settings** windows: the **Material** window and its subnodes' **Property Group** windows.

The Basic group contains over 25 basic properties for use with all materials.



[Materials](#) in the *COMSOL Multiphysics Reference Manual*

BASIC MATERIAL PROPERTIES

These common material properties belong to the **Basic** property group.

- When this information is accessed from the **Basic>Property Group** window, it is listed under **Quantities>Output Properties** and **Variable** is listed in the table.
- When this information is accessed from the **Material** window, it is listed under **Material Properties>Basic Properties** and **Name** is listed in the table under **Material Contents**.

TABLE 2-5: BASIC MATERIAL PROPERTIES

PROPERTY	NAME/VARIABLE	SI UNIT
Absorption Coefficient	kappaR	1/m
Bulk Viscosity	muB	Pa·s
Characteristic Acoustic Impedance	Z	Pa·s/m
Coefficient of Thermal Expansion	alpha	1/K
Compressibility of Fluid	chif	1/Pa
Density	rho	kg/m ³
Diffusion Coefficient	D	m ² /s
Dynamic Viscosity	mu	Pa·s
Electrical Conductivity	sigma	S/m
Electron Mobility	mue	m ² /(Vs)

TABLE 2-5: BASIC MATERIAL PROPERTIES

PROPERTY	NAME/VARIABLE	SI UNIT
Heat Capacity at Constant Pressure	Cp	J/(kg·K)
Isotropic Structural Loss Factor	eta s	l
Mass Flux	Mf	kg/(m ² ·s)
Mean Molar Mass	Mn	kg/mol
Permeability	kappa	m ²
Poisson's Ratio	nu	l
Porosity	epsilon	l
Ratio of Specific Heats	gamma	l
Relative Permeability	mur	1
Relative Permittivity	epsilon _{nr}	1
Resistivity	res	Ω·m
Scattering Coefficient	sigma _S	l/m
Seebeck Coefficient	S	V/K
Speed of Sound	cp	m/s
Storage	S	l/Pa
Surface Emissivity	epsilon rad	l
Thermal Conductivity	k	W/(m·K)
Thermal Conductivity Supplement	b	l
Vapor Permeability	delta _p	s
Vapor Resistance Factor	mu _{vrf}	l
Water Content	w _c	kg/m ³
Young's Modulus	E	Pa



The coefficient of thermal expansion (CTE) and the resistivity temperature coefficient have the SI unit 1/K. COMSOL Multiphysics translates this into the Fahrenheit temperature unit using an offset. This translation means that you do not get the expected results.

Use caution when a model uses the coefficient of thermal expansion or the resistivity temperature coefficient and the unit system's temperature is not kelvin.

The rest of the material properties are grouped by application area:

- [Acoustics Material Properties](#)
- [Electrochemistry Material Properties](#)
- [Electromagnetic Models](#)
- [Equilibrium Discharge](#)
- [Gas Models](#)
- [Piezoelectric Models](#)
- [Piezoresistive Models](#)
- [Solid Mechanics Material Properties](#)
- [Solid Mechanics Material Properties: Nonlinear Structural Materials Module](#)
- [Solid Mechanics Material Properties: Fatigue Module](#)
- [Solid Mechanics Material Properties: Geomechanics Material Model](#)
- [Semiconductors Material Properties](#)

Acoustics Material Properties

Under Acoustics, you find the following acoustic material models with their associated material properties: a **Poroacoustics Model**, a **Thermoviscous Acoustics Model**, and a **Viscous Model**.

These material property groups (including their associated physical properties) can be added to models from the **Material** window. These property groups require the Acoustics Module.

TABLE 2-6: ACOUSTICS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
POROACOUSTICS MODEL		
Flow resistivity	Rf	Pa·s/m ²
Thermal characteristic length	Lth	m
Viscous characteristic length	Lv	m
Tortuosity factor	tau	l
THERMOVISCOUS ACOUSTICS MODEL		
Bulk viscosity	muB	Pa·s
Density	rho	kg/m ³
Dynamic viscosity	mu	Pa·s
Heat capacity at constant pressure	Cp	J/(kg·K)
Thermal conductivity	k	W/(m·K)
VISCOUS MODEL		
Bulk viscosity	muB	Pa·s

Electrochemistry Material Properties

These material property groups for electrochemistry (including their associated physical properties) can be added to models from the **Material** window. These property groups require the Batteries & Fuel Cells Module, Corrosion Module, or Electrodeposition Module.

TABLE 2-7: ELECTROCHEMISTRY MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
ELECTRODE POTENTIAL		
Equilibrium potential	Eeq	V
Reference concentration	cEqref	mol/m ³
Temperature derivative of equilibrium potential	dEqdT	V/K
ELECTROLYTE CONDUCTIVITY		
Electrolyte conductivity	sigmaI	S/m
ELECTROLYTE SALT CONCENTRATION		
Electrolyte salt concentration	cElsalt	mol/m ³
LINEARIZED RESISTIVITY		
	This material node defines the electric resistivity (and conductivity) as a linear function of temperature.	
Reference resistivity	rho0	Ω·m
Reference temperature	Tref	K
Resistivity temperature coefficient	alpha	1/K
OPERATIONAL ELECTRODE STATE-OF-CHARGE		
Maximum electrode state-of-charge	socmax	1
Minimum electrode state-of-charge	socmin	1
SPECIES PROPERTIES		
Transport number	transNum	1

Electromagnetic Models

These material property groups for various electromagnetic material models (including their associated physical properties) can be added to models from the **Material** window. These properties require the AC/DC Module, RF Module, or Wave Optics Module.

TABLE 2-8: ELECTROMAGNETIC MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
BH CURVE	This material node is only available with the AC/DC Module.	
Local Properties	normH	-
Magnetic flux density norm	normB	T
DIELECTRIC LOSSES		
Dielectric loss factor	eta_epsilon	-
Relative permittivity (imaginary part)	epsilonBis	1
Relative permittivity (real part)	epsilonPrim	1
E-J CHARACTERISTIC	This material node is only available with the AC/DC Module.	
Electric field norm	normE	V7M
Local Properties	normJ	-
EFFECTIVE BH CURVE	This material node is only available with the AC/DC Module.	
Local Properties	normHeff	-
Magnetic flux density norm	normBeff	T
EFFECTIVE HB CURVE	This material node is only available with the AC/DC Module.	
Local Properties	normBeff	-
Magnetic field norm	normHeff	A/m
HB CURVE	This material node is only available with the AC/DC Module.	
Local Properties	normB	-
Magnetic field norm	normH	A/m
JILES-ATHERTON MODEL PARAMETERS	This material node is only available with the AC/DC Module.	
Maximum magnetization parameter	MsJA (3x3 matrix)	A/m
Langevin slope parameter	ajA (3x3 matrix)	A/m
Pinning parameter	kjA (3x3 matrix)	A/m

TABLE 2-8: ELECTROMAGNETIC MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
Reversibility parameter	cJ _A (3x3 matrix)	I
Interdomain coupling parameter	alphaJ _A (3x3 matrix)	I
LINEARIZED RESISTIVITY	This material node defines the electric resistivity (and conductivity) as a linear function of temperature.	
Reference resistivity	rho0	Ω·m
Reference temperature	Tref	K
Resistivity temperature coefficient	alpha	I/K
LOSS TANGENT, LOSS ANGLE	This material node assumes zero conductivity.	
Loss tangent, loss angle	delta	rad
Relative permittivity (real part)	epsilonPrim	I
LOSS TANGENT, DISSIPATION FACTOR	This material node assumes zero conductivity.	
Loss tangent, dissipation factor	tanDelta	I
Relative permittivity (real part)	epsilonPrim	I
MAGNETIC LOSSES		
Relative permeability (imaginary part)	murBis	-
Relative permeability (real part)	murPrim	-
MAGNETOSTRICTIVE		
Saturation magnetization	Ms	A/m
Initial magnetic susceptibility	chi	I
Saturation magnetostriction	lambdas	I
Magnetostriction constants	lambda I 00	I
Magnetostriction constants	lambda I I I	I
REFRACTIVE INDEX	This material node assumes a relative permeability of unity and zero conductivity. This material node is only available with the RF Module or the Wave Optics Module.	
Refractive index, imaginary part	ki	-
Refractive index	n	I
STRAIN-MAGNETIZATION FORM	This material node is only available with the AC/DC Module.	
Compliance matrix	sH (6x6 matrix)	I/Pa

TABLE 2-8: ELECTROMAGNETIC MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
Loss factor for compliance matrix sH	eta_sH (6x6 matrix)	I
Piezomagnetic coupling matrix	dHT (3x6 matrix)	m/A
Relative permeability	murT (3x3 matrix)	I
STRESS-MAGNETIZATION FORM	This material node is only available with the AC/DC Module.	
Elasticity matrix	cH (6x6 matrix)	Pa
Loss factor for elasticity matrix cH	eta_cH (6x6 matrix)	I
Piezomagnetic coupling matrix	eHS (3x6 matrix)	T
Relative permeability	murS (3x3 matrix)	I

Equilibrium Discharge

These material property groups for all the material models in the Equilibrium Discharge (including their associated physical properties) can be added to models from the **Material** window. These property groups require the Plasma Module.

TABLE 2-9: EQUILIBRIUM DISCHARGE MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
RADIATION HEAT TRANSFER		
Total volumetric emission coefficient	Qrad	W/m ³

Gas Models

This material property group for an ideal gas (including its associated physical properties) can be added to models from the **Material** page.

TABLE 2-10: GAS MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
IDEAL GAS		
Heat capacity at constant pressure	Cp	J/(kg·K)
Mean molar mass	Mn	kg/mol
Ratio of specific heats	gamma	I
Specific gas constant	Rs	J/(kg·K)

Piezoelectric Models

These material property groups for piezoelectric materials (including their associated physical properties) can be added to models from the **Material** window. These property groups require the Acoustics Module, MEMS Module, or Structural Mechanics Module.

TABLE 2-11: PIEZOELECTRIC MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
STRAIN-CHARGE FORM		
Compliance matrix	sE	1/Pa
Coupling matrix	dET	C/N
Loss factor for compliance matrix	sE	1
Loss factor for coupling matrix	d	1
Loss factor for electrical permittivity	εT	1
Relative permittivity	epsilon _{rT}	1
STRESS-CHARGE FORM		
Coupling matrix	eES	C/m ²
Elasticity matrix	cE	Pa
Loss factor for elasticity matrix	cE	1
Loss factor for coupling matrix	e	1
Loss factor for electrical permittivity	εS	1
Relative permittivity	epsilon _{rS}	1

Piezoresistive Models

These material property groups for piezoresistive materials (including their associated physical properties) can be added to models from the **Material** window. These property groups require the MEMS Module.

TABLE 2-12: GAS MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
ELASTORESISTANCE FORM		
Elastoresistive coupling matrix	mI	Ω·m

TABLE 2-12: GAS MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
PIEZORESISTANCE FORM		
Piezoresistive coupling matrix	Pil	A/m ²

Semiconductors Material Properties

These material property groups for all the material models in semiconductors (including their associated physical properties) can be added to models from the **Material** window. These property groups require the Semiconductor Module.



The Property Group, Variable Names, and SI Unit columns are applicable to all materials in the Semiconductor Module. However, the Values and References columns listed in [Table 2-13](#) are specifically for Silicon in the *COMSOL Multiphysics Reference Manual*.

TABLE 2-13: SEMICONDUCTOR MATERIAL PROPERTIES (ALL MATERIALS) AND VALUES AND REFERENCES FOR SILICON

PROPERTY GROUP AND PROPERTY (ALL MATERIALS)	NAME/VARIABLE (ALL MATERIALS)	SI UNIT	VALUE FOR SILICON	REFERENCE FOR SILICON
BASIC				
Relative permittivity	epsilon _r	1	11.7	Ref. 1
Thermal conductivity	k	W/(m·K)	131 W/(m·K)	Ref. 1
Density	rho	kg/m ³	2329 kg/m ³	Ref. 1
Heat capacity at constant pressure	C _p	J/(kg·K)	700 J/(kg·K)	Ref. 1
BAND-GAP NARROWING MODELS>JAIN-ROULSTON MODEL				
Jain-Roulston coefficient (n-type), A	An _{jr}	V	3.5·10 ⁻⁸ V	Ref. 12
Jain-Roulston coefficient (n-type), B	Bn _{jr}	V	0 V	Ref. 12
Jain-Roulston coefficient (n-type), C	Cn _{jr}	V	0 V	Ref. 12

TABLE 2-13: SEMICONDUCTOR MATERIAL PROPERTIES (ALL MATERIALS) AND VALUES AND REFERENCES FOR SILICON

PROPERTY GROUP AND PROPERTY (ALL MATERIALS)	NAME/VARIABLE (ALL MATERIALS)	SI UNIT	VALUE FOR SILICON	REFERENCE FOR SILICON
Jain-Roulston coefficient (p-type), A	Ap_jr	V	$3.5 \cdot 10^{-8}$ V	Ref. 12
Jain-Roulston coefficient (p-type), B	Bp_jr	V	0 V	Ref. 12
Jain-Roulston coefficient (p-type), C	Cp_jr	V	0 V	Ref. 12
Band-gap narrowing reference concentration	Nref_jr	$1/m^3$	1 1/cm^3	Ref. 12
Conduction band fraction	alpha_jr	l	0.5	Ref. 12
BAND-GAP NARROWING MODELS>SLOTBOOM MODEL				
Band-gap narrowing reference energy	Eref_sb	V	0.00692 V	Ref. 11
Band-gap narrowing reference concentration	Nref_sb	$1/m^3$	$1.3 \cdot 10^{17} \text{ 1/cm}^3$	Ref. 11
Conduction band fraction	alpha_sb	l	0.5	Ref. 11
GENERATION-RECOMBINATION>AUGER RECOMBINATION				
Auger recombination factor, electrons	Cn	m^6/s	$2.8 \cdot 10^{-31} \text{ cm}^6/s$ (valid at 300 K)	Ref. 2
Auger recombination factor, holes	Cp	m^6/s	$9.9 \cdot 10^{-32} \text{ cm}^6/s$ (valid at 300 K)	Ref. 2
GENERATION-RECOMBINATION>DIRECT RECOMBINATION				
Direct recombination factor	C	m^3/s	$0 \text{ m}^3/s$	N/A
GENERATION-RECOMBINATION>IMPACT IONIZATION				
a factor, electrons, impact ionization	an	l/V	0.426 l/V	Ref. 3

TABLE 2-13: SEMICONDUCTOR MATERIAL PROPERTIES (ALL MATERIALS) AND VALUES AND REFERENCES FOR SILICON

PROPERTY GROUP AND PROPERTY (ALL MATERIALS)	NAME/VARIABLE (ALL MATERIALS)	SI UNIT	VALUE FOR SILICON	REFERENCE FOR SILICON
a factor, holes, impact ionization	ap	1/V	0.243 1/V	Ref. 3
b factor, electrons, impact ionization	bn	V/m	$4.81 \cdot 10^5$ V/cm	Ref. 3
b factor, holes, impact ionization	bp	V/m	$6.53 \cdot 10^5$ V/cm	Ref. 3
c factor, electrons, impact ionization	cn	1/KValues	$3.05 \cdot 10^{-4}$ 1/K	Ref. 3
c factor, holes, impact ionization	cp	1/K	$5.35 \cdot 10^{-4}$ 1/K	Ref. 3
d factor, electrons, impact ionization	dn	1/K	$6.86 \cdot 10^{-4}$ 1/K	Ref. 3
d factor, holes, impact ionization	dp	1/K	$5.67 \cdot 10^{-4}$ 1/K	Ref. 3
GENERATION-RECOMBINATION>SHOCKLEY-READ-HALL RECOMBINATION				
Electron lifetime, SRH	taun	s	10 μ s	Ref. 4
Hole lifetime, SRH	taup	s	10 μ s	Ref. 4
MOBILITY MODELS>ARORA MOBILITY MODEL				
Electron mobility reference	mun0_ref_arora	$m^2/(V \cdot s)$	1252 $cm^2/(V \cdot s)$	Ref. 5
Hole mobility reference	mup0_ref_arora	$m^2/(V \cdot s)$	407 $cm^2/(V \cdot s)$	Ref. 5
Electron mobility reference minimum	mun_min_ref_arora	$m^2/(V \cdot s)$	88 $cm^2/(V \cdot s)$	Ref. 5
Hole mobility reference minimum	mup_min_ref_arora	$m^2/(V \cdot s)$	53.4 $cm^2/(V \cdot s)$	Ref. 5
Electron reference impurity concentration	Nn0_ref_arora	$1/m^3$	$1.26 \cdot 10^{17}$ 1/cm ³	Ref. 5
Hole reference impurity concentration	Np0_ref_arora	$1/m^3$	$2.35 \cdot 10^{17}$ 1/cm ³	Ref. 5
Alpha coefficient	alpha0_arora	l	0.88	Ref. 5

TABLE 2-13: SEMICONDUCTOR MATERIAL PROPERTIES (ALL MATERIALS) AND VALUES AND REFERENCES FOR SILICON

PROPERTY GROUP AND PROPERTY (ALL MATERIALS)	NAME/VARIABLE (ALL MATERIALS)	SI UNIT	VALUE FOR SILICON	REFERENCE FOR SILICON
Mobility reference minimum exponent	beta1_arora	l	-0.57	Ref. 5
Mobility reference exponent	beta2_arora	l	-2.33	Ref. 5
Impurity concentration reference exponent	beta3_arora	l	2.4	Ref. 5
Alpha coefficient exponent	beta4_arora	m ² /(V·s)	-0.146	Ref. 5
Reference temperature	Tref_arora	K	300 K	Ref. 5
MOBILITY MODELS>CAUGHEY-THOMAS MOBILITY MODEL				
Electron alpha coefficient	alphan0_ct	l	1.11	Ref. 6
Electron alpha exponent	betan1_ct	l	0.66	Ref. 6
Electron saturation velocity	vn0_ct	m/s	1·10 ⁷ cm/s	Ref. 6
Electron velocity saturation exponent	betan2_ct	l	-0.87	Ref. 6
Hole alpha coefficient	alphap0_ct	l	1.21	Ref. 6
Hole alpha exponent	betap1_ct		0.17	Ref. 6
Hole saturation velocity	vp0_ct	m/s	8.37·10 ⁶ cm/s	Ref. 6
Hole velocity saturation exponent	betap2_ct	l	-0.52	Ref. 6
Reference temperature	Tref_ct	K	300 K	Ref. 6
MOBILITY MODELS>FLETCHER MOBILITY MODEL				
Fletcher mobility coefficient 1	F1_fl	l/(cm·V·s)	1.04×10 ²¹ l/(cm·V·s)	Ref. 7
Fletcher mobility coefficient 2	F2_fl	l/m ²	7.45×10 ¹³ l/cm ²	Ref. 7

TABLE 2-13: SEMICONDUCTOR MATERIAL PROPERTIES (ALL MATERIALS) AND VALUES AND REFERENCES FOR SILICON

PROPERTY GROUP AND PROPERTY (ALL MATERIALS)	NAME/VARIABLE (ALL MATERIALS)	SI UNIT	VALUE FOR SILICON	REFERENCE FOR SILICON
Reference temperature	Tref_fl	K	300 K	Ref. 7
MOBILITY MODELS>LOMBARDI SURFACE MOBILITY MODEL				
Electron delta coefficient	deltan_ls	V/s	5.82×10^{14} V/s	Ref. 8
Electron mobility reference	mun1_ls	$m^2/(V \cdot s)$	4.75×10^7 cm ² /(V·s)	Ref. 8
Electron mobility reference	mun2_ls	$m^2/(V \cdot s)$	1.74×10^5 cm ² /(V·s)	Ref. 8
Electron alpha coefficient	alphan_ls	l	0.125	Ref. 8
Hole delta coefficient	deltap_ls	V/s	2.05×10^{14} V/s	Ref. 8
Hole mobility reference	mup1_ls	$m^2/(V \cdot s)$	9.93×10^7 cm ² /(V·s)	Ref. 8
Hole mobility reference	mup2_ls	$m^2/(V \cdot s)$	8.84×10^5 cm ² /(V·s)	Ref. 8
Hole alpha coefficient	alphap_ls	l	0.0317	Ref. 8
Reference temperature	Tref_ls	K	l K	Ref. 8
Electric field reference	Eref_ls	V/m	l V/cm	Ref. 8
Doping concentration reference	Nref_ls	l/m ³	l l/cm ³	Ref. 8
MOBILITY MODELS>POWER LAW MOBILITY MODEL				
Electron mobility reference	mun0_pl	$m^2/(V \cdot s)$	1448 cm ² /(V·s)	Ref. 5
Hole mobility reference	mup0_pl	$m^2/(V \cdot s)$	473 cm ² /(V·s)	Ref. 5
Electron exponent	alphan_pl	l	2.33	Ref. 5
Hole exponent	alphap_pl	l	2.23	Ref. 5
Reference temperature	Tref_pl	K	300 K	Ref. 5

TABLE 2-13: SEMICONDUCTOR MATERIAL PROPERTIES (ALL MATERIALS) AND VALUES AND REFERENCES FOR SILICON

PROPERTY GROUP AND PROPERTY (ALL MATERIALS)	NAME/VARIABLE (ALL MATERIALS)	SI UNIT	VALUE FOR SILICON	REFERENCE FOR SILICON
SEMICONDUCTOR MATERIAL				
Band gap	Eg0	V	1.12 V (valid at 300 K)	Ref. 1
Effective density of states, conduction band	Nc	1/m ³	2.8×10 ¹⁹ 1/cm ³ ×(T/300 K) ^{3/2}	Ref. 1
Effective density of states, valence band	Nv	1/m ³	1.04×10 ¹⁹ 1/cm ³ ×(T/300 K) ^{3/2}	Ref. 1
Electron affinity	chi0	V	4.05 V	Ref. 1
Electron mobility	mun	m ² /(V·s)	1450 cm ² /(V·s)	Ref. 1
Hole mobility	mup	m ² /(V·s)	500 cm ² /(V·s)	Ref. 1

Solid Mechanics Material Properties

These material property groups for material models in solid mechanics (including their associated physical properties) can be added to models from the **Material** window. Most of these properties require the Structural Mechanics Module.

TABLE 2-14: SOLID MECHANICS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
LINEAR ELASTIC MATERIAL		
ANISOTROPIC		
Elasticity matrix	D	Pa
Loss factor for elasticity matrix D	eta_D	I
ANISOTROPIC, VOIGT NOTATION		
Elasticity matrix, Voigt notation	DV0	Pa
Loss factor for elasticity matrix D, Voigt notation	eta_DVo	I
BULK MODULUS AND SHEAR MODULUS		
Bulk modulus	K	N/m ²
Shear modulus	G	N/m ²
LAMÉ PARAMETERS		
Lamé parameter λ	lambLame	N/m ²
Lamé parameter μ	muLame	N/m ²

TABLE 2-14: SOLID MECHANICS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
ORTHOTROPIC		
Young's modulus	Evector	Pa
Poisson's ratio	nuvector	l
Shear modulus	Gvector	N/m ²
Loss factor for orthotropic Young's modulus	eta_Evector	l
Loss factor for orthotropic shear modulus	eta_Gvector	l
ORTHOTROPIC, VOIGT NOTATION		
Shear modulus, Voigt notation	GvectorVo	N/m ²
Loss factor for orthotropic shear modulus, Voigt notation	eta_GvectorVo	l
PRESSURE-WAVE AND SHEAR-WAVE SPEEDS		
Pressure-wave speed	cp	m/s
Shear-wave speed	cs	m/s
YOUNG'S MODULUS AND POISSON'S RATIO		
Young's modulus	E	Pa
Poisson's ratio	nu	l
YOUNG'S MODULUS AND SHEAR MODULUS		
Young's modulus	E	Pa
Shear modulus	G	N/m ²
LINEAR VISCOELASTIC MATERIAL		
Long-term shear modulus	Gv	N/m ²
Bulk modulus	K	N/m ²
POROELASTIC MATERIAL		
Biot-Willis coefficient	alphaB	l
Porosity	epsilon	l
Permeability	kappa	m ²



- The *Structural Mechanics Module User's Guide* and [Table 2-17](#)
- The *Structural Mechanics Module User's Guide* and [Table 2-15](#)
- The *Fatigue Module User's Guide* and [Table 2-16](#)

Solid Mechanics Material Properties: Nonlinear Structural Materials Module

These material property groups for material models in solid mechanics using the Nonlinear Structural Materials Module (including their associated physical properties) can be added to models from the **Material** window.

TABLE 2-15: HYPERELASTIC AND ELASTOPLASTIC MATERIAL PROPERTIES

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
ELASTOPLASTIC MATERIAL		
Hardening function	sigmagh	Pa
Hill's coefficients	Hillcoefficients	$(\text{m}^2 \cdot \text{s}^4)/\text{kg}^2$
Initial tensile and shear yield stresses	ys	N/m^2
Initial yield stress	sigmags	Pa
Isotropic tangent modulus	Et	Pa
Kinematic tangent modulus	Ek	Pa
HYPERELASTIC MATERIALS		
ARRUDA-BOYCE		
Macroscopic shear modulus	mu0	N/m^2
Number of segments	Nseg	l
BLATZ-KO		
Model parameters	phiBK	l
Model parameters	betaBK	l
Shear modulus	muBK	Pa
GAO		
Model parameters	aG	Pa
Model parameters	nG	l
GENT		
Macroscopic shear modulus	muG	Pa
Model parameters	jmG	l
MOONEY-RIVLIN		
Model parameters	C01, C02, C03, C10, C11, C12, C20, C21, C30	Pa

TABLE 2-15: HYPERELASTIC AND ELASTOPLASTIC MATERIAL PROPERTIES

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
MURNAGHAN	The Murnaghan node adds five model parameters. The model is based on strain invariants and is typically used in acoustoelasticity.	
Murnaghan third-order elastic moduli	l	Pa
Murnaghan third-order elastic moduli	m	Pa
Murnaghan third-order elastic moduli	n	Pa
Lamé parameter λ	lambLame	Pa
Lamé parameter μ	muLame	Pa
VARGA		
Model parameters	c1VA	Pa
Model parameters	c2VA	Pa
YEOH		
Model parameters	c1YE	Pa
Model parameters	c2YE	Pa
Model parameters	c3YE	Pa

Solid Mechanics Material Properties: Fatigue Module

These material property groups for material models in solid mechanics using the Fatigue Module (including their associated physical properties) can be added to models from the **Material** window.

TABLE 2-16: ELASTOPLASTIC AND FATIGUE BEHAVIOR MATERIAL PROPERTIES

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
ELASTOPLASTIC MATERIAL>RAMBERG-OSGOOD		
Cyclic hardening coefficient	K_ROcyclic	Pa
Cyclic hardening coefficient	n_ROcyclic	l
FATIGUE BEHAVIOR>ENERGY-BASED		
DARVEAUX		
Crack initiation energy coefficient	K1_Darveaux	l
Crack initiation energy exponent	k2_Darveaux	l
Crack propagation energy coefficient	K3_Darveaux	m

TABLE 2-16: ELASTOPLASTIC AND FATIGUE BEHAVIOR MATERIAL PROPERTIES

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
Crack propagation energy exponent	k4_Darveaux	l
Reference energy density	Wref_Darveaux	J/m ³
MORROW		
Fatigue energy coefficient	Wf_Morrow	J/m ³
Fatigue energy exponent	m_Morrow	l
FATIGUE BEHAVIOR>FATIGUE BEHAVIOR>APPROXIMATE S-N CURVE		
Transition stress	sigmat	Pa
Transition life	Nt	l
Endurance life	Ne	l
FATIGUE BEHAVIOR>GENERAL		
Endurance limit	sigmae	Pa
FATIGUE BEHAVIOR>STRAIN-BASED		
COFFIN-MANSON		
Fatigue ductility coefficient	epsilonf_CM	l
Fatigue ductility exponent	c_CM	l
Shear fatigue ductility coefficient	gammaf_CM	l
Shear fatigue ductility exponent	cgamma_CM	l
FATEMI-SOCIE		
Normal stress sensitivity coefficient	k_FS	l
WANG-BROWN		
Normal stress sensitivity coefficient	S_WB	l
FATIGUE BEHAVIOR>STRESS-BASED		
BASQUIN		
Fatigue strength coefficient	sigmaf_Basquin	Pa
Fatigue strength exponent	b_Basquin	l
Shear fatigue strength coefficient	tauf_Basquin	Pa
Shear fatigue strength exponent	bgamma_Basquin	l
FINDLEY		
Normal stress sensitivity coefficient	k_Findley	l
Limit factor	f_Findley	Pa

TABLE 2-16: ELASTOPLASTIC AND FATIGUE BEHAVIOR MATERIAL PROPERTIES

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
MATAKE		
Normal stress sensitivity coefficient	k_Matake	l
Limit factor	f_Matake	Pa
NORMAL STRESS		
Limit factor	f_NormalStress	Pa

Solid Mechanics Material Properties: Geomechanics Material Model

These material property groups for material models in solid mechanics (including their associated physical properties) can be added to models from the **Material** window. These property groups require the Geomechanics Module.

TABLE 2-17: GEOMECHANICS MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
CAM-CLAY MATERIAL MODEL		
Swelling index	kappaSwelling	l
Compression index	lambdaComp	l
Initial void ratio	e0	l
Cam-clay M parameter	M	l
DRUCKER-PRAGER		
Drucker-Prager alpha coefficient	alphaDrucker	l
Drucker-Prager k coefficient	kDrucker	Pa
HOEK BROWN		
Hoek-Brown m parameter	mHB	l
Hoek-Brown s parameter	sHB	l
Geological strength index	GSI	l
Disturbance factor	Dfactor	l
Intact rock parameter	miHB	l
LADE-DUNCAN		
Lade-Duncan k coefficient	kLade	l
MATSUOKA-NAKAI		
Matsuoka-Nakai mu coefficient	muMatsuoka	l
MOHR-COULOMB		
Cohesion	cohesion	Pa

TABLE 2-17: GEOMECHANICS MODELS MATERIALS

PROPERTY GROUP AND PROPERTY	NAME/VARIABLE	SI UNIT
Angle of internal friction	internalphi	rad
OTTOSEN		
Ottosen a parameter	aOttosen	l
Ottosen b parameter	bOttosen	l
Size factor	k1Ottosen	l
Shape factor	k2Ottosen	l
YIELD STRESS PARAMETERS		
Uniaxial tensile strength	sigmaut	Pa
Uniaxial compressive strength	sigmauc	Pa
Biaxial compressive strength	sigmabc	Pa




Using Functions

The Material Library describes material properties with functions, usually functions of temperature, and for this purpose it uses piecewise analytic functions (polynomials). For user-defined property functions, three types of functions can be defined: analytic functions, piecewise analytic functions, and interpolation functions.

Functions are useful for describing material properties as, for example, functions of temperature or pressure.

Adding a Function to the Material

Material functions are either automatically added to the **Model Builder** sequence (usually with materials from the material library) or functions can be added based on individual requirements.

- 1 Add a material to the **Component** node (see [The Material Browser Window](#) and [The Add Material Window](#) in the *COMSOL Multiphysics Reference Manual*).
- 2 Add an **Analytic** () , **Interpolation** () , or **Piecewise** () function.

Win

To add an **Analytic** () , **Interpolation** () , or **Piecewise** () function:

- On the **Materials** toolbar, click **Analytic**, **Interpolation**, or **Piecewise**.
- Right-click a property group node (for example, **Basic**) and select a function from the **Functions** list.

Mac

To add an **Analytic** () , **Interpolation** () , or **Piecewise** () function:

- Right-click a property group node, for example, **Basic** and select a function from the **Functions** list.
 - On the **Materials** contextual toolbar, click **Analytic**, **Interpolation**, or **Piecewise**.
-

Linux

- Select **Analytic** to add an analytic function of one or more input arguments.
- Select **Interpolation** to add an interpolation function that can interpolate from structured data (defined on a grid) or unstructured data (defined on a generic point cloud).
- Select **Piecewise** to add a piecewise function that is useful if a material property has different definitions on different intervals. The intervals must not overlap, and there cannot be any holes between intervals.







- [Defining an Analytic Function](#)
- [Analytic, Interpolation, and Piecewise in the COMSOL Multiphysics Reference Manual](#)



Once a function is created, you can use it for any property in the same property group.

Defining an Analytic Function

Assume that you want to define the density ρ_1 for a material as a function of pressure and temperature: $\rho_1 = \rho_1(p, T)$. You can name the function $\text{rho1}(\rho, T)$ and use the expression $p * 0.02897 / 8.314 / T$ to define the function.

- 1 On the **Materials** toolbar, click the **Browse Materials** , **Add Material** , or **Blank Material**  button to add a new material to the Component (or use an existing material where density is not defined, or redefine the current expression for the density).
- 2 Add a **Density** property to the material.
 - a In the **Model Builder**, click the **Material** node.
 - b On the **Settings** window for **Material**, click to expand the **Material Properties** section. Under **Basic Properties**, right-click **Density** and **Add to Material**.
A **Density** property is added to the **Basic** property group.
- 3 In the **Model Builder**, under the material node, right-click **Basic** and select **Functions>Analytic**. This adds an **Analytic** subnode () under **Basic**.
- 4 On the **Settings** window for **Analytic**, enter rho1 in **Function name**. Replace the default.

- 5 Under the **Definition** section:
 - a In the **Expression** field, enter $p \cdot 0.02897 / 8.314 / T$.
 - b In the **Arguments** column, enter p, T .
- 6 Under **Units**:
 - a In the **Arguments** field, enter Pa, K as the units for the pressure and the temperature, respectively.
 - b In the **Function** field, enter kg/m^3 as the unit for the function's output (density).
The function rho1 can now be used to define the density in your material.

Settings

Analytic

Plot Create Plot

Label: Analytic 1

Function name: rho1

Definition

Expression: $p \cdot 0.02897 / 8.314 / T$

Arguments: p, T

Derivatives: Automatic

Periodic Extension

Units

Arguments: Pa, K

Function: kg/m^3

Advanced

Plot Parameters

- 7 Click the **Material** node. On the **Settings** window for **Material**, under **Material Contents**, enter rho1 (p, T) in the **Value** column (in the Density row).

Property	Name	Value	Unit	Property group
Density	rho	rho1(p,T)	kg/m ³	Basic

Click the **Basic** node to notice that the **Density** analytic function is defined on the **Settings** window for **Property Group** under **Output properties**. See [Figure 2-7](#).

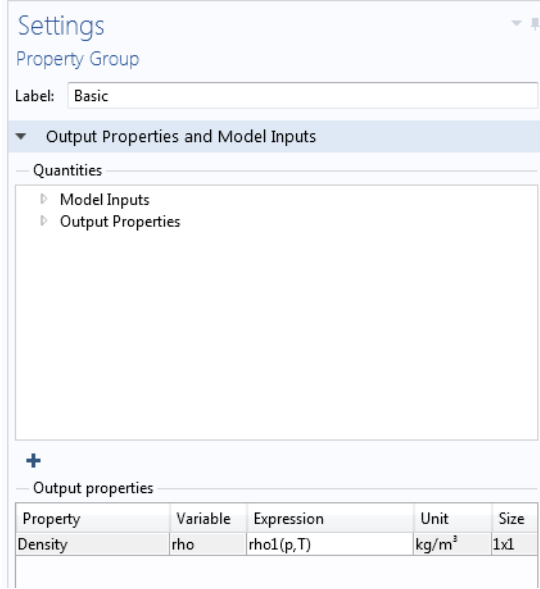


Figure 2-7: A density property is defined using an analytic function.

I n d e x

- A**
 - add material (window) 16
 - analytic functions, materials and 62
 - anisotropic (material node) 54
 - anisotropic materials
 - properties 28
 - anisotropic, Voigt notation (material node) 54
 - Application Libraries window 9
 - Arruda-Boyce (material node) 56
- B**
 - Basquin (material node) 58
 - BH curve (material node) 45
 - Blatz-Ko (material node) 56
 - Blinn-Phong lighting model 26
 - bulk modulus 35
 - bulk modulus (material node) 54
- C**
 - Cam-Clay material model (material node) 59
 - check mark definition, materials 23
 - coefficient of thermal expansion 35
 - for non-SI units 42
 - Coffin-Manson (material node) 58
 - colors of materials 24
 - composition 13
 - Cook-Torrance lighting model 26
 - creep strength 37
- D**
 - Darveaux (material node) 57
 - density 36
 - dielectric losses (material node) 45
 - DIN number 12
 - documentation 7
 - Drucker-Prager (material node) 59
- E**
 - editing
 - material properties 28
 - Effective BH curve (material node) 45
 - E-J characteristic (material node) 45
 - elastoplastic material model (material node) 56
 - elastoresistance form (material node) 48
 - electric resistivity 36
 - electrical conductivity 36
 - electrode potential (material node) 44
 - electrolyte conductivity (material node) 44
 - 44
 - electrolyte salt concentration (material node) 44
 - elongation 37
 - emailing COMSOL 9
 - emissivity
 - normal total 36
 - surface 36
- F**
 - Fatemi-Socie (material node) 58
 - fatigue S-N curve 37
 - Findley (material node) 58
 - functions
 - adding to materials 61
- G**
 - Gao (material node) 56
 - Gent (material node) 56
 - geometric scope
 - materials, and 21
- H**
 - HB curve (material node) 45
 - Hoek-Brown (material node) 59
- I**
 - ideal gas (material node) 47
 - input properties 39
 - inputs, materials 27
 - internet resources 7
 - interpolation
 - functions, materials and 62
- J**
 - JAHM Software, Inc 6
- K**
 - knowledge base, COMSOL 10

- L**
 - Lade-Duncan (material node) 59
 - Lamé parameters (material node) 54
 - lighting models 25
 - linear viscoelastic material (node) 55
 - linearized resistivity (material node) 44
 - literature references, material properties 31
 - local
 - properties, materials 28
 - loss tangent, dissipation factor (material node) 46
 - loss tangent, loss angle (material node) 46
- M**
 - magnetic losses (material node) 46
 - magnetostrictive (material node) 46
 - magnitude of errors 38
 - Matake (material node) 59
 - material (node) 20
 - Material Browser (window) 12
 - material data, properties 6
 - material properties
 - magnitude of errors 38
 - references for 6, 31
 - Material Property Database (MPDB) 6
 - material type 22
 - materials
 - color and texture 24
 - geometric scope, and 21
 - local properties 28
 - output properties 27, 41
 - searching 12
 - status 23
 - materials (node) 19
 - Matsuoka-Nakai (material node) 59
 - Mohr-Coulomb (material node) 59
 - Mooney-Rivlin (material node) 56
 - Morrow (material node) 58
 - MPH-files 9
 - Murnaghan (material node) 57
- N**
 - normal stress (material node) 59
 - normal total emissivity 36
- O**
 - operational electrode state-of-charge (material node) 44
 - orthotropic (material node) 55
 - orthotropic, Voigt notation (material node) 55
 - Ottosen (material node) 60
 - output properties, materials 27, 41
- P**
 - piecewise functions, materials and 62
 - piezoresistance form (material node) 49
 - Poisson's ratio 35
 - Poisson's ratio (material node) 55
 - polymer-based composites 37
 - polymers 37
 - poroacoustics model (material node) 43
 - poroelastic material (node) 55
 - pressure-wave speed (material node) 55
 - properties, material library 31
 - property groups 26
 - property information 31
- R**
 - radiation heat transfer (material node) 47
 - reference temperatures, material properties 31
 - references
 - for material properties 31
 - references, for material properties 6
 - refractive index (material node) 46
 - resistivity temperature coefficient
 - for non-SI units 42
- S**
 - search materials 6
 - searching
 - materials 12
 - shear modulus 35
 - shear modulus (material node) 54–55

- shear-wave speed (material node) 55
- showing
 - material texture and color 24
- smoothing 6
- species properties (material node) 44
- specular exponent 26
- specular highlight 25
- stop sign definition, materials 23
- strain-charge form (material node) 48
- strain-magnetization form (material node) 46
- stress-charge form (material node) 48
- stress-magnetization form (material node) 47
- stress-rupture curves 37
- surface emissivity 36
- switch functions 29
- switch materials 29
- T** technical support, COMSOL 9
- tensile strength 37
- thermal conductivity 36
- thermal diffusivity 36
- thermoacoustics model (material node) 43
- U** UNS number 12
 - user-defined property group 28
- V** Varga (material node) 57
 - viscous model (material node) 43
- W** Wang-Brown (material node) 58
 - warning sign definition, materials 23
 - websites, COMSOL 10
- Y** Yeoh (material node) 57
 - yield strength level 37
 - yield stress parameters (material node) 60
 - Young's modulus (material node) 55

