



Laminar Flow in a Baffled Stirred Mixer

Introduction

This exercise exemplifies the use of the rotating machinery feature in the CFD Module. The Rotating Machinery physics interfaces allow you to model moving rotating parts in, for example, stirred tanks, mixers, and pumps.

The Rotating Machinery physics interfaces formulate the Navier-Stokes equations in a rotating coordinate system. Parts that are not rotated are expressed in the fixed material coordinate system. The rotating and fixed parts need to be coupled together by an identity pair, where a flux continuity boundary condition is applied.

You can use the rotating machinery predefined multiphysics coupling in cases where it is possible to divide the modeled device into rotationally invariant geometries. The desired operation can be, for example, to rotate an impeller in a baffled tank. This is exemplified in [Figure 1](#), where the impeller rotates from position 1 to 2. The first step is to divide the geometry into two parts that are both rotationally invariant, as shown in Step 1a. The second step is to specify the parts to model using a rotating frame and the ones to model using a fixed frame (Step 1b). The predefined coupling then automatically does the coordinate transformation and the joining of the fixed and moving parts (Step 2a).

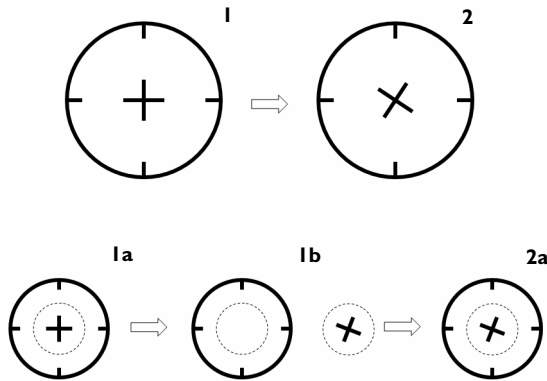


Figure 1: The modeling procedure in the Rotating Machinery physics interface in the CFD Module.

Model Definition

The model you treat in this example is that of a baffled stirred mixer. [Figure 2](#) shows the modeled geometry. The impeller rotates counterclockwise at a speed of 10 RPM, and the fluid in the mixer is water.

At the mixer's fixed walls, no slip boundary conditions apply. The boundary condition on the rotating impeller are set to rotate with the same velocity as the no slip counterclockwise rotation conditions.

3 | LAMINAR FLOW IN A BAFFLED STIRRED MIXER

Results and Discussion

Figure 3 shows the shear rate at the last time step, when the mixer has rotated with full speed for 6 seconds. The shear rate can be important for example when the mixture consists of living cells which are sensitive to too high shear rates.

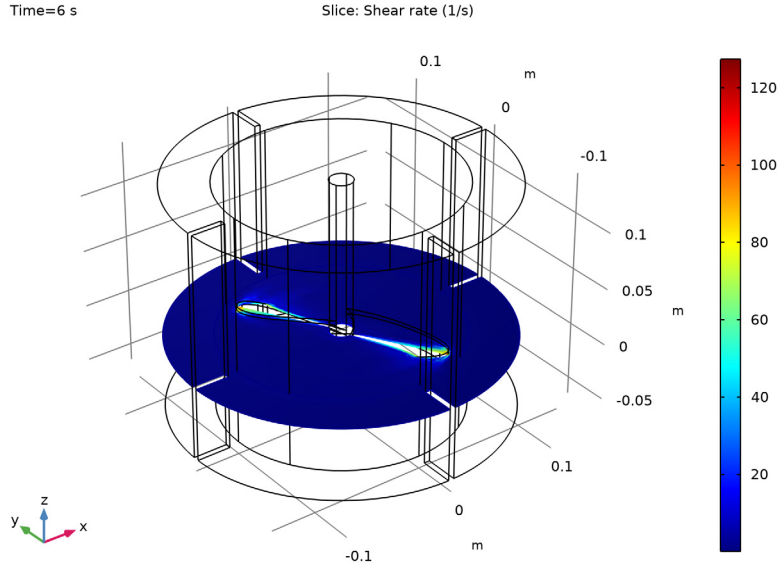


Figure 3: The shear rate after 6 seconds. The plot shows that the shear rate reaches its maximum value at the tip of the impeller blades.

In Figure 3, you can clearly see that the shear rate is highest where the impeller speed is highest, which is expected. If the shear rate is too high, consider to redesign the impeller with sharp leading and trailing edges.

Figure 4 shows the velocity field in the yz -plane at $t = 5.5$ s. It is clear that the impeller is creating a downward flow where the blades pass through the fluid.

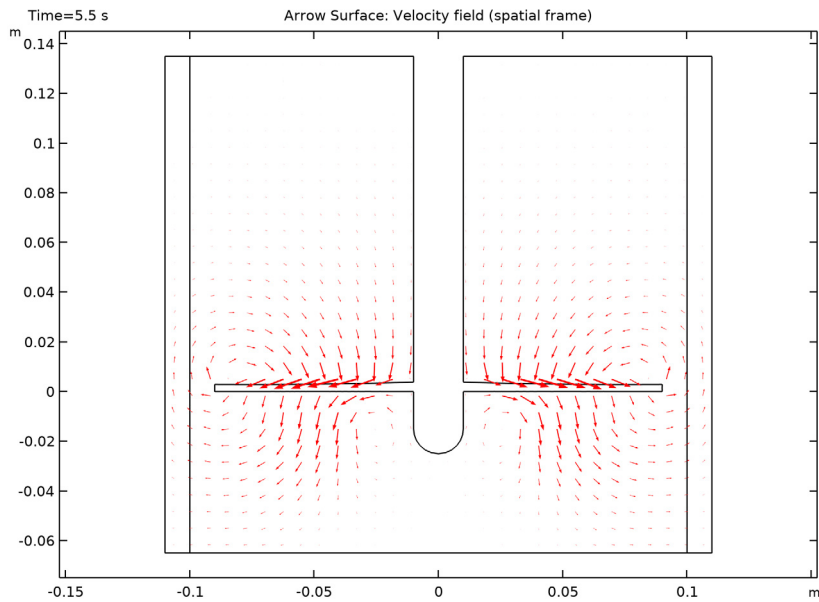


Figure 4: Velocity field in the yz -plane at $t = 5.5$ s.


Use the Player button on the main toolbar to create an animation.

Application Library path: CFD_Module/Fluid-Structure_Interaction/
baffled_mixer


Modeling Instructions



From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.


MODEL WIZARD

I In the **Model Wizard** window, click  **3D**.

- 2 In the **Select Physics** tree, select **Fluid Flow>Single-Phase Flow>Rotating Machinery, Fluid Flow>Laminar Flow**.
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies>Time Dependent**.
- 6 Click  **Done**.



GEOMETRY I


Import I (impl)


- 1 In the **Home** toolbar, click  **Import**.
- 2 In the **Settings** window for **Import**, locate the **Import** section.
- 3 Click **Browse**.
- 4 Browse to the model's Application Libraries folder and double-click the file `baffled_mixer.mphbin`.
- 5 Click **Import**.

Use the assembly mode to create separate geometry objects. This, together with an identity pair, is needed for the sliding-mesh technique.

Form Union (fin)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Geometry 1** click **Form Union (fin)**.
- 2 In the **Settings** window for **Form Union/Assembly**, locate the **Form Union/Assembly** section.
- 3 From the **Action** list, choose **Form an assembly**.
- 4 Click  **Build Selected**.
- 5 Click the  **Transparency** button in the **Graphics** toolbar.


6 Click the  **Zoom Extents** button in the **Graphics** toolbar.

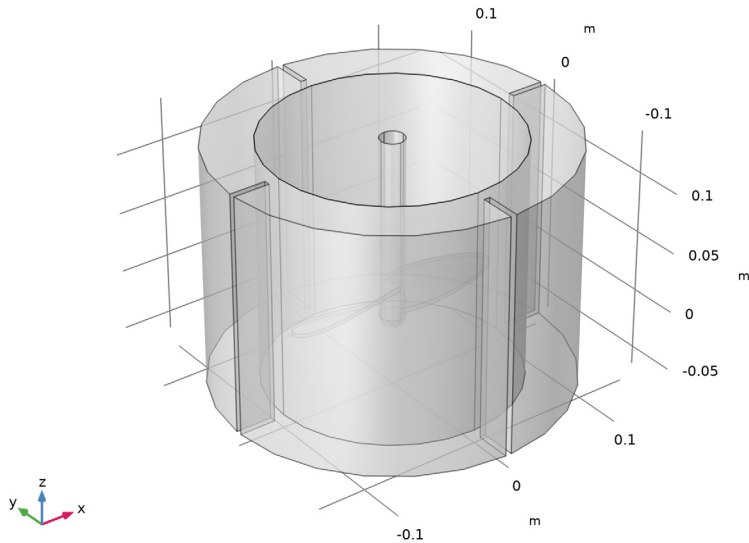


Create a step function that you will use to increase the impeller rotation from zero to 10 RPM in a time of 2 seconds.

DEFINITIONS

Step 1 (step1)


- 1 In the **Home** toolbar, click  **Functions** and choose **Local>Step**.
- 2 In the **Settings** window for **Step**, locate the **Parameters** section.
- 3 In the **Location** text field, type 1.
- 4 Click to expand the **Smoothing** section. In the **Size of transition zone** text field, type 2.

 Variables 1



- 1 In the **Home** toolbar, click  **Variables** and choose **Local Variables**.
- 2 In the **Settings** window for **Variables**, locate the **Variables** section.
- 3 In the table, enter the following settings:

Name	Expression	Unit	Description
rpm	$10[1/\text{min}] \cdot \text{step1}(t[1/\text{s}])$	1/s	Revolutions per minute

Rotating Domain 1

- 1 In the **Model Builder** window, click **Rotating Domain 1**.
- 2 In the **Settings** window for **Rotating Domain**, locate the **Domain Selection** section.
- 3 In the list, select **1**.
- 4 Click  **Remove from Selection**. Only Domain 2 is selected.
- 5 Select Domain 2 only.
- 6 Locate the **Rotation** section. In the f text field, type rpm.


ADD MATERIAL

- 1 In the **Home** toolbar, click  **Add Material** to open the **Add Material** window.
- 2 Go to the **Add Material** window.
- 3 In the tree, select **Built-in>Water, liquid**.
- 4 Click **Add to Component** in the window toolbar.
- 5 In the **Home** toolbar, click  **Add Material** to close the **Add Material** window.

LAMINAR FLOW (SPF)

Next, add the flow continuity condition on the identity pair to couple the rotating and fixed domains together.

Flow Continuity 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Laminar Flow (spf)** and choose **Pairs>Flow Continuity**.
- 2 In the **Settings** window for **Flow Continuity**, locate the **Pair Selection** section.
- 3 Under **Pairs**, click  **Add**.
- 4 In the **Add** dialog box, select **Identity Boundary Pair 1 (ap1)** in the **Pairs** list.
- 5 Click **OK**.


All boundaries that are adjacent to the rotating domain will by default be set to rotating boundaries. The bottom boundary should not rotate, so add an additional no-slip wall boundary condition.

Wall 2

- 1 In the **Model Builder** window, expand the **Flow Continuity 1** node.
- 2 Right-click **Laminar Flow (spf)** and choose **Wall**.
- 3 Select Boundary 25 only.
- 4 In the **Settings** window for **Wall**, click to expand the **Wall Movement** section.

- 5 In the **Minimum element size** text field, type 0.0013.


Boundary Layer Properties 1

- 1 Click the  **Entity Inside** button in the **Graphics** toolbar.
- 2 In the **Model Builder** window, expand the **Boundary Layers 1** node, then click **Boundary Layer Properties 1**.
- 3 Select Boundaries 1–3, 5–7, 10–13, 16–22, and 25 only.


Boundary Layers 1

- 1 In the **Model Builder** window, click **Boundary Layers 1**.
- 2 In the **Settings** window for **Boundary Layers**, click to expand the **Corner Settings** section.
- 3 From the **Handling of sharp edges** list, choose **Splitting**.

Boundary Layers 2

- 1 In the **Mesh** toolbar, click  **Boundary Layers**.
- 2 In the **Settings** window for **Boundary Layers**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Domain**.
- 4 Select Domain 2 only.

Boundary Layer Properties

- 1 Click the  **Entity Inside** button in the **Graphics** toolbar.
- 2 In the **Model Builder** window, click **Boundary Layer Properties**.
- 3 Select Boundaries 27–36 and 38–47 only.
- 4 In the **Settings** window for **Boundary Layer Properties**, locate the **Boundary Layer Properties** section.
- 5 In the **Number of boundary layers** text field, type 2.
- 6 In the **Thickness adjustment factor** text field, type 5.

Boundary Layers 2

- 1 In the **Model Builder** window, click **Boundary Layers 2**.
- 2 In the **Settings** window for **Boundary Layers**, locate the **Corner Settings** section.
- 3 From the **Handling of sharp edges** list, choose **Trimming**.
- 4 In the **Model Builder** window, right-click **Mesh 1** and choose **Build All**.

STUDY 1



Step 1: Time Dependent

- 1 In the **Model Builder** window, under **Study 1** click **Step 1: Time Dependent**.

- 2 In the **Settings** window for **Time Dependent**, locate the **Study Settings** section.
- 3 In the **Output times** text field, type range (0,0.25,6).

Before solving, display the default solver settings to be able to set a maximum time step. The time step is limited with the mesh size and rotational speed at the identity pair in mind.


Solution 1 (sol1)

- 1 In the **Study** toolbar, click  **Show Default Solver**.
- 2 In the **Model Builder** window, expand the **Solution 1 (sol1)** node, then click **Time-Dependent Solver 1**.
- 3 In the **Settings** window for **Time-Dependent Solver**, click to expand the **Time Stepping** section.
- 4 From the **Maximum step constraint** list, choose **Constant**.
- 5 In the **Study** toolbar, click  **Compute**.





RESULTS

The default plot groups visualize the velocity field in a slice plot and the pressure contours on the walls. Follow these steps to create a plot of the shear rate.

3D Plot Group 3


- 1 In the **Home** toolbar, click  **Add Plot Group** and choose **3D Plot Group**.
- 2 In the **Settings** window for **3D Plot Group**, locate the **Plot Settings** section.
- 3 From the **Frame** list, choose **Spatial (x, y, z)**.

Slice 1


- 1 Right-click **3D Plot Group 3** and choose **Slice**.
- 2 In the **Settings** window for **Slice**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (comp1)>Laminar Flow>Velocity and pressure>spf.sr - Shear rate - 1/s**.
- 3 Locate the **Plane Data** section. From the **Plane** list, choose **xy-planes**.
- 4 From the **Entry method** list, choose **Coordinates**.
- 5 In the **3D Plot Group 3** toolbar, click  **Plot**.
- 6 Click the  **Transparency** button in the **Graphics** toolbar.
- 7 Click the  **Go to Default View** button in the **Graphics** toolbar.
- 8 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Finally, create an arrow plot of the velocity field in a 2D cross section through the mixer's axis.


Cut Plane 1

In the **Results** toolbar, click  **Cut Plane**.

2D Plot Group 4

- 1 In the **Results** toolbar, click  **2D Plot Group**.
- 2 In the **Settings** window for **2D Plot Group**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Cut Plane 1**.
- 4 From the **Time (s)** list, choose **5.5**.
- 5 Locate the **Plot Settings** section. From the **Frame** list, choose **Spatial (x, y, z)**.

Arrow Surface 1

- 1 Right-click **2D Plot Group 4** and choose **Arrow Surface**.
- 2 In the **Settings** window for **Arrow Surface**, locate the **Expression** section.
- 3 From the **Coordinate system** list, choose **Cut plane**.
- 4 In the **x component** text field, type v .
- 5 In the **y component** text field, type w .
- 6 Locate the **Arrow Positioning** section. Find the **x grid points** subsection. In the **Points** text field, type 30.
- 7 Find the **y grid points** subsection. In the **Points** text field, type 30.
- 8 Locate the **Coloring and Style** section. Select the **Scale factor** check box.
- 9 In the associated text field, type 0.4.
- 10 In the **2D Plot Group 4** toolbar, click  **Plot**.