

# Design Optimization of a Beam

# Introduction

When applying design optimization, one has to choose between different techniques with different strengths and weaknesses regarding robustness, learning curve, design freedom, and associated potential improvements. This example illustrates how to apply parameter, shape, and topology optimization to the problem of minimizing the weight of a beam subject to a displacement constraint. In this case the parameter and shape optimization happen to give similar designs with similar performance, while the topology optimization gives a design with significantly better performance. Although it is not unusual that the superior design freedom of topology optimization results in superior performance, it is in no way guaranteed. The optimization can get stuck in a local minimum and it is often possible to improve on the result by using it as an initial design for shape or parameter optimization as shown in the model Shape Optimization of a Tesla Microvalve.

# Model Definition

The model geometry (Figure 1) consists of two regions: A fixed domain on which a distributed load is applied and a domain to be designed for optimal performance. For the parameter optimization it is the lower right corner that is moved, while the shape optimization changes the bottom right boundary. Finally, topology optimization is able to distribute material freely in the design domain.

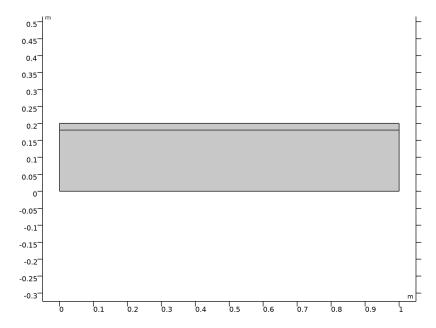


Figure 1: The model geometry.

The beam is made of aluminum, and the displacement field is calculated under the assumption of linear elasticity. The displacement of the upper right corner is constrained to be less than 0.2 mm.

The parameter optimization moves the lower right point and constructs a new mesh in every iteration. This means that the gradient cannot be computed analytically using the adjoint method, so the use of a derivative free optimization solver (such as Nelder-Mead) is appropriate.

The shape optimization uses to 2nd order Bernstein polynomials to move the bottom right boundary. This is implemented using the Free Shape Domain and Polynomial Boundary features. The Maximum displacement is set such that the lower boundary cannot move to the point where the topology changes. The lower left point is fixed, but the right point is allowed to slide along a Roller boundary.

For a detailed introduction to the use of structural topology optimization and how to use a Helmholtz filter for regularization, see the model Topology Optimization of an MBB Beam. The main points are that Young's modulus varies spatially to reflect the material

distribution. It is not possible to set zero void stiffness, because this causes the void displacement field to become undefined.

# Results and Discussion

Figure 2 displays the result of the parameter optimization together with the distributed load and the mesh. The displacement field is shown in colors and the maximum value is located near the end of the beam,

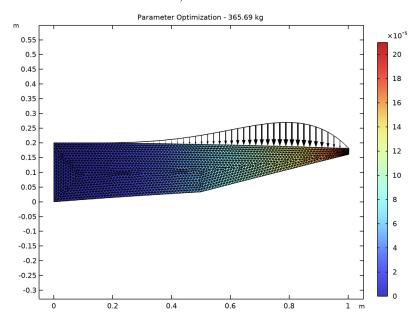


Figure 2: The lower right corner is moved to the center of the beam, when its position is used as a control variable. The color scale show reveals that the displacement at the upper right corner satisfies the 0.5 mm constraint.

The shape optimization results in a somewhat similar design and the mass is only 1% lower, see Figure 3. However, the computation time is similar to the parameter optimization despite having more control variables. This is due to the fact that the mesh topology is fixed, which allows for the use of analytic computation of the gradient via the adjoint method. It is thus possible to use IPOPT, a quadratic gradient based optimizer. Moreover, the addition of more control variables is not expected to affect the computational time adversely.

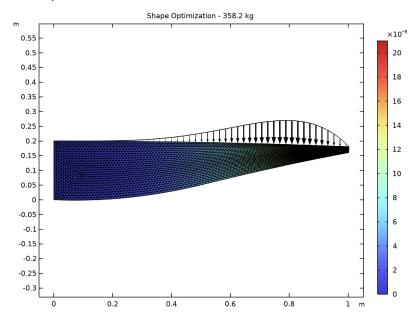


Figure 3: The shape of the beam is optimized by moving the lower boundary vertically. The movement is large toward the right of the beam, which causes a concentration of elements in this area.

Figure 4 plots the design found with topology optimization. Four triangles have been cut out and the end of the beam is left unsupported, which allows for a seesaw effect because most of the load is to the left of the unsupported region. You can thus expect that the performance of the design is quite sensitive to variations in the load distribution. The

model Bracket — Topology Optimization shows how multiple load cases can be used to find design that are robust to load variations.

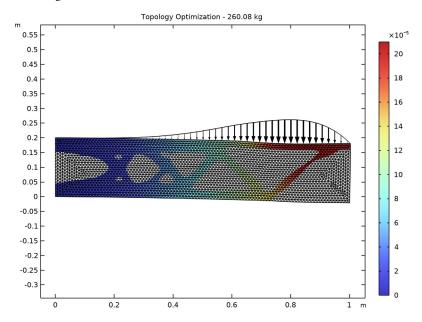


Figure 4: Topology optimization has significant design freedom, so it is able to find a design, which is 41% lighter than the result of the shape optimization.

# Notes About the COMSOL Implementation

This model combines the Optimization and Solid Mechanics interfaces. First, you set up and solve the parameter optimization. Then you define the shape optimization problem using the features available from the component node. Both the shape and parameter optimization work with a coarser mesh, but the topology optimization needs a rather fine mesh if a structure with slender components is desired. This is particularly true, if the constraint on the displacement is relaxed to a higher value.

The topology optimization is implemented by adding a **Density Model** on the component. This is used to define a custom Young's modulus for a new Linear Elasticity model under the Solid Mechanics interface. This new Linear Elasticity model is disabled in the studies for the shape and parameter optimization.

Application Library path: Optimization Module/Design Optimization/

beam\_optimization

# Modeling Instructions

From the File menu, choose New.

#### NEW

In the New window, click Model Wizard.

#### MODEL WIZARD

- I In the Model Wizard window, click **2** 2D.
- 2 In the Select Physics tree, select Structural Mechanics>Solid Mechanics (solid).
- 3 Click Add.
- 4 Click 🔵 Study.
- 5 In the Select Study tree, select General Studies>Stationary.
- 6 Click **Done**.

#### **GLOBAL DEFINITIONS**

## Parameters 1

Add parameters for the geometry, including the y coordinates for two points to be controlled by the parameter optimization.

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- **3** In the table, enter the following settings:

| Name    | Expression Value Descript |          | Description          |
|---------|---------------------------|----------|----------------------|
| L0      | 1[m]                      | l m      | Beam length          |
| T0      | 20[cm]                    | 0.2 m    | Beam height          |
| МО      | L0*T0*2700[kg/m^3]        | 540 kg/m | Beam weight          |
| Yopt1   | 0                         | 0        | Y position, point 1  |
| Yopt2   | 0                         | 0        | Y position, point 2  |
| maxDisp | 0.2[mm]                   | 2E-4 m   | Maximum displacement |

#### GEOMETRY I

Polygon I (boll)

- I In the Geometry toolbar, click / Polygon.
- 2 In the Settings window for Polygon, locate the Coordinates section.
- **3** In the table, enter the following settings:

| x (m) | y (m)  |
|-------|--------|
| 0     | 0      |
| L0/2  | Yopt1  |
| L0    | Yopt2  |
| L0    | 0.9*T0 |
| L0    | ТО     |
| L0    | T0     |
| 0     | ТО     |

Polygon 2 (pol2)

- I In the Geometry toolbar, click / Polygon.
- 2 In the Settings window for Polygon, locate the Object Type section.
- **3** From the **Type** list, choose **Open curve**.
- **4** Locate the **Coordinates** section. In the table, enter the following settings:

| x (m) | y (m)  |  |  |
|-------|--------|--|--|
| 0     | 0.9*T0 |  |  |
| L0    | 0.9*T0 |  |  |

Bottom Boundaries

- I In the Geometry toolbar, click \( \frac{1}{2} \) Selections and choose Box Selection.
- 2 In the Settings window for Box Selection, type Bottom Boundaries in the Label text field.
- 3 Locate the Geometric Entity Level section. From the Level list, choose Boundary.
- 4 Locate the Box Limits section. In the y maximum text field, type eps.
- 5 Locate the Output Entities section. From the Include entity if list, choose Entity inside box.

Right Boundaries

I Right-click Bottom Boundaries and choose Duplicate.

- 2 In the Settings window for Box Selection, type Right Boundaries in the Label text field.
- 3 Locate the Box Limits section. In the x minimum text field, type LO-eps.
- 4 In the y maximum text field, type Inf.
- 5 In the Geometry toolbar, click **Build All**.
- **6** Click the **Zoom Extents** button in the **Graphics** toolbar.

# ADD MATERIAL

- I In the Home toolbar, click **Add Material** to open the **Add Material** window.
- 2 Go to the Add Material window.
- 3 In the tree, select Built-in>Aluminum.
- 4 Click Add to Global Materials in the window toolbar.
- 5 In the Home toolbar, click Radd Material to close the Add Material window.

#### MATERIALS

Material Link I (matlnk I)

In the Model Builder window, under Component I (compl) right-click Materials and choose More Materials>Material Link.

# SOLID MECHANICS (SOLID)

Fix the left boundary. Then impose a nonuniform load on the upper boundary.

#### Fixed Constraint I

- I In the Model Builder window, under Component I (compl) right-click Solid Mechanics (solid) and choose Fixed Constraint.
- 2 Select Boundaries 1 and 3 only.

#### Boundary Load 1

- I In the Physics toolbar, click 

  Boundaries and choose Boundary Load.
- 2 Select Boundary 5 only.
- 3 In the Settings window for Boundary Load, locate the Force section.
- 4 From the Load type list, choose Force per unit length.
- **5** Specify the  $\mathbf{F}_{L}$  vector as

| 0                             | x |
|-------------------------------|---|
| -1e6[N/m]*((X/L0)^4*(1-X/L0)) | у |

#### MESH I

- I In the Model Builder window, under Component I (compl) click Mesh I.
- 2 In the Settings window for Mesh, locate the Physics-Controlled Mesh section.
- 3 From the Element size list, choose Extremely fine.
- 4 Click **Build All**.

Enable Variable Utilities and use it do define a Mass Properties feature.

#### DEFINITIONS

Mass Properties I (mass I)

- I In the Model Builder window, under Component I (compl) right-click Definitions and choose Physics Utilities>Mass Properties.
- 2 In the Settings window for Mass Properties, locate the Density section.
- 3 From the Density source list, choose From physics interface.

## Tip Displacement

- I In the **Definitions** toolbar, click **Probes** and choose **Point Probe**.
- 2 In the Settings window for Point Probe, type Tip Displacement in the Label text field.
- 3 In the Variable name text field, type pnt\_disp.
- 4 Select Point 7 only.

### STUDY I

Step 1: Stationary

- I In the Model Builder window, under Study I click Step I: Stationary.
- 2 In the Settings window for Stationary, click to expand the Results While Solving section.
- 3 From the Probes list, choose None.

Solve the model without minimization to generate a plot to update while optimizing.

- 4 In the Model Builder window, click Study 1.
- 5 In the Settings window for Study, type Parameter Optimization in the Label text field.
- 6 In the Home toolbar, click **Compute**.

# RESULTS

Parameter Optimization

I In the Settings window for 2D Plot Group, type Parameter Optimization in the Label text field.

- 2 Click to expand the **Title** section. From the **Title type** list, choose **Manual**.
- 3 In the Title text area, type Parameter Optimization eval(mass1.mass) kg.
- **4** Locate the **Plot Settings** section. Clear the **Plot dataset edges** check box.

### Surface I

- I In the Model Builder window, expand the Parameter Optimization node, then click Surface 1.
- 2 In the Settings window for Surface, locate the Expression section.
- **3** In the **Expression** text field, type solid.disp.
- 4 Click to expand the Range section. Select the Manual color range check box.
- **5** In the **Minimum** text field, type **0**.
- 6 In the Maximum text field, type 1.05\*maxDisp.
- 7 Locate the Coloring and Style section. Click Change Color Table.
- 8 In the Color Table dialog box, select Rainbow>RainbowLight in the tree.
- 9 Click OK.

#### Deformation

- I In the Model Builder window, expand the Surface I node, then click Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- **3** Select the **Scale factor** check box. In the associated text field, type 100.

#### Mesh I

- I In the Model Builder window, right-click Parameter Optimization and choose Mesh.
- 2 In the Settings window for Mesh, locate the Coloring and Style section.
- 3 From the Element color list, choose None.

#### Deformation I

- I Right-click Mesh I and choose Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 100.

#### Line 1

- I In the Model Builder window, right-click Parameter Optimization and choose Line.
- 2 In the Settings window for Line, locate the Expression section.
- **3** In the **Expression** text field, type 1.
- 4 Locate the Coloring and Style section. From the Coloring list, choose Uniform.

5 From the Color list, choose Black.

#### Deformation I

- I Right-click Line I and choose Deformation.
- 2 In the Settings window for Deformation, click Add Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)> Solid Mechanics>Load>solid.F\_Ax,solid.F\_Ay - Load (spatial frame).
- **3** Locate the **Expression** section. In the **X component** text field, type u.
- 4 In the Y component text field, type v-1e-8\*solid. FperLengthy.
- 5 Locate the Scale section.
- 6 Select the Scale factor check box. In the associated text field, type 100.

#### Arrow Line 1

- I In the Model Builder window, right-click Parameter Optimization and choose Arrow Line.
- 2 In the Settings window for Arrow Line, locate the Expression section.
- 3 In the **X** component text field, type solid. FperLengthx.
- **4** In the **Y** component text field, type solid. FperLengthy.
- 5 Locate the Coloring and Style section. From the Arrow base list, choose Head.
- 6 Select the Scale factor check box. In the associated text field, type 1e-6.
- 7 Locate the Arrow Positioning section. In the Number of arrows text field, type 160.
- 8 Locate the Coloring and Style section. From the Color list, choose Black.

# Deformation I

- I Right-click Arrow Line I and choose Deformation.
- 2 In the Settings window for Deformation, locate the Scale section.
- 3 Select the Scale factor check box. In the associated text field, type 100.
- 4 In the Parameter Optimization toolbar, click Plot.

### PARAMETER OPTIMIZATION

Setup and compute the solution to the parameter optimization problem.

# **Obtimization**

- I In the Study toolbar, click of Optimization and choose Optimization.
- 2 In the Settings window for Optimization, locate the Optimization Solver section.
- 3 From the Method list, choose COBYLA.

- 4 Click Add Expression in the upper-right corner of the Objective Function section. From the menu, choose Component I (compl)>Definitions>Mass Properties I> compl.massl.mass - Mass - kg.
- 5 Locate the Objective Function section. From the Objective scaling list, choose Initial solution based.
- **6** Locate the **Control Variables and Parameters** section. Click + **Add** twice.
- 7 In the table, enter the following settings:

| Parameter name               | Initial value | Scale | Lower bound | Upper bound |
|------------------------------|---------------|-------|-------------|-------------|
| Yopt I (Y position, point I) | 0             | 1     | 0           | 0.9*T0      |
| Yopt2 (Y position, point 2)  | 0             | 1     | 0           | 0.9*T0      |

- 8 Click Add Expression in the upper-right corner of the Constraints section. From the menu, choose Component I (compl)>Definitions>compl.pnt\_disp - Tip Displacement - m.
- **9** Locate the **Constraints** section. In the table, enter the following settings:

| Expression                 | Lower bound | Upper bound | Evaluate for |
|----------------------------|-------------|-------------|--------------|
| comp1.pnt_disp/<br>maxDisp |             | 1           | Stationary   |

- 10 Locate the Output While Solving section. Select the Plot check box.
- II From the **Probes** list, choose **None**.
- 12 Locate the Optimization Solver section. Find the Solver settings subsection. From the Keep solutions list, choose Only last.
- 13 In the Model Builder window, click Parameter Optimization.
- 14 In the Settings window for Study, locate the Study Settings section.
- **15** Clear the **Generate default plots** check box.
- **16** In the **Study** toolbar, click **Compute**.

# RESULTS

| Parameter_ |               |         |           |     |          |          |
|------------|---------------|---------|-----------|-----|----------|----------|
| Click the  | <b>∔</b> Zoom | Extents | button in | the | Graphics | toolbar. |

Next solve the same problem using shape optimization with a Free Shape Domain and a Polynomial Boundary.

# COMPONENT I (COMPI)

Next solve the same problem using shape optimization with a Free Shape Domain and a Polynomial Boundary.

Free Shape Domain I

- I In the Definitions toolbar, click ? Optimization and choose Shape Optimization> Free Shape Domain.
- 2 In the Settings window for Free Shape Domain, locate the Domain Selection section.
- 3 From the Selection list, choose All domains.

Polynomial Boundary I

- I In the Definitions toolbar, click ? Optimization and choose Shape Optimization> Polynomial Boundary.
- 2 In the Settings window for Polynomial Boundary, locate the Boundary Selection section.
- 3 From the Selection list, choose Bottom Boundaries.
- 4 Click to expand the **Continuity** section. From the Preserve continuity of normals over symmetry boundaries list, choose Disabled.
- 5 From the Preserve continuity of normals between polynomial boundaries list, choose Enabled.
- **6** Locate the **Control Variable Settings** section. In the  $d_{\text{max}}$  text field, type 0.9\*T0.

Symmetry/Roller 1

- I In the Definitions toolbar, click ? Optimization and choose Shape Optimization> Symmetry/Roller.
- 2 In the Settings window for Symmetry/Roller, locate the Boundary Selection section.
- 3 From the Selection list, choose Right Boundaries.

#### ROOT

Add a study for the shape optimization and run it before adding the optimization, so that a plot can be generated for visualizing the results while optimizing.

### ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- 2 Go to the Add Study window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

#### STUDY 2

#### Step 1: Stationary

- I In the Settings window for Stationary, locate the Results While Solving section.
- 2 From the Probes list, choose None.
- 3 In the Model Builder window, click Study 2.
- 4 In the Settings window for Study, locate the Study Settings section.
- 5 Clear the Generate default plots check box.
- 6 In the **Label** text field, type Shape Optimization.
- 7 In the Home toolbar, click **Compute**.

#### RESULTS

### Shape Optimization

- I In the Model Builder window, right-click Parameter Optimization and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Shape Optimization in the Label text field.
- 3 Locate the Title section. In the Title text area, type Shape Optimization eval(mass1.mass) kg.
- 4 Locate the Data section. From the Dataset list, choose Shape Optimization/ Solution 4 (sol4).

# PARAMETER OPTIMIZATION

# **Optimization**

In the Model Builder window, under Parameter Optimization right-click Optimization and choose Copy.

#### SHAPE OPTIMIZATION

In the Model Builder window, right-click Shape Optimization and choose Paste Optimization.

#### **Obtimization**

- I In the Settings window for Optimization, locate the Optimization Solver section.
- 2 From the Method list, choose IPOPT.
- 3 Locate the Control Variables and Parameters section. Ctrl-click to select table rows 1 and
- 4 Click Delete.

- 5 Locate the Output While Solving section. From the Plot group list, choose Shape Optimization.
- 6 In the Home toolbar, click **Compute**.

#### RESULTS

Shape Optimization

- I In the Shape Optimization toolbar, click Plot.
- 2 Click the **Zoom Extents** button in the **Graphics** toolbar.

# COMPONENT I (COMPI)

Finally, set up a topology optimization problem using the density method. Start by adding the Density Model feature, use it to define a penalized Young's modulus in a alternative Linear Elastic Material.

Density Model I (dtopol)

- I In the **Definitions** toolbar, click ?? **Optimization** and choose **Topology Optimization>** Density Model.
- 2 Select Domain 1 only.
- 3 In the Settings window for Density Model, locate the Control Variable Discretization section.
- 4 From the Element order list, choose Constant.
- **5** Locate the **Control Variable Initial Value** section. In the  $\theta_0$  text field, type 1.

Prescribed Material I

- I In the **Definitions** toolbar, click ? **Optimization** and choose **Topology Optimization>** Prescribed Material.
- 2 Select Domain 2 only.

#### MATERIALS

Topology Link I (toplnk I)

- I In the Model Builder window, under Component I (compl) right-click Materials and choose More Materials>Topology Link.
- 2 In the Settings window for Topology Link, locate the Geometric Entity Selection section.
- 3 From the Selection list, choose All domains.
- 4 Locate the Link Settings section. From the Topology source list, choose Density Model I (dtopol).

#### ROOT

Add a study for the optimization. Follow the (now) usual procedure for creating a plot to be used in the optimization.

#### ADD STUDY

- I In the Home toolbar, click Add Study to open the Add Study window.
- **2** Go to the **Add Study** window.
- 3 Find the Studies subsection. In the Select Study tree, select General Studies>Stationary.
- 4 Click Add Study in the window toolbar.
- 5 In the Home toolbar, click Add Study to close the Add Study window.

#### TOPOLOGY OPTIMIZATION

- I In the Model Builder window, click Study 3.
- 2 In the Settings window for Study, type Topology Optimization in the Label text field.
- 3 Locate the Study Settings section. Clear the Generate default plots check box.

# Steb 1: Stationary

- I In the Model Builder window, under Topology Optimization click Step I: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 In the table, clear the Solve for check box for Deformed geometry (Component 1).
- 4 Locate the Results While Solving section. From the Probes list, choose None.
- 5 In the Home toolbar, click **Compute**.

#### RESULTS

#### Topology Optimization

- I In the Model Builder window, right-click Shape Optimization and choose Duplicate.
- 2 In the Settings window for 2D Plot Group, type Topology Optimization in the Label text field.
- 3 Locate the **Title** section. In the **Title** text area, type Topology Optimization eval(mass1.mass) kg.
- 4 Locate the Data section. From the Dataset list, choose Topology Optimization/ Solution 5 (sol5).

#### Filter I

- I In the Model Builder window, expand the Topology Optimization node.
- 2 Right-click Surface I and choose Filter.

- 3 In the Settings window for Filter, locate the Element Selection section.
- 4 In the Logical expression for inclusion text field, type 0.5<dtopo1.theta.

#### SHAPE OPTIMIZATION

# Optimization

In the Model Builder window, under Shape Optimization right-click Optimization and choose Copy.

#### TOPOLOGY OPTIMIZATION

In the Model Builder window, right-click Topology Optimization and choose Paste Optimization.

### Optimization

- I In the Settings window for Optimization, locate the Optimization Solver section.
- **2** From the **Method** list, choose **MMA**.
- 3 Find the Solver settings subsection. In the Maximum number of model evaluations text field, type 100.
  - Generally there is no point converging topology optimization in a strict sense, because the topology stops changing much earlier.
- 4 Locate the Control Variables and Parameters section. In the table, clear the Solve for check box for Polynomial Boundary I.
- 5 Locate the Output While Solving section. From the Plot group list, choose Topology Optimization.
- 6 In the Home toolbar, click **Compute**.

#### RESULTS

Topology Optimization Click the | Zoom Extents button in the Graphics toolbar.

#### PARAMETER OPTIMIZATION

#### **Optimization**

Disable the Density Module control variables in the Parameter Optimization and Shape **Optimization** studies.

I In the Model Builder window, under Parameter Optimization click Optimization.

- 2 In the Settings window for Optimization, locate the Control Variables and Parameters section.
- 3 In the table, clear the Solve for check boxes for Density Model I (dtopol) and Polynomial Boundary I.

# SHAPE OPTIMIZATION

# **Obtimization**

- I In the Model Builder window, under Shape Optimization click Optimization.
- 2 In the Settings window for Optimization, locate the Control Variables and Parameters section.
- 3 In the table, clear the Solve for check box for Density Model I (dtopol).

#### PARAMETER OPTIMIZATION

#### Steb 1: Stationary

- I In the Model Builder window, under Parameter Optimization click Step 1: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 Select the Modify model configuration for study step check box.
- 4 In the tree, select Component I (compl)>Topology Optimization.
- 5 Click O Disable in Solvers.
- 6 In the tree, select Component I (compl)>Deformed Geometry, Controls material frame.
- 7 Click ( Disable in Solvers.

#### SHAPE OPTIMIZATION

#### Step 1: Stationary

- I In the Model Builder window, under Shape Optimization click Step 1: Stationary.
- 2 In the Settings window for Stationary, locate the Physics and Variables Selection section.
- 3 Select the Modify model configuration for study step check box.
- 4 In the tree, select Component I (compl)>Topology Optimization.
- 5 Click O Disable in Solvers.

Generate a model thumbnail.