

# LiveLink™ *for* PTC Creo Parametric™

User's Guide

# LiveLink™ for PTC Creo Parametric™ User's Guide

© 2012–2025 COMSOL

Protected by patents listed on [www.comsol.com/patents](http://www.comsol.com/patents), or see Help > About COMSOL Multiphysics on the File menu in the COMSOL Desktop for less detailed lists of U.S. Patents that may apply. Patents pending.

This Documentation and the Programs described herein are furnished under the COMSOL Software License Agreement ([www.comsol.com/comsol-license-agreement](http://www.comsol.com/comsol-license-agreement)) and may be used or copied only under the terms of the license agreement. Portions of this software are owned by Siemens Industry Software, Inc. © 1986–2025. All Rights Reserved. Portions of this software are owned by Spatial Corp. © 1989–2025. All Rights Reserved.

COMSOL, the COMSOL logo, COMSOL Multiphysics, COMSOL Desktop, COMSOL Compiler, COMSOL Server, and LiveLink are either registered trademarks or trademarks of COMSOL AB. ACIS and SAT are registered trademarks of Spatial Corporation. CATIA is a registered trademark of Dassault Systèmes or its subsidiaries in the US and/or other countries. Parasolid is a trademark or registered trademark of Siemens Industry Software, Inc. or its subsidiaries in the United States and in other countries. PTC and Creo are trademarks or registered trademarks of PTC or its subsidiaries in the U.S. and in other countries. All other trademarks are the property of their respective owners, and COMSOL AB and its subsidiaries and products are not affiliated with, endorsed by, sponsored by, or supported by those or the above non-COMSOL trademark owners. For a list of such trademark owners, see [www.comsol.com/trademarks](http://www.comsol.com/trademarks).

Version: COMSOL 6.4

## Contact Information

Visit the Contact COMSOL page at [www.comsol.com/contact](http://www.comsol.com/contact) to submit general inquiries or search for an address and phone number. You can also visit the Worldwide Sales Offices page at [www.comsol.com/contact/offices](http://www.comsol.com/contact/offices) for address and contact information.

If you need to contact Support, an online request form is located on the COMSOL Access page at [www.comsol.com/support/case](http://www.comsol.com/support/case). Useful links:

- Support Center: [www.comsol.com/support](http://www.comsol.com/support)
- Product Download: [www.comsol.com/product-download](http://www.comsol.com/product-download)
- Product Updates: [www.comsol.com/product-update](http://www.comsol.com/product-update)
- COMSOL Blog: [www.comsol.com/blogs](http://www.comsol.com/blogs)
- Discussion Forum: [www.comsol.com/forum](http://www.comsol.com/forum)
- Events: [www.comsol.com/events](http://www.comsol.com/events)
- COMSOL Video Gallery: [www.comsol.com/videos](http://www.comsol.com/videos)
- Support Knowledge Base: [www.comsol.com/support/knowledgebase](http://www.comsol.com/support/knowledgebase)
- Learning Center: [www.comsol.com/support/learning-center](http://www.comsol.com/support/learning-center)

Part number: CM023101

# C o n t e n t s

## Chapter 1: Introduction

<b>About the Product</b>	<b>8</b>
Overview of the Included Geometry Tools and Features. . . . .	8
Overview of the User's Guide. . . . .	9
Where Do I Access the Documentation and Application Libraries?. . . . .	10

## Chapter 2: The LiveLink™ Interface

<b>The LiveLink Add-In and the COMSOL Multiphysics Tab</b>	<b>17</b>
The COMSOL Parameter Selection Window . . . . .	17
The COMSOL Selections Window . . . . .	18
The COMSOL Component Selection Window . . . . .	19
The COMSOL Synchronize Offline Window . . . . .	20
<b>Synchronizing the Geometry</b>	<b>22</b>
The LiveLink Node . . . . .	22
<b>Connecting to COMSOL Server™ and Running Applications</b>	<b>30</b>
Overview. . . . .	30
Connecting to a COMSOL Server™ . . . . .	31
Running Applications with COMSOL Multiphysics®. . . . .	31

## Chapter 3: Geometry Tools and Features

<b>Geometry Representation</b>	<b>34</b>
Working with the CAD Kernel . . . . .	34
Converting Objects to COMSOL Kernel Representation . . . . .	35
Converting Objects to CAD Kernel Representation . . . . .	36

<b>Importing and Exporting CAD Files</b>	<b>38</b>
Importing 3D CAD Files . . . . .	38
Exporting Objects to 3D CAD Formats . . . . .	45
<b>Repairing and Defeaturing</b>	<b>47</b>
Check . . . . .	48
Delete Fillets . . . . .	49
Delete Holes . . . . .	51
Delete Short Edges . . . . .	53
Delete Sliver Faces . . . . .	55
Delete Small Faces . . . . .	56
Delete Spikes . . . . .	58
Detach Faces . . . . .	60
Detect Interferences . . . . .	61
Repair . . . . .	64
Replace Faces . . . . .	66
<b>Creating and Modifying Geometries</b>	<b>68</b>
Cap Faces . . . . .	68
Knit to Solid . . . . .	69
Projection . . . . .	70

## Chapter 4: Programming and Command Reference

<b>Defeaturing Tools</b>	<b>74</b>
Defeaturing Tools — Finding and Deleting Small Details . . . . .	74
Defeaturing Tools — Detach Faces . . . . .	77
Defeaturing Tools — Detect Interferences . . . . .	78
Defeaturing Tools — Replace Faces. . . . .	79
<b>Summary of Commands</b>	<b>80</b>
<b>Commands Grouped by Function</b>	<b>81</b>
Commands for Creating and Modifying Geometry in 2D . . . . .	81
Commands for Defeaturing . . . . .	81
Commands for File Import, Export, Conversion, and Repair . . . . .	81

Commands for Creating and Modifying Geometry in 3D . . . . .	82
Commands for Interfacing CAD Software . . . . .	82

**Commands in Alphabetical Order 83**

CapFaces . . . . .	83
Check . . . . .	84
ConvertToCOMSOL . . . . .	85
DeleteFillet . . . . .	86
DeleteHoles . . . . .	88
DeleteShortEdges . . . . .	91
DeleteSliverFaces . . . . .	94
DeleteSmallFaces . . . . .	97
DeleteSpikes . . . . .	99
DetachFaces . . . . .	102
DetectInterferences . . . . .	105
Export, ExportFinal . . . . .	106
Import 3D CAD . . . . .	108
Knit . . . . .	116
LiveLinkPTCCreoParametric . . . . .	118
Projection . . . . .	122
Repair . . . . .	124
ReplaceFaces . . . . .	126

**Index 129**





# Introduction

Welcome to the LiveLink™ *for* PTC Creo Parametric™ User's Guide! This guide details the functionality of this optional package that extends the COMSOL Multiphysics® modeling environment with additional tools and features to use geometry from the PTC Creo Parametric™ CAD system for simulation, to import and export geometry using the most common 3D CAD file formats, and to repair, defeature, and modify geometry.

This introductory chapter contains an overview of the capabilities of the module, including a summary of the included geometry features, an overview of this guide, and a description of where to find documentation and model examples.

# About the Product

## *Overview of the Included Geometry Tools and Features*






---

















LiveLink™ for PTC Creo Parametric™ enables modeling using 3D designs synchronized from the PTC Creo Parametric™ CAD software. The included LiveLink™ interface builds on an associative transfer of the geometry from the CAD program to the COMSOL model.

Through the LiveLink interface, you can modify the geometry in the CAD program by sending the name and value of a dimension or parameter to PTC Creo Parametric. There the geometry is updated and regenerated, before finally being transferred back to COMSOL Multiphysics. The associative transfer assures that all your settings on the geometry are retained, just as they were before the modification.

If you rather use file import to get your designs into COMSOL Multiphysics, the product also supports import of the most common 3D CAD file formats: *ACIS*®, *AutoCAD*®, *IGES*, *Inventor*®, *NX*®, *Parasolid*®, *PTC Creo Parametric*™, *PTC Pro/ENGINEER*®, *SOLIDWORKS*®, and *STEP*. In addition, support for *CATIA*® *V5* is available as a separate add-on. To exchange data with CAD packages, you can export your geometry to the *ACIS*®, *IGES*, *Parasolid*®, and *STEP* file formats.

Finally, the product provides a dedicated geometric kernel, the *CAD kernel*, and a wide range of tools for you to prepare an imported 3D design for meshing and analysis. You can interactively search for and remove geometric features, for example, fillets, holes, slivers, small faces, and short edges. You can also modify objects by detaching a portion to form an additional computational domain, or by creating a fluid domain for computation, in case the CAD design only includes the solid parts.

GEOMETRY FEATURE	ICON	DESCRIPTION
 <b>2D Geometry Features</b>		
Projection		Project 3D objects and entities to a work plane
 <b>3D Geometry Features</b>		
Cap Faces		Generate faces from edges to fill gaps and create solid objects, or to partition solids
Check		Check CAD objects for faults, for example tolerance issues and invalid entities

GEOMETRY FEATURE	ICON	DESCRIPTION
Convert to COMSOL		Convert to the COMSOL kernel representation
Replace Faces		Delete and replace faces
Delete Fillets		Search for and delete fillets
Delete Holes		Search for and delete holes
Delete Short Edges		Search for and delete short edges
Delete Sliver Faces		Search for and delete sliver faces
Delete Small Faces		Search for and collapse small faces
Delete Spikes		Search for and delete spikes from faces
Detach Faces		Detach faces to form a new object from them
Detect Interferences		Search for interferences, such as intersections, gaps, touches, and containments, between objects
Export		Export geometry objects to 3D CAD file formats
Import		Import geometry objects from 3D CAD file formats
Knit to Solid		Knit surface objects to form solid or surface object
LiveLink for PTC Creo Parametric		Synchronize geometry between PTC Creo Parametric and COMSOL
Repair		Repair defects and remove small details from 3D objects
Replace Faces		Replace faces by growing surrounding faces or creating new faces

### *Overview of the User's Guide*

This documentation covers LiveLink™ for PTC Creo Parametric™ and the add-on for file import of CATIA® V5 files. Instructions on how to use the geometry modeling tools in COMSOL Multiphysics® in general are included with the *COMSOL Multiphysics Reference Manual*. To help you get started with modeling this module is also accompanied by the quick-start guide *Introduction to LiveLink™ for PTC Creo Parametric™*.

### *Where Do I Access the Documentation and Application Libraries?*

A number of internet resources have more information about COMSOL, including licensing and technical information. The electronic documentation, topic-based (or

context-based) help, and the application libraries are all accessed through the COMSOL Desktop.




If you are reading the documentation as a PDF file on your computer, the [blue links](#) do not work to open an application or content referenced in a different guide. However, if you are using the Help system in COMSOL Multiphysics, these links work to other modules (as long as you have a license), application examples, and documentation sets.

## THE DOCUMENTATION AND ONLINE HELP



The *COMSOL Multiphysics Reference Manual* describes all core physics interfaces and functionality included with the COMSOL Multiphysics license. This book also has instructions about how to use COMSOL Multiphysics and how to access the electronic Documentation and Help content.


### *Opening Topic-Based Help*

The Help window is useful as it is connected to many of the features on the GUI. To learn more about a node in the Model Builder, or a window on the Desktop, click to highlight a node or window, then press F1 to open the Help window, which then displays information about that feature (or click a node in the Model Builder followed by the **Help** button (  ). This is called *topic-based* (or *context*) *help*.


Win


To open the **Help** window:

- In the **Model Builder**, **Application Builder**, or **Physics Builder** click a node or window and then press F1.
- On any toolbar (for example, **Home**, **Definitions**, or **Geometry**), hover the mouse over a button (for example, **Add Physics** or **Build All**) and then press F1.
- From the **File** menu, click **Help** (  ).
- In the upper-right corner of the COMSOL Desktop, click the **Help** (  ) button.

Mac	<p>To open the <b>Help</b> window:</p> <ul style="list-style-type: none"> <li>• In the <b>Model Builder</b> or <b>Physics Builder</b> click a node or window and then press F1.</li> </ul>
Linux	<ul style="list-style-type: none"> <li>• In the main toolbar, click the <b>Help</b> (  ) button.</li> <li>• From the main menu, select <b>Help&gt;Help</b>.</li> </ul>

*Opening the Documentation Window*

Win	<p>To open the <b>Documentation</b> window:</p> <ul style="list-style-type: none"> <li>• Press Ctrl+F1.</li> <li>• From the <b>File</b> menu select <b>Help&gt;Documentation</b> (  ).</li> </ul>
-----	--

Mac	<p>To open the <b>Documentation</b> window:</p> <ul style="list-style-type: none"> <li>• Press Ctrl+F1.</li> <li>• In the main toolbar, click the <b>Documentation</b> (  ) button.</li> <li>• From the main menu, select <b>Help&gt;Documentation</b>.</li> </ul>
Linux	

**THE APPLICATION LIBRARIES WINDOW**

Each application includes documentation with the theoretical background and step-by-step instructions to create a model application. The applications are available in COMSOL as MPH-files that you can open for further investigation. You can use the step-by-step instructions and the actual applications as a template for your own modeling and applications. In most models, SI units are used to describe the relevant properties, parameters, and dimensions in most examples, but other unit systems are available.

Once the Application Libraries window is opened, you can search by name or browse under a module folder name. Click to view a summary of the application and its properties, including options to open it or a PDF document.


	<p><a href="#">The Application Libraries Window</a> in the <i>COMSOL Multiphysics Reference Manual</i>.</p>
---	---

### Opening the Application Libraries Window

To open the **Application Libraries** window (  ):

Win


- In the **Home** toolbar, click **Windows** and select **Application Libraries**.  
When the toolbar is compressed, you sometimes find it under **Layout>Windows**.
- From the **File** menu select **Application Libraries**.

To include the latest versions of model examples, from the **File>Help** menu select (  ) **Update COMSOL Application Libraries**.

Mac

From the **File** or **Windows** menu select **Application Libraries**.

Linux

To include the latest versions of model examples, from the **Help** menu select (  ) **Update COMSOL Application Libraries**.

### CONTACTING COMSOL BY EMAIL

For general product information, contact COMSOL at [info@comsol.com](mailto:info@comsol.com).

To receive technical support from COMSOL for the COMSOL products, please contact your local COMSOL representative or send your questions to [support@comsol.com](mailto:support@comsol.com). An automatic notification and case number is sent to you by email.

## COMSOL WEBSITES

COMSOL website	<a href="http://www.comsol.com">www.comsol.com</a>
Contact COMSOL	<a href="http://www.comsol.com/contact">www.comsol.com/contact</a>
COMSOL Access	<a href="http://www.comsol.com/access">www.comsol.com/access</a>
Support Center	<a href="http://www.comsol.com/support">www.comsol.com/support</a>
Product Download	<a href="http://www.comsol.com/product-download">www.comsol.com/product-download</a>
Product Updates	<a href="http://www.comsol.com/product-update">www.comsol.com/product-update</a>
COMSOL Blog	<a href="http://www.comsol.com/blogs">www.comsol.com/blogs</a>
Discussion Forum	<a href="http://www.comsol.com/forum">www.comsol.com/forum</a>
Events	<a href="http://www.comsol.com/events">www.comsol.com/events</a>
COMSOL Video Gallery	<a href="http://www.comsol.com/videos">www.comsol.com/videos</a>
Support Knowledge Base	<a href="http://www.comsol.com/support/knowledgebase">www.comsol.com/support/knowledgebase</a>



## The LiveLink™ Interface

When running the COMSOL Multiphysics® software and the PTC Creo Parametric™ CAD software side by side you can associatively transfer geometry from the CAD software to COMSOL Multiphysics using the LiveLink™ interface. In the other direction, from COMSOL Multiphysics to the CAD software, the interface enables you to update the dimensions in the CAD file. If running the software side by side is not available — for example, when you want to run your COMSOL Multiphysics simulation on a different platform from where your CAD software is installed— the LiveLink interface also provides a file-based offline synchronization mode. After synchronization you can apply further geometry operations to prepare the synchronized geometry objects for analysis — for example, by removing details.

You can also analyze designs using simulation apps that connect to PTC Creo Parametric™ by utilizing the LiveLink interface. With the provided tools you can easily connect to COMSOL Server™ from within PTC Creo Parametric™ to browse and run simulation apps, including those that use geometry synchronized with the CAD software.

This section includes the following topics:

- [The LiveLink Add-In and the COMSOL Multiphysics Tab](#)

- Synchronizing the Geometry
- Connecting to COMSOL Server™ and Running Applications

# The LiveLink Add-In and the COMSOL Multiphysics Tab

When you install LiveLink™ for PTC Creo Parametric™ an add-in is registered with PTC Creo Parametric™ during the install process.



You can also install and register the LiveLink add-in by installing the COMSOL Client, available for download from [www.comsol.com](http://www.comsol.com). Such an installation enables the functionality for preparing designs for synchronization, saving files for offline synchronization, and running simulation apps that synchronize geometry.

In the user interface of the CAD software, the add-in enables the COMSOL Multiphysics tab, which contains the functionality to configure the CAD design for synchronization:

- [The COMSOL Parameter Selection Window](#), where you can select parameters in PTC Creo Parametric™ to control from the simulation
- [The COMSOL Selections Window](#), which you can use to define selections on the geometry in PTC Creo Parametric™
- [The COMSOL Component Selection Window](#), where you can select the assembly components to synchronize
- [The COMSOL Synchronize Offline Window](#), where you can save synchronization files from PTC Creo Parametric™.

## *The COMSOL Parameter Selection Window*

In PTC Creo Parametric™, right-click a feature in the model tree, then select **COMSOL Parameter Selection** to open the window with the same name. Parameters for the selection are displayed in the upper table, **Feature parameters**. Click the **Change Selection** button to select a different feature. Select the feature from the model tree, then click **OK** in the **Select** window to return to the **COMSOL Parameter Selection** window. Select parameters from the **Feature parameters** table, then click the **Add** button to link them to COMSOL. Linked parameters are listed in the lower table, **Parameters to add to COMSOL model**. All types of parameters can be selected, but only parameters that are

not locked or driven by a relation are possible to control from a COMSOL model. Linking parameters that are locked or relation driven enables using their values in COMSOL model definitions.

Parameters listed in the **Parameters to add to COMSOL model** table will be saved in the PTC Creo Parametric™ file next time you save the file. To remove saved parameters from the file clear the table first and then save the file. Click the **Revert to Saved** button to reload the parameters from the saved PTC Creo Parametric™ file. Confirm your changes by clicking the **OK** button.

For additional information about parameters in CAD files see the PTC Creo Parametric™ documentation.

### *The COMSOL Selections Window*

---

In the PTC Creo Parametric™ user interface, click the **Selections** button on the **COMSOL Multiphysics** tab to open the **COMSOL Selections** window where you can set up user-defined selections of geometric entities to be synchronized with the COMSOL® model.

Alternatively, to create a user-defined selection right-click a feature or component in the PTC Creo Parametric™ model tree, and choose **COMSOL Selections**. This also opens the **COMSOL Selections** window, and adds the new selection to the list of **Selections**. You can add additional items to the selection by selecting on the geometry or in the tree.

The **Selections** list contains the list of user-defined selections for the active file in PTC Creo Parametric™. For each selection from the list you can review and modify the entities included in the selection. These appear in the **Entities** list. You can also edit the selection name, which is displayed in the **Selection name** field.

The following is a list of geometric entities or model elements that can be selected on a PTC Creo Parametric™ design:

- solid or surface bodies
- components that can be parts, or subassemblies of an assembly
- features
- entities, such as faces, edges, and points

If you are using PTC Creo Parametric™ together with the Windchill® PLM software, only the selection of assembly components is supported when synchronizing assemblies that have not been checked out.

To create a new selection click the **New** ( + ) button. A selection can only contain entities of the same type, for example, only faces or only points. The first item added to a selection determines the type for the selection. Change the selection mode in PTC Creo Parametric™ to select different entity types, and use the model tree to select assembly components, features and solid bodies. The toggle buttons above the **Selections** list filter which selections are displayed based on their type. To remove a selection from the **Selections** list right-click the selection, then select **Delete**. Selecting **Clear** deletes all selections from the list.

To remove an item from a selection right-click the item in the **Entities** list, then select **Delete**.

To turn off the synchronization of the material selections clear the **Generate selections from materials** checkbox. After the next synchronization the selections based on materials will not appear in the COMSOL model.

Selections are automatically saved in the PTC Creo Parametric™ file the next time you save the file. To reload the selections saved in the PTC Creo Parametric™ file click the **Revert to Saved** button.

To confirm changes and close the **COMSOL Selections** window click **OK**. This step is necessary before synchronizing between PTC Creo Parametric™ and COMSOL to transfer the selections.

### *The COMSOL Component Selection Window*

---

When working with CAD assemblies, in the PTC Creo Parametric™ user interface, click the **Components** button on the **COMSOL Multiphysics** tab to open the **COMSOL Component Selection** window where you can select the assembly components to synchronize with the COMSOL® model.

From the **Synchronize** list select **Visible** (default) to synchronize all assembly parts that are not hidden. Note that suppressed parts are never synchronized. Set **Synchronize to Selected** to choose from the displayed assembly tree the parts to be synchronized with the COMSOL model. The assembly tree lists both hidden and visible components, both of which can be selected for synchronization. Parts that are suppressed in the assembly do not appear in the displayed tree, and cannot be synchronized.

Every time you switch **Synchronize** from **Visible** to **Selected** the selection in the assembly tree is reset to include only the visible assembly components.

The synchronization settings you make in this window are automatically saved in the PTC Creo Parametric™ file the next time you save your work. Click the **Revert to Saved** button to reload the information from the saved file. Confirm your changes by clicking the **OK** button, or click **Cancel** to discard any changes and close the window.

### *The COMSOL Synchronize Offline Window*

---

In the PTC Creo Parametric™ user interface, click the **Synchronize Offline** button on the **COMSOL Multiphysics** tab to open the **COMSOL Synchronize Offline** window where you can save synchronization files that can be loaded by the LiveLink feature in a COMSOL model.

Before saving offline synchronizations files consider linking parameters for control from the COMSOL model, see [The COMSOL Parameter Selection Window](#), and configuring selections on the geometry that can make it more efficient to define physics, see [The COMSOL Selections Window](#).

From the **Synchronization** list select **Initial** (default) or **Requested**. If you select **Initial** the synchronization file will contain the current geometry. Select **Requested** to load a request file, and save a synchronization file with geometries generated for the parameter values in the request file.

#### **SETTINGS FOR INITIAL SYNCHRONIZATION**

Select to **Synchronize material data** together with the geometry. With this option the material properties defined in the synchronized part or assembly components are included in the synchronization file.

Select the type of objects to include in the synchronized geometry. Only the types of objects that are selected from the **Solids** and **Surfaces** checkboxes are transferred during a synchronization. Performance can be improved for very large geometries that contain more than one type of objects, by turning off the synchronization of types of objects that are not necessary for the simulation. Note that you can also exclude selected objects from being synchronized by hiding them.

#### **SETTINGS FOR REQUESTED SYNCHRONIZATION**

Click **Browse** to load a request file that was saved from a LiveLink feature in COMSOL Multiphysics. Once the file is loaded you can see information displayed about the requested document and the requested parameter values. Click one of the rows in the **Parameters** table to display a larger table. The fields in the **Requested Value** column will contain many values if the loaded request is for a parametric sweep, or if many requests

have been saved in the request file. In the **Current Value** column you can see the values that the parameters currently have in the CAD model. An empty field in this column means that the corresponding parameter could not be found in the CAD model.

To generate a synchronization file according to the request do not change the default settings, that is, **Synchronize with** should be set to **Requested document** and **Use parameter values** should be set to **Requested**.

To generate a synchronization file for the currently active file in PTC Creo Parametric choose **Active document** from the **Synchronize with** list. By setting **Use parameter values** to **Current** the synchronization file will contain the geometry built using the parameter values displayed in the **Current Value** column.

Click **Save** to save the synchronization file and close the window. This may take some time for parametric sweeps for which the geometry needs to be rebuilt many times.

For **Initial** synchronizations you can also click **Append** to add a synchronization to an already saved synchronization file. You can for example save a synchronization file, then manually change parameter values, rebuild the CAD model, then open this window again to append the new geometry to the previously saved file.

To close the window without saving click **Cancel**.

# Synchronizing the Geometry

To initiate the geometry synchronization between PTC Creo Parametric™ and COMSOL Multiphysics® use the **LiveLink for PTC Creo Parametric** feature node.

Before synchronization consider to review and change the settings for [The LiveLink Node](#), and to configure the synchronization of parameters and selections in the PTC Creo Parametric™ file as described in the section [The LiveLink Add-In and the COMSOL Multiphysics Tab](#).

## *The LiveLink Node*

---

The **LiveLink for PTC Creo Parametric** feature, available from the **LiveLink** menu in the **Home** toolbar, synchronizes the geometry between PTC Creo Parametric™ and COMSOL Multiphysics®.

For geometry synchronization to take place both COMSOL Multiphysics and PTC Creo Parametric™ need to be running, and the CAD file needs to be open in the CAD software. When this is not possible, [Offline Synchronization](#) is available so that you can, from the CAD software, save synchronization files, which you can load into the LiveLink node.



A list of compatible versions of PTC Creo Parametric™ can be found at: [www.comsol.com/system-requirements/module](http://www.comsol.com/system-requirements/module).

---

During synchronization the LiveLink™ interface initiates a rebuild of the CAD geometry in PTC Creo Parametric™ based on the parameter values set in the COMSOL Multiphysics® model, then associatively transfers the rebuilt geometry to the model to ensure that physics and other model settings are retained on the geometric entities where they were originally defined.

In the geometry sequence of the model the LiveLink node signifies a geometry synchronized from the CAD software, and in many aspects it is just like any other geometry operation. It can be combined with other operations that may appear both before and after the LiveLink node in the sequence.

Synchronized geometry objects are represented using the Parasolid® geometry kernel inside COMSOL Multiphysics. Thus, you can apply all the tools and features for defeaturing and geometry modification as included with this LiveLink™ product.

## THE SYNCHRONIZE SECTION

To specify which CAD document to synchronize use the **Synchronize with** list. Select **Active document** to synchronize the open and active CAD document in PTC Creo Parametric™. For the initial synchronization after adding a LiveLink™ node, **Active document** is the only available setting. For subsequent synchronizations the **Specified document** option becomes selected instead. Using this setting the CAD document specified after **Document** will be synchronized provided that it is open in PTC Creo Parametric™. To synchronize a new CAD document switch to the **Active document** setting. The name of the CAD document is automatically determined during synchronization with the **Active document** setting.



---

When running parametric optimization studies or parametric sweeps, the CAD file needs to remain open in PTC Creo Parametric™ until the solver completes.

---

The LiveLink interface also determines the **Instance** and **Simplified representation** used in the synchronized PTC Creo Parametric™ document when **Synchronize with** is set to **Active document**. To make sure that the CAD document will be synchronized in the same state during subsequent synchronizations, the **Specified document** alternative can be used. With this option the interface automatically activates the last synchronized instance and simplified representation. To be able to synchronize the CAD document in a different state, first make the switch to the desired instance or simplified representation in PTC Creo Parametric™, then from the **Synchronize with** list select **Active document**.

For information on how to use instances to manages configurations for parts and assemblies, and how to use simplified representations see the PTC Creo Parametric™ documentation.

You can also select to **Synchronize material data** together with the geometry. With this option the interface imports the material properties defined in the synchronized part or assembly components, and the software creates corresponding **Material** nodes in the component. The input selection in the generated **Material** nodes is set to the material selections that are also created during synchronization; see [Selections](#), for more information.

To initiate a synchronization click the **Synchronize** button. This sends parameter value pairs to PTC Creo Parametric™, then retrieves the regenerated geometry objects. Synchronization can also be triggered by clicking a build button when there are changed settings in the LiveLink node, or there are changed parameter values.


Synchronization is automatic when running an optimization study or a parametric sweep.

By default, only the objects that are visible in the PTC Creo Parametric™ user interface are synchronized. For CAD assemblies you can also select the parts to synchronize without changing their visibility, see how in the section [The COMSOL Component Selection Window](#).

Select the **Offline synchronization** checkbox to enable the **Offline Synchronization** section where you can load synchronization files that you have prepared in advance using the LiveLink tools in PTC Creo Parametric™. Such offline synchronization files can contain the geometry, selections and parameters for several synchronizations, including parameter sweeps.

### OFFLINE SYNCHRONIZATION

Use offline synchronization when you do not have the possibility to run the CAD software and COMSOL Multiphysics on the same computer. For example, to run a parametric sweep when COMSOL Multiphysics is installed on a Linux or macOS computer, you can, in the CAD software, prepare and save in advance a synchronization file with the geometries needed for the sweep. In COMSOL Multiphysics, in the LiveLink node, you can load the synchronization file, and compute the parametric sweep.


To load a synchronization file, from the **Offline Synchronization** toolbar, click **Receive Synchronization File** (  ). Browse to the file and click open to load the geometry, parameters and selections from the file. Synchronization files may contain one or several synchronizations, including synchronizations generated in response to a requested parameter sweep.





To generate synchronization files use the functionality provided by the LiveLink add-in inside PTC Creo Parametric™, see [The COMSOL Synchronize Offline Window](#).

---

If the loaded synchronization file contains a parametric sweep the number of parameter tuples in the file is displayed under **Receive**. After the file is loaded, you can go to the **Study** node that contains the parametric sweep for which the synchronization was requested, and click **Compute** to run the parametric sweep.

In case a loaded synchronization file contains several synchronizations you can see the number of synchronizations left in the file under **Receive**. To load the next synchronization from the file click **Load Next Synchronization** (  ).

To request a synchronization click **Request Synchronization** (  ). You can, for example, under **Global Definitions > Parameters**, change the value of a parameter that is synchronized (see [Parameters](#)), and then generate a synchronization request. The response you will generate in PTC Creo Parametric™ will contain the updated geometry according to the parameter value in the request. To save another request to the previously saved request file click **Append to Request File** (  ). To generate a request for a parametric sweep select one of the available sweeps from the **Parametric sweep to request** list, and then click **Request Synchronization** to save the request.

## PARAMETERS

Parameters that take part in the synchronization are specified in the **Parameters in CAD Package** section. Based on the transferred parameter and value pairs in the **Controllable parameters** table, the CAD model is automatically rebuilt in PTC Creo Parametric™ and transferred back to COMSOL Multiphysics®. This way you can control dimensions of the CAD design, for both parts and assemblies, and their components.

Together with the updated geometry, updated values of the parameters listed in the **Read-only parameters** table are also transferred from the CAD software. Read-only parameters are defined by a formula in PTC Creo Parametric™, and therefore not possible to control without breaking the CAD design. However these parameters can be used to set up the simulation.

Clicking **Synchronize** also retrieves parameters that not yet appear in the tables under the **Parameter in CAD Package** section but have been selected to be linked to COMSOL® from the PTC Creo Parametric™ file. As part of this process a corresponding global parameter is automatically generated in the model.

In both the **Controllable parameters** and **Read-only parameters** tables, the **CAD name** column holds the names of parameters in the CAD file, whereas the **COMSOL name** and **COMSOL value** columns contain the name and value, respectively, of corresponding global parameters in the model, defined under **Global Definitions > Parameters** in the model tree. Global parameters can be controlled by the parametric solver to perform parametric sweeps. During synchronization of controllable parameters COMSOL evaluates the corresponding global parameters and sends the resulting value to PTC Creo Parametric™. Click the symbol in the **Sync** column to turn on or off the synchronization of a parameter.

Unless a unit is specified the updated parameters are assumed to have units as defined in the PTC Creo Parametric™ file.

### *Synchronizing Parameters*

You can type in parameters in the tables, or use the **COMSOL Parameter Selection** window in PTC Creo Parametric™ to link parameters from the PTC Creo Parametric™ file, for details see the section [The COMSOL Parameter Selection Window](#). Linked parameters can then be retrieved to the table, and global parameters are automatically generated for them.

To retrieve the linked parameters from the PTC Creo Parametric™ file to the LiveLink node, and to generate corresponding global parameters in the model do one of the following:

- In the **Settings** window for **LiveLink for PTC Creo Parametric** click the **Synchronize** button:

New parameters, which have been selected in the PTC Creo Parametric™ file, but are not listed under **Parameters in CAD Package**, are transferred to the **Controllable parameters** table or the **Read-only parameters** table. For each new CAD parameter a global parameter is generated in the model. The global parameters are assigned the values of the corresponding CAD parameters. Following this, the geometry is regenerated in PTC Creo Parametric™, based on the parameters in the **Controllable parameters** table, and transferred to COMSOL.

- In the **Settings** window for **LiveLink for PTC Creo Parametric** click the **Update Parameters from CAD** button (  )

New parameters, which have been selected in the PTC Creo Parametric™ file, but are not listed under **Parameters in CAD Package** are transferred to the **Controllable parameters** table or the **Read-only parameters** table. For each new CAD parameter a global parameter is generated in the model. The global parameters are assigned the values of the corresponding CAD parameters. In addition, the values of global parameters, which are already linked to CAD parameters in the table, are updated to the current values of the CAD parameters.

Parameter names in the **CAD name** column appear just as in a relation inside the PTC Creo Parametric™ file, using the symbolic format, for example `d1`. When the parameter refers to one of the components of a synchronized assembly the syntax also includes the name of the component, for example `d1:part1.prt`. This makes it possible to control parameters from components of an assembly.

## LENGTH UNIT

In the **Length unit** list, select **From COMSOL** to scale the transferred objects to the length unit of the geometry in the current model. Select **From CAD document** to change the geometry's length unit to the unit in the CAD software.

## OBJECT TYPES TO IMPORT

CAD designs may include not only solid objects, but also surfaces and curves used during the construction of those solids. These construction objects may slow down the synchronization, and they may cause problems when combining the synchronized objects before meshing.

One way to prevent synchronization of construction surfaces and curves is to hide them in the PTC Creo Parametric™ user interface. An alternative is to set the LiveLink interface to omit them from the synchronization. Only the types of objects that are selected from the **Solids** and **Surfaces** checkboxes are transferred during a synchronization. Performance can be improved for very large geometries that contain more than one type of objects, by turning off the synchronization of types of objects that are not necessary for the simulation.

## SIMPLIFY AND REPAIR

The **Absolute import tolerance** is a length measured in the geometry's unit after synchronization. This tolerance is used by some of the simplification and repair operations as detailed in this section. During the import of objects transferred from PTC Creo Parametric™, the repair operations are performed in the order of the corresponding settings (starting from the top) in the user interface.

If the **Remove redundant edges and vertices** checkbox is selected, edges and vertices that are considered redundant, such as the edges of an imprint on a face, are removed from the imported geometry.

Imported geometric objects can sometimes contain geometric and topological errors, including missing edges and vertices, and entities with invalid sense and invalid tolerance. Errors such as these can be fixed during the import by choosing one of the available options from the **Fix errors** list:

- Choose **Automatic** (the default) to first check the geometry for topological errors, and if issues are detected attempt to repair.

- Choose **On** to always run the repair operations during import. An initial check of the geometry is not performed in this case.
- Choose **Off** to turn off the repair of topological errors during the import. This can speed up the import if the geometry is known to be correct.

Select the option **Simplify curves and surfaces** to simplify, within the **Absolute import tolerance**, the underlying curve and surface manifolds of the imported geometric entities. Importing objects with this option may improve both the performance and reliability of geometric operations on some imported geometry, for example it may help in some cases when Boolean operations on the imported objects fail.

Simplification means that the manifolds are converted where possible to analytical form: linear, circular, and elliptical curves; and planar, spherical, cylindrical, conical, and toroidal surfaces. Manifolds that are converted are B-spline curves and surfaces, or certain surfaces generated by operations such as sweeping, revolving, and filleting.

Select the **Delete small details** checkbox to remove geometric details smaller than the **Absolute import tolerance**. Details that can be deleted include short edges, sliver faces, small faces, and spikes.

Select (default) the **Check imported objects for errors** checkbox to check the validity of the imported objects as the last stage of the import. Warning nodes appear with details about the detected problems, if any. Use the **Zoom to Selection** button next to the **Entities** list in a warning node to locate the problematic edges or faces. For information on geometry problems that may occur see the Check feature.

## ASSOCIATIVITY

The associativity between the geometry transferred to COMSOL Multiphysics and the geometry in PTC Creo Parametric™ is preserved as long as the topology of the geometry does not change. If the topology changes, for example if new faces are introduced or faces are removed, the interface tries to preserve associativity for the portions of the geometry that remain unchanged.

To make sure that the geometry stays associative to the geometry in the CAD program even after saving and reopening your work in COMSOL Multiphysics and PTC Creo Parametric™ it is recommended to save the PTC Creo Parametric™ file in the state corresponding to the latest synchronization. To make sure that the geometry stays associative during several offline synchronizations it is recommended that you load the synchronization files in the order that you have saved them in the CAD software, and that you define selections, see [The COMSOL Selections Window](#).

If you are using PTC Creo Parametric™ together with the Windchill® PLM software, make sure that the CAD files (including the components for assemblies) have been checked out to ensure the associativity of the synchronized geometry.

## **SELECTIONS**

The LiveLink™ interface automatically synchronizes selections for materials from the PTC Creo Parametric™ document. The selections get their names from the names of materials assigned to objects or other geometric entities on the synchronized CAD geometry, and they appear in **Selections** tables according to the entity level they are defined on. Click on an entry in a table to see the included entities highlighted in the **Graphics** window. When setting up a simulation you can use selections for example for assigning materials on the finalized geometry. You can read about how to turn off the automatic generation of selections for materials in the section [The COMSOL Selections Window](#).

### *User Defined Selections*

In addition to automatically synchronizing selections for materials you can also define custom selections on the CAD design in the PTC Creo Parametric™ user interface and synchronize those with the COMSOL model, for details see the section [The COMSOL Selections Window](#).

For CAD assemblies, the selections that you define in a component file are automatically added to the list of selections synchronized for the assembly. The selections loaded from the components are also correctly instantiated during synchronization. For example consider a CAD assembly that contains ten instances of a part file, which has a selection defined with a single face. After synchronizing the CAD assembly, the selection in the COMSOL Multiphysics model will contain ten faces, one for each instance of the part.

User defined selections are listed alongside material selections in the **Selections** tables, according to the entity level they are defined on. Click on a selection to see it highlighted on the geometry in the **Graphics** window.

If you are using PTC Creo Parametric™ together with the Windchill® PLM software, user-defined selections, except for selection of assembly components, are supported only on CAD files or on components when synchronizing assemblies that have been checked out.

### ASSIGNED ATTRIBUTES

Select the **Construction geometry** checkbox to make the resulting objects available only in the feature's geometry sequence. For more information see [Construction Geometry](#) in the *COMSOL Multiphysics Reference Manual*.

# Connecting to COMSOL Server™ and Running Applications

## *Overview*

---

A COMSOL® runnable application is a COMSOL Multiphysics® MPH file that, in addition to the model part, includes a custom user interface that you can run as a separate application or in a web client. For simulations with geometry that comes from a PTC Creo Parametric™ model, applications can also use the LiveLink™ interface for PTC Creo Parametric™.


To create such applications, use the Application Builder, which is included in the Windows® version of COMSOL Multiphysics. For more information on how to build applications, refer to the book *Introduction to Application Builder*.


With a COMSOL Server™ license together with a license for LiveLink™ for PTC Creo Parametric™, a COMSOL application that uses the LiveLink interface can be run by connecting to a COMSOL Server with an easy-to-install COMSOL Client, available for download from [www.comsol.com](http://www.comsol.com). The software components installed with the COMSOL Client allow you to connect to a COMSOL Server right from the user interface of PTC Creo Parametric™, and to browse and launch apps using the COMSOL Server interface. COMSOL Server or COMSOL Client does not include the Application Builder, Physics Builder, and Model Builder tools that come with the COMSOL Desktop® environment, and that are required for building applications.

For more information on the installation and administration of the COMSOL Server, and on how to run applications, refer to the book *COMSOL Server Manual*.

## Connecting to a COMSOL Server™

---

To log in to a COMSOL Server™ interface, on the **COMSOL Multiphysics** tab in PTC Creo Parametric™ click the **COMSOL Server** (  ) button.

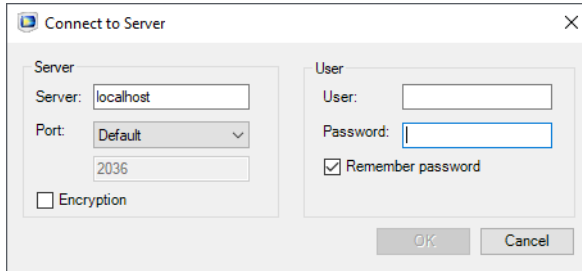

For accessing a remote server use the computer name and domain, or the IP address, instead of localhost. If the port number 2036 is taken, then COMSOL Server will use the next available port number: 2136, 2236, and so on. Log in to COMSOL Server with your username and password. After you click **OK** the COMSOL Server interface is displayed in a separate window. Here you can view the apps available in the Application Library.

To launch an app click the **Launch** button below its icon. The app is launched in a separate COMSOL Client window. The first time you start the COMSOL Client you will need to log in to the COMSOL Server.

As an alternative to connecting to the COMSOL Server interface from PTC Creo Parametric™, you can also start the COMSOL Client from the Windows® Desktop or **Start** menu, and log in to the COMSOL Server to launch apps.


---

**Note:** Applications that use LiveLink™ for PTC Creo Parametric™ require a COMSOL Client installation as they are not supported to be run from a web browser.

---

## Running Applications with COMSOL Multiphysics®

---

If you have a COMSOL Multiphysics® installation you can launch apps from the PTC Creo Parametric™ user interface by clicking the **Run Application** (  ) button on the **COMSOL Multiphysics** tab in PTC Creo Parametric™. In the **Open** dialog browse to the application, then click **Open**. This will bring up the app interface in a separate window.

If the application utilizes the LiveLink™ interface make sure that the CAD document is open in PTC Creo Parametric™ before using the app.

Note that the **Run Application** button is disabled if you have a COMSOL Client installation of LiveLink™ *for* PTC Creo Parametric™. In this case run the app with the COMSOL Client, for example by first logging in to a COMSOL Server interface as described in the section [Connecting to a COMSOL Server™](#).



# Geometry Tools and Features

This chapter describes the tools and features available for importing and modifying geometry with LiveLink™ *for* PTC Creo Parametric™.

# Geometry Representation

## *Working with the CAD Kernel*

---

The component of the COMSOL Multiphysics® software that is used to represent, build, and manage the interactions between geometric objects is the geometric kernel or geometric modeler. There are two kernels used by the software, the *COMSOL kernel*, and the *CAD kernel* (the Parasolid® kernel) that is included with the CAD Import Module, the Design Module, and LiveLink™ products interfacing CAD packages.

With a license for LiveLink™ for PTC Creo Parametric™ the software defaults to the CAD kernel for representing the geometry. You need to use the CAD kernel to apply the geometry features included with this module, for example the defeaturing and repair tools, as well as to import 3D geometries using various 3D CAD file formats.



The 3D operations and primitives listed in [Table 3-1](#) do not support the CAD kernel — they always use the COMSOL kernel. However, an automatic conversion is performed for these objects before they are used as input to geometry features that require the CAD kernel, see [Converting Objects to CAD Kernel Representation](#).

TABLE 3-1: 3D GEOMETRY FEATURES THAT DO NOT SUPPORT THE PARASOLID GEOMETRY KERNEL.

FEATURE NAME	FEATURE NAME
Bezier Polygon	Point
Eccentric Cone	Polygon
Extrude	Pyramid
Helix	Revolve
Hexahedron	Sweep
Interpolation Curve	Tetrahedron
Parametric Curve	Torus
Parametric Surface	Work Plane

### CHANGING THE GEOMETRIC KERNEL

To switch between geometric kernels, you can click the **Geometry** node, then in its Settings window, from the **Geometry representation** list choose either the **CAD kernel** or **COMSOL kernel**.

When you change the **Geometry representation** setting, all nodes that support the CAD kernel are marked as edited with an asterisk (\*) in the upper-right corner of the node's icon. To rebuild the geometry using the new kernel, click the **Build All** button (  ). To avoid re-solving an already solved model, you can click the **Update Solution** button (  ) in the **Study** toolbar to map the solutions from the geometry represented by the CAD kernel to the new geometry represented by the COMSOL kernel.




If you solve a model using the CAD kernel, it is not possible to view and postprocess the solution if you open it in a COMSOL Multiphysics session where a license for the CAD Import Module, Design Module, or one of the LiveLink for CAD products is not available, unless, before saving the model, you change the geometry representation to COMSOL kernel and update the solution. This is possible to do only for 3D geometry sequences that do not contain geometry features that require the CAD kernel.

When you create a new model, its default geometry representation is controlled by the preference setting **Geometry > Geometry representation > In new geometries**.

When you open an existing model, you normally use the geometry representation used in the model. To always get the possibility to convert the geometry to the COMSOL kernel, change the preference setting **Geometry > Geometry representation > When opening an existing model** to **Convert to COMSOL kernel**.

### *Converting Objects to COMSOL Kernel Representation*

To convert CAD objects (geometric objects represented by the CAD kernel) to objects represented by the COMSOL kernel, from the **Geometry** toolbar, **Conversions** menu, select **Convert to COMSOL** (  ).



The COMSOL geometry file format (.mphbin, or .mphtxt) can contain geometric objects saved in both the CAD kernel and COMSOL kernel representations. To import geometry from such a file to a geometry sequence that uses the COMSOL kernel, you need to convert geometry objects to the COMSOL representation before exporting to the file.

## CONVERT TO COMSOL

Select the objects that you want to convert in the **Graphics** window. The selected objects are displayed in the **Input objects** list.

## SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

## ASSIGNED ATTRIBUTES

From the **Construction geometry** list choose **On** to make the resulting objects available only in the feature's geometry sequence. The default option **Inherit from input** means that the resulting objects become construction geometry if all input objects are construction geometry. Choose **Off** to never output construction geometry objects. For more information see [Construction Geometry](#).

## *Converting Objects to CAD Kernel Representation*

---

If the current geometry representation for the geometry sequence is **CAD kernel**, an automatic conversion of COMSOL objects to CAD objects takes place before using the objects in Boolean operations and before using the objects in the **Convert to Solid**, **Convert to Surface**, **Convert to Curve**, and **Convert to Point** operations. This ensures that the CAD kernel is used in the abovementioned operations. This conversion is also performed when COMSOL objects are used as input to features that require the CAD kernel, for example the **Knit to Solid** feature

An automatic conversion to CAD objects is also performed before exporting geometry in the ACIS<sup>®</sup>, Parasolid<sup>®</sup>, STEP, and IGES file formats.

If the automatic conversion cannot be performed, the geometry operation is performed by the COMSOL kernel. For example, geometry objects created from a mesh cannot be converted to CAD kernel representation. Other examples of geometry objects that cannot be converted to CAD representation include objects that have an edge adjacent to three or more isolated faces, or objects that have a face bounded by an edge loop that intersects itself.

The automatic conversion to CAD kernel representation is not performed if one of the input objects to the Boolean or conversion operation is the result of a previous **Convert to COMSOL** operation.

# Importing and Exporting CAD Files

## *Importing 3D CAD Files*

---

To import geometry objects from a 3D CAD file, from the **Home** or the **Geometry** toolbar, click **Import** (  ).

### **SOURCE**

In the **Source** section of the Settings window, select **3D CAD file** from the **Source** list. You can also skip this step as the type of the selected file is automatically recognized by the code. Click **Browse** to locate the file to import, or enter the path to the file. Before clicking the **Import** button consider to review and configure the import settings. If you have changed some settings after importing a file, the file is automatically reimported when you click a build button.

When importing STEP files that contain multibody parts it can be useful to generate object names that include both the body and the part names retrieved from the file. Choose how to name the objects imported from STEP files from the **Import body names** list:

- Choose **Automatic** to include the body names in the object name only for the multibody parts.
- Choose **On** to include the body names in the objects names for all imported parts.
- Choose **Off** to not include the body names in the object names.

The imported geometry objects are represented by the CAD kernel, see [Working with the CAD Kernel](#), which is the geometric kernel used by the CAD Import Module, Design Module, and LiveLink™ products interfacing CAD packages.

Some 3D CAD formats use periodic parameterization for edges and faces. For example, a full-revolution cylindrical edge or face appears seamless in the CAD program. During import edges or faces that have a periodic parameterization are cut in two halves by inserting new vertices and edges. This is done because the mesh algorithms do not support periodic entities. You can ignore such inserted edges using an **Ignore Edges** feature from **Virtual Operations**.

### Supported Formats

The CAD import supports the following 3D CAD formats:

TABLE 3-2: SUPPORTED 3D CAD FILE FORMATS.

FILE FORMAT	NOTES	FILE EXTENSIONS	SUPPORTED VERSIONS
ACIS <sup>®</sup>	1, 2	.sat, .sab	Up to 2025 I.0
AutoCAD <sup>®</sup>	1, 3	.dwg, .dxf	2.5-2026
CATIA <sup>®</sup> V5	3, 4	.CATPart, .CATProduct	R8 to R2025
IGES	1, 2	.igs, .iges	Up to 5.3
Inventor <sup>®</sup> assembly	1, 3	.iam	11-2026
Inventor <sup>®</sup> part	1, 3,	.ipt	6-2026
NX <sup>™</sup>	1, 3	.prt	Up to 2506
Parasolid <sup>®</sup>	1	.x_t, .x_b	Up to V38.0
PTC Creo Parametric <sup>™</sup>	1, 2, 5	.prt, .asm	1-12
PTC Pro/ENGINEER <sup>®</sup>	1, 2	.prt, .asm	16 to Wildfire 5
SOLIDWORKS <sup>®</sup>	1, 3, 6	.sldprt, .sldasm	98-2025
STEP	1, 2	.step, .stp	AP203E1, AP214, AP242

Note 1: This format requires a license for one of the CAD Import Module, Design Module, or LiveLink product for a CAD package.

Note 2: This format is available only on supported Windows<sup>®</sup> and Linux operating systems with Intel<sup>®</sup> 64-bit processors and on macOS.


Note 3: This format is available only on supported Windows<sup>®</sup> and Linux operating systems with Intel<sup>®</sup> 64-bit processors.

Note 4: This format requires, in addition to the CAD Import Module, or Design Module, or a LiveLink product for a CAD package, a license for the File Import for CATIA V5 module.

Note 5: The import of files saved with PTC Creo Parametric 12 software is available only on supported Windows<sup>®</sup> and Linux operating systems with Intel<sup>®</sup> 64-bit processors.

Note 6: Files saved with an educational version of the SOLIDWORKS<sup>®</sup> software are not supported.

### *Preview of CAD Assemblies*

When importing CAD assemblies saved in the file formats of the CATIA V5, Inventor, NX, PTC Creo Parametric, PTC Pro/ENGINEER, and SOLIDWORKS software you can display a graphical preview of the assembly components by clicking the **Preview** (  ) button in the **Settings** window toolbar. The components are displayed in the **Graphics** window, where you can also select the components you want to import. See also [Assembly Components to Import](#).

---

**Note:** Displaying a preview of assemblies with embedded parts saved in the file format of the SOLIDWORKS software are not supported. To preview such an assembly, first convert the embedded parts to external parts.

---

### *Associativity*

When possible the import maintains associativity for the imported geometry objects, so that when the CAD file is reimported the settings applied to the geometric entities, for example physics or material settings, are retained. To maintain associativity the import relies on information in the CAD file that uniquely identifies the geometry objects and their entities, such as faces, edges, and points. This information is usually included in the CAD file if the geometry is saved in the format of the CAD software where it was created, but not when the geometry is exported to another CAD format. When reimporting a CAD file the import automatically tries to identify and match all geometry objects and their entities to the previous version. This may fail if the topology (structure) of the geometry has changed since the last import.

---


**Note:** To ensure that associativity is maintained when reimporting a CAD file work with CAD files saved in the originating CAD software's format, and avoid changes to the topology (structure) of the geometry. When an associative import is not possible use coordinate-based selections, such as the Ball, Box, and Cylinder selections in 3D (see [Creating Selections From Geometric Primitives and Operations](#) in the *COMSOL Multiphysics Reference Manual*).



---

### **LENGTH UNIT**






In the **Length unit** list, select **From CAD document** to change the geometry's length unit to the unit in the file (if the file has a length unit). Select **From COMSOL** to keep the geometry's length unit and scale the objects in the file to the geometry's unit.

## ASSEMBLY COMPONENTS TO IMPORT

When importing CAD assemblies saved in the file formats of the CATIA V5, Inventor, NX, PTC Creo Parametric, PTC Pro/ENGINEER, and SOLIDWORKS software you can display the assembly tree where you can choose the components to import from the assembly. After you have selected an assembly file under the **Source** section, click **Load Assembly Tree** to display the components of the selected assembly. You can also click the **Preview** () button in the **Settings** window toolbar to load the assembly tree and to show a preview of the components in the **Graphics** window.

When you click **Import** () under the **Source** section, only the components that are selected in the displayed assembly tree will be imported. Thus, to prevent importing a component you can clear its checkbox in the tree. To quickly select or clear all similar components, you can right-click a component, and from the menu choose to either **Select All Instances** or **Clear All Instances** of the component. Components can also be selected from the **Graphics** window when **Preview** () is active.

For large assemblies it may help to filter the assembly tree to display only the components that you have selected to import by selecting the **Only list components to import** checkbox. You can also enter any text in the **Filter** text box to only display the component nodes that match the filter.

The **Select All** () and **Clear All** () buttons below the assembly tree provide further shortcuts for efficiently choosing components. Use the **Expand All** () and **Collapse All** () buttons to quickly expand and collapse the displayed assembly tree. When the assembly has changed on disk, or if you select a different version of the assembly, click the **Reload Assembly Tree** () button to update the tree displayed in the Settings window. When reloading the assembly tree the selection of components is retained, and any new components are selected for import by default.

## OBJECT TYPES TO IMPORT

Select the types of objects to import using the **Solids**, **Surfaces**, and **Curves and points** checkboxes.

If the **Surfaces** checkbox is selected, you can choose how COMSOL imports the surfaces using the list under **For surface objects**:

- Choose **Form solids** (the default) to knit together surface objects to form solids. The input surface objects must have manifold topology, and the operation can only form solids with manifold topology. An example of a solid object with nonmanifold topology is a solid that has an interior surface that separates two domains. A surface

object that contains an edge that is adjacent to more than one boundary is an example of a surface object with nonmanifold topology.

- Choose **Knit** to form surface objects by knitting.
- Choose **Do not knit** to not form any surface or solid objects from the imported surfaces.

For the **Form Solids** and **Knit** options, the knitting merges edges that have a distance smaller than the **Absolute import tolerance** and deletes gaps and spikes smaller than the **Absolute import tolerance**. Additionally, select the **Fill holes** checkbox to generate new faces that can cover larger holes due to missing faces in the imported CAD file.

If a solid cannot be created while importing, you can also try the [Knit to Solid](#) operation after the import, and use a larger tolerance for the knitting. Geometry operations, see for example the [Cap Faces](#) operation, can also help with creating new faces to cover larger holes on imported geometry.

To import wireframe geometry you need to select the **Curves and points** checkbox. With this option, the **Unite curve objects** checkbox is selected by default to unite the imported curve objects, which speeds up the rendering of the geometry.

## **SIMPLIFY AND REPAIR**

The **Absolute import tolerance** is a length measured in the geometry's unit after the import. When importing 3D CAD files, this tolerance is used by some of the simplification and repair operations as detailed in this section. During the import, the repair operations are performed in the order of the corresponding settings (starting from the top) in the user interface.

If the **Remove redundant edges and vertices** checkbox is selected, edges and vertices that are considered redundant, such as the edges of an imprint on a face, are removed from the imported geometry.

Imported geometric objects can sometimes contain geometric and topological errors, including missing edges and vertices, and entities with invalid sense and invalid tolerance. Errors such as these can be fixed during the import by choosing one of the available options from the **Fix errors** list:

- Choose **Automatic** (the default) to first check the geometry for topological errors, and if issues are detected attempt to repair.

- Choose **On** to always run the repair operations during import. An initial check of the geometry is not performed in this case.
- Choose **Off** to turn off the repair of topological errors during the import. This can speed up the import if the geometry is known to be correct.

The option **Simplify curves and surfaces** is selected by default to simplify, within the **Absolute import tolerance**, the underlying curve and surface manifolds of the imported geometric entities. Importing objects with this option may improve both the performance and reliability of geometric operations on some imported geometry, for example it may help in some cases when Boolean operations on the imported objects fail. Simplification means that the manifolds are converted where possible to analytical form: linear, circular, and elliptical curves; and planar, spherical, cylindrical, conical, and toroidal surfaces. Manifolds that are converted are B-spline curves and surfaces, or certain surfaces generated by operations such as sweeping, revolving, and filleting.

The **Delete small details** checkbox is selected by default, to remove geometric details smaller than the **Absolute import tolerance**. Details that can be deleted include short edges, sliver faces, small faces, and spikes.

With the **Heal edges** checkbox selected the import tries to replace edges with a large tolerance with accurate edges calculated by intersecting the adjacent surfaces. This also improves the adjacent vertices, which become exact.

If the **Minimize tolerances** checkbox is selected tolerant edges and vertices on the geometry are detected, and their tolerances are reduced when possible.

Select the **Check resulting objects for errors** checkbox (default) to check the validity of the imported objects as the last stage of the import. Warning nodes appear with details about the detected problems, if any. Use the **Zoom to Selection** button next to the **Entities** list in a warning node to locate the problematic edges or faces. For information on geometry problems that may occur see the [Check](#) feature.

#### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of

resulting entities (domains, boundaries, edges, and points) that the objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

Select the **Individual objects selections** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence for each individual object in the geometry file and for each relevant entity level. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, if available, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

#### **SELECTIONS GENERATED BASED ON INFORMATION IN THE CAD FILE**

The following types of data from the CAD file are used to generate selection on the imported geometry:

- Material assignments can generate objects selections that are named according to the material names in the CAD file.
- Layer assignments of objects and entities, when supported by the CAD format, can generate object, boundary, edge, and point selections that are named according to the layer names in the CAD file.
- Color assignments to objects, faces, or edges can generate object, boundary, and edge selections, respectively.

After the import the generated selections are displayed in the Settings window for the Import node in sections named according to the entity level of the selections:

- **Object Selections**
- **Boundary Selections**

- **Edge Selections**
- **Point Selections**

Depending on which selections are generated, a subset of the above sections is displayed. The selections are listed in tables with the following columns:

- **Name:** Here you can edit the selection name that is generated by the import. For colors the generated names are of the type *Color 1*, *Color 2*, and so on, for materials and layers the names from the CAD file are used.
- **Name in file:** This column contains the original name of the selection. To display this column select the **Show names from file** checkbox above the table.
- **Keep:** Select the checkbox in this column to make the selection available in selection lists for subsequent nodes in the geometry sequence.
- **Physics:** Select the checkbox in this column to make the selection available in all applicable selection lists (in physics and materials settings, for example).
- **Contribute to:** If you want to make the objects or entities in the selection contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New Cumulative Selection** button under the table to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Click a row in a table to highlight the corresponding selection on the geometry in the **Graphics** window. To help with identifying the color selections, these are highlighted with the colors defined in the imported CAD file. To always highlight on the geometry the color selections that you keep select from the **Graphics** toolbar **Colors > Show Selection Colors**.

The selections listed in the **Object Selections** section that are made available for the geometry sequence or physics setup are always available in all input selection lists, including all applicable entity selection lists. For example, the object selection of a solid object, generated for a material from the CAD file, automatically results in domain, boundary, edge, and point selections with the same name, so that you can use it to apply a boundary material, or a boundary condition. In contrast, a color assigned to a face of a solid object in the CAD file results in a boundary selection that is displayed in the **Boundary Selections** section, and it is available in all applicable boundary selection lists, but not, for example, in any edge selection lists.



## ASSIGNED ATTRIBUTES

Select the **Construction geometry** checkbox to make the resulting objects available only in the feature's geometry sequence. For more information see [Construction Geometry](#).



### *Exporting Objects to 3D CAD Formats*

---

With a license for LiveLink™ for PTC Creo Parametric™ you can export 3D geometry objects to the ACIS® (version 2016 1.0), IGES (version 5.3), Parasolid® (version 37.0), and STEP (version AP203) formats. To do this:

- right-click the **Geometry** node and select **Export** () , or
- in the **Geometry** toolbar click **Export** ().

Then, in the **Export** window, the **File type** list, select **Parasolid binary file**, **Parasolid text file**, **ACIS binary file**, **ACIS text file**, **IGES file**, or **STEP file**. Use the **Browse** button to choose the filename, or enter a filename including the path in the **Filename** field.

Next, select **Export entire finalized geometry** to export the resulting geometry of a Form Union or Form Assembly operation. Alternatively, select **Export selected objects**, then from the **Selection** list, choose **Manual** (default) to select the objects you want to export in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as [Construction Geometry](#). If the geometry sequence includes

user-defined selections above the currently built node, these will also be available in the **Selection** list.



The following limitations apply when exporting geometry objects to the 3D CAD formats mentioned in this section:

- Geometry objects that are created from mesh cannot be exported.
- Geometry objects that are the result of virtual geometry operations that come after a Form Union or Form Assembly node in the geometry sequence cannot be exported. The finalized geometry resulting from the Form Union or Form Assembly node is exported instead.
- Geometry objects created with a license for the ECAD Import Module from ECAD files imported with the options **Ignore vertices with continuous tangent** and **Eliminate short edges** cannot be exported. In this case the exported geometry objects contain the vertices and edges removed by the import.

COMSOL objects are automatically converted to CAD objects before saving the file.



For details on which objects can be converted to CAD objects see [Converting Objects to CAD Kernel Representation](#).

To export the geometry to the specified file, click the **Export** () button. A confirmation message appears in the Messages window.

#### **ADVANCED**

When exporting to an ACIS file format choose the **ACIS file format version**. Available versions are **4.0**, **7.0**, **2016 1.0** (default).

For the Parasolid, IGES, and STEP file formats select a **Length Unit**. A unit conversion is carried out when the selected unit is different from the length unit of the geometry. A unit conversion is not done for the default **From geometry** option.



The Parasolid binary and text formats do not allow coordinate values larger than 500. Therefore you might have to change the export unit in the **Length unit** list box to be able to export the geometry.

For the Parasolid file formats the option **Split in manifold objects** is selected by default to make sure that the exported geometry objects are manifold objects. A nonmanifold object is, for example, a solid with an interior boundary that separates two domains. When exported using this option the solid is split along the interior boundary into two separate objects. When exporting to the ACIS, IGES, and STEP formats nonmanifold objects are always split.




# Repairing and Defeaturing

When importing 3D CAD files, the default import settings ensure that the validity of the imported objects is checked, and that defects are repaired when possible. In addition to the checks and repair performed during import, LiveLink™ for PTC Creo Parametric™ provides operations for checking, repairing, and defeaturing 3D geometry objects, and locating overlaps and gaps in imported CAD assemblies.

## OPERATIONS FOR CHECKING AND REPAIRING 3D OBJECTS

Use the operations listed in the table below to check and repair geometry objects and to detect interferences between objects:

TABLE 3-3: OPERATIONS FOR DETECTING DEFECTS IN AND REPAIRING 3D OBJECTS AND DETECTING INTERFERENCES BETWEEN 3D GEOMETRY OBJECTS.

ICON	NAME	DESCRIPTION
	Check	Check CAD objects for faults, for example tolerance issues and invalid entities
	Detect Interferences	Search for interferences, such as intersections, gaps, touches, and containments, between objects
	Repair	Repair defects and remove small details from 3D objects

## OPERATIONS FOR DEFEATURING

With the defeaturing tools listed in the table below you can search for and delete both small details, such as short edges, small faces, sliver faces, and spikes, and larger details, for example, fillets, chamfers, and cylindrical holes. You can also replace and detach a selection of faces to form 3D objects.

TABLE 3-4: OPERATIONS FOR DEFEATURING 3D GEOMETRY OBJECTS.













ICON	NAME	DESCRIPTION
	Delete Fillets	Search for and delete fillets
	Delete Holes	Search for and delete holes
	Delete Short Edges	Search for and collapse short edges
	Delete Sliver Faces	Search for and delete slivers faces
	Delete Small Faces	Search for and collapse small faces

TABLE 3-4: OPERATIONS FOR DEFEATURING 3D GEOMETRY OBJECTS.

ICON	NAME	DESCRIPTION
	Delete Spikes	Search for and delete spikes from faces
	Detach Faces	Detach faces to form a new object from them
	Replace Faces	Replace faces by growing surrounding faces or creating new faces

### Check

To check the validity of CAD objects, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Check** (  ).

From the **Input objects** list, choose **Manual** (default) to select the objects that you want to check in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the **Check** node, these will also be available in the **Input objects** list.

If any problems are detected in the selected objects when building this feature, warning nodes appear with details about the issues. In the warning nodes use the **Zoom to Selection** button next to the **Entities** list to locate the faulty edges or faces.

Warnings on geometric entities are usually associated with objects imported from CAD files, but could also be introduced by geometric operations, for example when repairing an object with a tolerance that is too large. The presence of warnings does not generally mean that the geometry is invalid and cannot be used for setting up a simulation. However, the faulty entities may in some cases cause the failure of geometric operations that involve these entities, and meshing of entities with certain types of faults may fail. In the following you can read about two commonly occurring class of faulty geometric entities, and how to repair these:

- Tolerance issues: The warning messages *vertex not on edge*, *vertex not on face*, *edge not on face* belong to this category. These type of faults indicate that the topology (structure) of the object is not correct locally, for example that an edge is not located on the boundary where it is expected to be. You can often repair tolerance issues in an object by applying the Repair operation with a tolerance that is larger than the tolerance used for the import. Repair adjusts the tolerance of the entities where

required, and, if this fixes the issues, warning nodes will not be displayed after the Repair node. In some cases it may also help to use the option **Simplify curves and surfaces** for the Repair operation. Note that increasing the repair tolerance too much may lead to removing important details from the geometry. As an alternative to the Repair operation you can also reimport the CAD file using a larger tolerance. For more details see [Repair](#), and [Importing 3D CAD Files](#).

- Invalid entities: The warning messages *invalid curve or surface*, *self-intersecting face*, *face-to-face inconsistency*, *self-intersecting curve or surface* signify invalid entities. If you encounter any of these faults after importing a geometry from a CAD file you may need to repair the geometry to avoid problems with meshing. For example:
  - For face-to-face inconsistency faults on solid objects, try to repair the object using the **Repair face-to-face inconsistencies in solids** option for the [Repair](#) feature.
  - Try to replace the faulty face. Use the Delete operation to delete the face, then use the Cap Faces operation to generate a new face in its place. Another solution may be to use Delete Faces to delete and patch in one operation several connected faces that have a fault.

### *Delete Fillets*


---



Use the Delete Fillets tool to search for fillets of a specified radius and delete these from an object. The faces forming the fillet are removed and the adjacent faces are extended to cover the resulting wound.

Note that this defeaturing tool may not find all fillets on nonmanifold objects. An example of a nonmanifold object is an object with several domains. Such an object can for example result from a Union or a Partition operation. To remove the fillets make sure to defeature the geometry objects before applying Boolean operations that result in nonmanifold objects.

The Delete Fillets tool cannot delete fillets for which the adjacent faces cannot be extended to cover the wound. The figure below shows an example of such fillets.

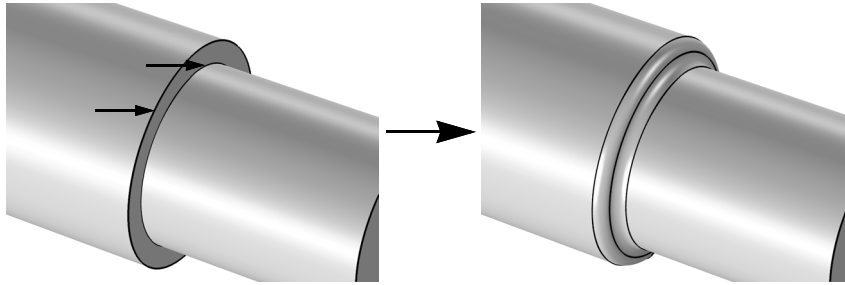Applying the fillets on the highlighted edges deletes the annular face from the geometry, which cannot be recreated if the fillets are to be deleted.





To open the **Tools** window for **Delete Fillets**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Delete Fillets** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Delete Fillets**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

### DELETE FILLETS


From the **Input objects** list, choose **Manual** (default) to select the objects you want to examine in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the currently built node, these will also be available in the **Input objects** list.



The Delete Fillets tool can only be applied to objects that are represented by the Parasolid<sup>®</sup> geometry kernel, also called CAD objects.

In the fields **Minimum fillet radius** and **Maximum fillet radius**, enter the size of the fillets you want to search for. When you click the **Find Fillets** button, a list of fillets with radii between the given values is shown in the **Fillet selection** list.

To delete the found details, either click the **Delete All** button, or select a subset of the found details in the list and click **Delete Selected**. Then, the selected details are deleted from their objects, and a node corresponding to this operation is added to the geometry branch of the model tree.

If you want to modify the performed deletion operation, you can select the added node in the geometry branch. Then, edit the node's form that appears in the **Settings** window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Delete Fillets contains the additional settings described below.

To delete all fillets returned by the search, set the **Deletion type** to **All fillets**. You can delete a subset of the found fillets by selecting them in the **Fillet selection** list, and choosing **Selected fillets** in the **Deletion type** list.

### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.



### *Delete Holes*

---

Use this defeaturing tool to search for and delete cylindrical holes from an object. The tool can find and delete both through or blind holes on solid as well as surface objects. The faces forming the hole are deleted and the resulting wound is covered by extending the adjacent faces.

Note that holes found on nonmanifold objects are not possible to delete. An example of a nonmanifold object is an object with several domains. Such an object can for

example result from a Union or a Partition operation. To remove the holes make sure to defeature the geometry objects before applying Boolean operations that result in nonmanifold objects.



To open the **Tools** window for **Delete Holes**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Delete Holes** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Delete Holes**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

### DELETE HOLES


From the **Input objects** list, choose **Manual** (default) to select the objects you want to examine in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as [Construction Geometry](#). If the geometry sequence includes user-defined selections above the currently built node, these will also be available in the **Input objects** list.



The Delete Holes tool can only be applied to objects that are represented by the CAD kernel; see [Converting Objects to CAD Kernel Representation](#).

In the fields **Minimum hole radius** and **Maximum hole radius**, enter the size of the holes you want to search for. When you click the **Find Holes** button, a list of holes with radii between the given values is shown in the **Hole selection** list.

To delete the found details, either click the **Delete All** button, or select a subset of the found details in the list and click **Delete Selected**. Then, the selected details are deleted from their objects, and a node corresponding to this operation is added to the geometry branch of the model tree.

If you want to modify the performed deletion operation, you can select the added node in the geometry branch. Then, edit the node's form that appears in the **Settings** window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Delete Holes contains the additional settings described below.

To delete all holes returned by the search, set the **Deletion type** to **All holes**. You can delete a subset of the found holes by selecting them in the **Hole selection** list, and choosing **Selected holes** in the **Deletion type** list.

### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).



Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

### *Delete Short Edges*

---

Use the Delete Short Edges tool to find edges shorter than a specified length, and then to delete these by collapsing the edges.

Note that this defeaturing tool cannot find short edges on nonmanifold objects. An example of a nonmanifold object is an object with several domains. Such an object can for example result from a Union or a Partition operation. To avoid this situation defeature the geometry objects before applying Boolean operations that result in nonmanifold objects.



To open the **Tools** window for **Delete Short Edges**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Delete Short Edges** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Delete Short Edges**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

### DELETE SHORT EDGES

From the **Input objects** list, choose **Manual** (default) to select the objects you want to examine in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the currently built node, these will also be available in the **Input objects** list.




The Delete Short Edges tool can only be applied to objects that are represented by the Parasolid<sup>®</sup> geometry kernel, also called CAD objects.

---

In the field **Maximum edge length**, enter the maximum length of the edges you want to delete. When you click the **Find Short Edges** button, a list of edges with length smaller than the given value is shown in the **Short edge selection** list.

To delete the found details, either click the **Delete All** button, or select a subset of the found details in the list and click **Delete Selected**. Then, the selected details are deleted from their objects, and a node corresponding to this operation is added to the geometry branch of the model tree.

If you want to modify the performed deletion operation, you can select the added node in the geometry branch. Then, edit the node's form that appears in the **Settings** window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Delete Short Edges contains the additional settings described below.

To delete all edges returned by the search, set the **Deletion type** to **All short edges**. You can delete a subset of the found edges by selecting them in the **Short edge selection** list, and choosing **Selected short edges** in the **Deletion type** list.

## SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).



Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

### *Delete Sliver Faces*

---

Use the Delete Sliver Faces tool to search for high aspect ratio faces of a specified maximum width. The tool deletes the selected sliver faces by collapsing these.

Note that this defeating tool cannot find sliver faces on nonmanifold objects. An example of a nonmanifold object is an object with several domains. Such an object can for example result from a Union or a Partition operation. To avoid this situation defeature the geometry objects before applying Boolean operations that result in nonmanifold objects.



To open the **Tools** window for **Delete Sliver Faces**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Delete Sliver Faces** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Delete Sliver Faces**, you can at any time switch to another defeating tool by clicking one of the corresponding buttons at the top of the window.

---

## DELETE SLIVER FACES


From the **Input objects** list, choose **Manual** (default) to select the objects you want to examine in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the currently built node, these will also be available in the **Input objects** list.



The Delete Sliver Faces tool can only be applied to objects that are represented by the Parasolid<sup>®</sup> geometry kernel, also called CAD objects.

In the field **Maximum face width**, enter the maximum width of the faces you want to delete. When you click the **Find Sliver Faces** button, a list of faces with width smaller than the given value are shown in the **Sliver faces selection** list.

To delete the found details, either click the **Delete All** button, or select a subset of the found details in the list and click **Delete Selected**. Then, the selected details are deleted from their objects, and a node corresponding to this operation is added to the geometry branch of the model tree.

If you want to modify the performed deletion operation, you can select the added node in the geometry branch. Then, edit the node's form that appears in the **Settings** window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Delete Sliver Faces contains the additional settings described below.

To delete all faces returned by the search, set the **Deletion type** to **All sliver faces**. You can delete a subset of the found faces by selecting them in the **Sliver face selection** list, and choosing **Selected sliver faces** in the **Deletion type** list.

## SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of



resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

### *Delete Small Faces*

---

Use the Delete Small Faces tool to find and delete faces of a specified maximum size. The tool deletes the selected small faces by collapsing these.

Note that this defeaturing tool cannot find small faces on nonmanifold objects. An example of a nonmanifold object is an object with several domains. Such an object can for example result from a Union or a Partition operation. To avoid this situation defeature the geometry objects before applying Boolean operations that result in nonmanifold objects.



To open the **Tools** window for **Delete Small Faces**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Delete Small Faces** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Delete Small Faces**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

#### **DELETE SMALL FACES**

From the **Input objects** list, choose **Manual** (default) to select the objects you want to examine in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the


geometry sequence includes user-defined selections above the currently built node, these will also be available in the **Input objects** list.



The Delete Small Faces tool can only be applied to objects that are represented by the Parasolid<sup>®</sup> geometry kernel, also called CAD objects.

In the field **Maximum face size**, enter the maximum diameter of the faces you want to delete. When you click the **Find Small Faces** button, a list of faces with diameter smaller than the given value appears in the **Small faces selection** list.

To delete the found details, either click the **Delete All** button, or select a subset of the found details in the list and click **Delete Selected**. Then, the selected details are deleted from their objects, and a node corresponding to this operation is added to the geometry branch of the model tree.

If you want to modify the performed deletion operation, you can select the added node in the geometry branch. Then, edit the node's form that appears in the **Settings** window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Delete Small Faces contains the additional settings described below.

To delete all faces returned by the search, set the **Deletion type** to **All small faces**. You can delete a subset of the found faces by selecting them in the **Small face selection** list, and choosing **Selected small faces** in the **Deletion type** list.

### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).



Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These

selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

## *Delete Spikes*

---

A spike is a long and narrow protrusion on an edge or corner of a face defined by two or three edges. Using the Delete Spikes tool you can search for and delete spikes from an object, by collapsing the narrow face region defined by the spike.



To open the **Tools** window for **Delete Spikes**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Delete Spikes** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Delete Spikes**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

### **DELETE SPIKES**

From the **Input objects** list, choose **Manual** (default) to select the objects you want to examine in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the currently built node, these will also be available in the **Input objects** list.

Note that this defeaturing tool cannot find spikes on faces that belong to nonmanifold objects. An example of a nonmanifold object is an object with several domains. Such an object can for example result from a Union or a Partition operation. To avoid this situation defeature the geometry objects before applying Boolean operations that result in nonmanifold objects.




The Delete Spikes tool can only be applied to objects that are represented by the Parasolid<sup>®</sup> geometry kernel, also called CAD objects.

---

In the field **Maximum spike width**, enter the maximum width of the spikes you want to delete. When you click the **Find Spikes** button, a list of spikes with width smaller than the given value are shown in the **Spike selection** list.

To delete the found details, either click the **Delete All** button, or select a subset of the found details in the list and click **Delete Selected**. Then, the selected details are deleted from their objects, and a node corresponding to this operation is added to the geometry branch of the model tree.

If you want to modify the performed deletion operation, you can select the added node in the geometry branch. Then, edit the node's form that appears in the **Settings** window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Delete Spikes contains the additional settings described below.

To delete all spikes returned by the search set the **Deletion type** to **All spikes**. You can delete a subset of the found spikes by selecting them in the **Spike selection** list, and choosing **Selected spikes** in the **Deletion type** list.

#### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).



Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

#### *Detach Faces*

---

By detaching, faces are removed from an object (the parent) and are used to form a new object (the child). The wound that results from detaching the faces is healed by

either creating new faces based on the surrounding edges or by growing or shrinking adjacent faces.



To open the **Tools** window for **Detach Faces**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Detach Faces** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Detach Faces**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

Select the faces you want to detach in the **Graphics** window. They appear in the **Faces to detach** list. If the geometry sequence includes user-defined selections above the currently built node, choose **Manual** to select faces, or choose one of the selection nodes from the list next to **Faces to detach**.

Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Faces to detach** selections.




The Detach Faces tool can only be applied to objects that are represented by the Parasolid<sup>®</sup> geometry kernel, also called CAD objects.

---

The **Parent heal method** list determines how to replace the detached faces in the parent object: **Create capping faces** means that a new faces are constructed based on the edges adjacent to each wound, and **Extend adjacent faces** (default) means that the wound is covered by growing and shrinking the adjacent faces.

The **Child heal method** list controls how to construct the child solid from the detached faces: **Create capping faces** means that a new face is formed based on the surrounding edges of each wound, **Extend adjacent faces from child** means that the detached faces grow or shrink to form a solid, and **Extend adjacent faces from parent** (default) means that the parent faces surrounding the detached faces grow or shrink to form a solid together with the detached faces.

When you click the **Detach Selected** button, the program detaches the selected faces and adds a node corresponding to this operation to the geometry branch of the model tree. The Tools window for Detach Faces remains open so that you can continue defeaturing using this or another defeaturing tool.

If you want to modify the performed detach operation, select the added node in the geometry branch. Then edit the node's form that appears in the Settings window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Detach Faces contains the additional settings described below.



### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

### *Detect Interferences*



---

To analyze the interference of geometry objects, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Detect Interferences** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Detect Interferences**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

From the **Input objects** list, choose **Manual** (default) to select the objects you want to analyze in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically

select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the currently built node, these will also be available in the **Input objects** list.

In the **Tolerance** text field, enter the absolute tolerance, which has the default value of 0.1 mm, to be used for the search for intersections. In the **Gap tolerance** text field enter the absolute tolerance for detecting gaps, the default value is 1 mm. When you click the **Find Interferences** button, a list of interferences is displayed in the **Interfering faces** list.

The interference detection applies to the exterior faces of the selected objects, thus ignoring interior faces, isolated edges and vertices. Each detected interference involves two objects. The following types of interferences appear in the list when detected by the tool:

- *Touch*. Two interfering objects are classified as touching when they intersect, and the interfering faces are located within a distance less than the specified tolerance from each other. Thus, an intersection (as defined below) may become a touch after you increase the tolerance such that it becomes larger than the distance between the interfering faces.
- *Intersection*. An intersection between the two objects is detected, and the interfering faces are located at a distance that is larger than the tolerance from each other.
- *Gap*. No intersection is detected between the two objects, but they have faces with portions that are located within a distance less than the specified gap tolerance from each other. The detected size of the gap appears in the list.
- *Containment*. One object is contained in another object, which is a solid.

By default the **Interfering faces** list displays the detected interferences in a tree with the interferences as the top level nodes sorted by the type of interference. To sort the list by the objects select the **Group by object** checkbox. In this case the objects involved in an interference are listed as the top level nodes in the tree. To filter the list by the interference type select or clear the checkboxes **Show intersections**, **Show touches**, **Show gaps**, **Show containments**.

In the **Interfering faces** list, expand a top level node to see the list of objects that the object on the top level is interfering with. Expand a subnode to see the list of detected interferences for the objects. You can expand the nodes for the detected interferences

to reveal the two interfering objects, and then expand the nodes for the objects to look at the interfering faces displayed in subnodes according to the following:

- For two intersecting solid objects the nodes for the objects have two subnodes each, *Inside* and *Outside*. Click the Inside node to highlight the parts of the interfering faces that are inside the other object. Click the Outside node to highlight the parts of the interfering faces that are outside the other object.
- For two intersecting surface objects the nodes for the objects have two subnodes each, *Small side* and *Large side*. The faces resulting from the intersection are grouped according to size since surface objects do not delimit a volume in space, thus it is not possible to determine what is inside or outside the other object. Click the Small side and Large side nodes to highlight the parts of the interfering faces that result from the intersection with the faces of the other object.
- For an intersection of a solid and a surface object, the node for the solid object has the subnodes *Small side* and *Large side*, while the node for the surface object has subnodes *Inside* and *Outside*.
- For two touching objects, the nodes for the objects may have two subnodes, *Touching* and *Not touching*. Click these nodes to highlight the corresponding portions of the interfering faces.
- For a gap between two objects, the nodes for the objects may sometimes have two subnodes *Touching* and *Not touching*.
- For a Containment node, the first subnode is the containing object, and the second subnode is the contained object.

### **VISUALIZATION OF DETECTED INTERFERENCES**

For a better visualization of the detected interferences, the Detect Interferences tool partitions the faces involved in the intersections and touches so that the interfering face regions can be shown and highlighted separately. In the **Interfering faces** list, when you select the nodes for the interferences, or the topmost or first sublevel object nodes when the **Group by object** checkbox is selected, the interferences are visualized only by highlighting those faces or face regions that enclose an intersection or are directly in touch. In the list, these are the faces belonging to the first subnode of each object node under the selected interference node. Thus, when you click a node for an interference in the list, the faces or face regions belonging to nodes *Outside*, *Large side*, and *Not touching* are not highlighted. Expand the node for the interference, and select the object subnodes, to see highlighted the involved faces in their entirety, including the face regions that are not directly interfering.

Note that the face partitioning that is the result of the intersections is visible only while working with the Detect Interferences tool, and that the geometry is not modified by this tool.



To change which objects are shown in the **Graphics** window while selecting nodes in the **Interfering faces** list choose one of the options from the **Show in graphics** list:

- Choose **Interfering faces only** to show only the interfering faces involved in the selected node. For example, if you select an intersection node from the list, only the face regions from the two objects that are involved in the intersection are shown.
- Choose **Selected object** (default) to show only the objects involved in the selected node.
- Choose **Other object** to show the object that is interfering with the currently selected object subnode to the interference node.
- Choose **Both objects** to show both objects involved in an interference when you select one of the subnodes to the interference node.
- Choose **All objects** to show all objects regardless of which nodes are selected.



The **Zoom to Selection** button next to the **Interfering faces** list may also help to find the detected interferences on the geometry. For a better view of the interferences between objects you can also click the **Wireframe Rendering** or **Transparency** buttons in the Graphics toolbar.

## *Repair*

---

To repair objects, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Repair** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

### **REPAIR**

From the **Input objects** list, choose **Manual** (default) to select the objects you want to repair in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections. Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the **Repair** node, these will also be available in the **Input objects** list.

Enter the **Absolute repair tolerance** that is used by some of the repair options as detailed below.

With the **Fix errors** checkbox selected (default) the software tries to repair the following geometric and topological errors:

- Entities with invalid sense
- Invalid edge and vertex tolerances
- Invalid manifolds
- Self-intersecting manifolds
- Non-G1 manifolds
- Missing edge or vertex manifolds
- Missing vertex
- Vertices not on curve of edge
- Edges and vertices not on surface of a face
- Surface self-intersections that lie outside the face
- Edge intersections that have no vertex
- Removal of discontinuities by either splitting or smoothing.

Select the **Repair face-to-face inconsistencies in solids** checkbox to try to repair solid objects with this fault reported by Import, Check, or Repair features.

Select the option **Simplify curves and surfaces** to also simplify within the **Absolute repair tolerance** the underlying curve and surface manifolds of the geometric entities.

Repairing objects with this option may improve both the performance and reliability of geometric operations on some imported geometry, for example it may help in some cases when Boolean operations on the imported objects fail. Simplification means that the manifolds are converted where possible to analytical form: linear, circular, and elliptical curves; and planar, spherical, cylindrical, conical, and toroidal surfaces. Manifolds that are converted are B-spline curves and surfaces, or certain surfaces generated by operations such as sweeping, revolving, and filleting.

The **Delete small details** checkbox is selected by default to remove geometric details smaller than the **Absolute repair tolerance**. Details that can be deleted include short edges, sliver faces, small faces, and spikes.

With the **Heal edges** checkbox selected the operation tries to replace edges with a large tolerance with accurate edges calculated by intersecting the adjacent surfaces. This also improves the adjacent vertices, which become exact.

If the **Minimize tolerances** checkbox is selected any tolerant edges and vertices on the geometry are detected, and if possible their tolerances are reduced.

When the option **Check resulting objects for errors** is selected (default) the repaired objects are checked for remaining problems. Warning nodes appear with details about the detected problems, if any. Use the **Zoom to Selection** button next to the **Entities** list in a warning node to locate the problematic edges or faces. For information on geometry problems see the [Check](#) feature.

#### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.



#### ASSIGNED ATTRIBUTES

From the **Construction geometry** list choose **On** to make the resulting objects available only in the feature's geometry sequence. The default option **Inherit from input** means that the resulting objects become construction geometry if all input objects are construction geometry. Choose **Off** to never output construction geometry objects. For more information see [Construction Geometry](#) in the *COMSOL Multiphysics Reference Manual*.

#### *Replace Faces*

---

By replacing faces from an object you can delete the geometric features formed by the faces. The deleted faces are replaced either by new faces created based on the edges surrounding the wound or by growing or shrinking of adjacent faces.



To open the **Tools** window for **Replace Faces**, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Replace Faces** (  ). You can also right-click the **Geometry** node and select the same option from the context menu.

---

**Note:** When you are in the **Tools** window for **Replace Faces**, you can at any time switch to another defeaturing tool by clicking one of the corresponding buttons at the top of the window.

---

Select the faces you want to replace in the **Graphics** window. They appear in the **Faces to replace** list. If the geometry sequence includes user-defined selections above the currently built node, choose **Manual** to select faces, or choose one of the selection nodes from the list next to **Faces to replace**.

Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Faces to replace** selections.




The Replace Faces tool can only be applied to objects that are represented by the Parasolid® geometry kernel, also called CAD objects.

---

In the **Heal method** list, select the method to use for covering the wounds after deleting the faces to be replaced: **Create capping faces** means that new faces are generated based on the edges surrounding each wound, while **Extend adjacent faces** means that the adjacent faces are grown or shrunk to heal the wounds. Select the **Heal as through hole** checkbox if you have selected faces that make up a hole that you want to delete and replace.

When you click the **Replace Selected** button, the program deletes and replaces the selected faces and adds a node corresponding to this operation to the geometry branch of the model tree. The Tools window for Replace Faces remains open so that you can continue defeaturing using this or another defeaturing tool.

If you want to modify the performed replace operation, select the added node in the geometry branch. Then edit the node's form that appears in the Settings window. Click the **Build Selected** button (  ) to see the result of your edits. The Settings window for Replace Faces contains the additional settings described below.

## SELECTIONS OF RESULTING ENTITIES




If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.



# Creating and Modifying Geometries

This section describes the operations for creating and modifying geometries listed in the table below.

TABLE 3-5: OPERATIONS FOR CREATING AND MODIFYING.



ICON	NAME	DESCRIPTION
	Cap Faces	Generate faces from edges to fill gaps and create solid objects, or to partition solids
	Knit to Solid	Knit surface objects to form solid or surface object
	Projection	Project 3D objects and entities to a work plane

## *Cap Faces*

You can add cap faces to fill holes in a geometry (for example, to make a domain for the void inside a cylinder geometry for simulating fluid flow inside the cylinder, or to create a domain inside a surface object with a hole) or to partition the geometry. To add cap faces to objects, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Cap Faces** (  ).

### **CAP FACES**

Select edges that form loops around the faces you want to create. The edges then appear in the **Bounding edges** list. If the geometry sequence includes user-defined selections above the **Cap Faces** node, choose **Manual** to select edges, or choose one of the selection nodes from the list next to **Bounding edges**.

Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Bounding edges** selections.

To automatically extend the selection to all adjacent edges that form a loop or chain, select the **Group adjacent edges** checkbox.

A cap face is created for each loop of edges in the input selection. The cap faces are joined with the original objects. If new closed volumes are created by the cap faces, these are converted to solid domains. The selected edges can contain more than one edge loop, but no two loops can have edges or vertices in common. The selected edges can contain edges from more than one object. In this case, each object is processed individually. This means that two edges or vertices can overlap as long as they are not

in the same object. It also means that if new closed volumes are created, but bounded by faces from more than one object, these volumes are not converted to solid domains. If you want to perform a **Cap Faces** operation involving more than one object, first unite the objects using a **Union** operation.

### SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).



Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.

### ASSIGNED ATTRIBUTES

From the **Construction geometry** list choose **On** to make the resulting objects available only in the feature's geometry sequence. The default option **Inherit from input** means that the resulting objects become construction geometry if all input objects are construction geometry. Choose **Off** to never output construction geometry objects. For more information see [Construction Geometry](#) in the *COMSOL Multiphysics Reference Manual*.



### *Knit to Solid*

---

To knit surface objects to form solid objects, from the **Geometry** toolbar, **Defeaturing and Repair** (  ) menu, select **Knit to Solid** (  ).

## KNIT TO SOLID

Select the objects to knit together in the **Graphics** window. They appear in the **Input objects** list.

From the **Input objects** list, choose **Manual** (default) to select the objects you want to knit together in the **Graphics** window. Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Input objects** selections.

Alternatively, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as **Construction Geometry**. If the geometry sequence includes user-defined selections above the **Knit to Solid** node, these will also be available in the **Input objects** list.

The knitting merges edges that have a distance smaller than the **Absolute repair tolerance** and deletes gaps and spikes smaller than the **Absolute repair tolerance**. If the **Fill holes** checkbox is selected the operation attempts to generate new faces to replace missing geometry.

The input surface objects must have manifold topology, and the operation can only form solids with manifold topology. An example of a solid object with nonmanifold topology is a solid that has an interior surface that separates two domains. A surface object that contains an edge that is adjacent to more than one boundary is an example of a surface object with nonmanifold topology.

## SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, domains, boundaries, edges, and points — that are applicable) in subsequent nodes in the geometry sequence. To also make all or one of the types of resulting entities (domains, boundaries, edges, and points) that the resulting objects consist of available as selections in all applicable selection lists (in physics and materials settings, for example), choose an option from the **Show in physics** list: **All levels**, **Domain selection**, **Boundary selection**, **Edge selection**, or **Point selection**. The default is **Domain selection**, which is suitable for use with materials and physics defined in domains. For use with a boundary condition, for example, choose **Boundary selection**. These selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the geometry sequence.



## ASSIGNED ATTRIBUTES

From the **Construction geometry** list choose **On** to make the resulting objects available only in the feature's geometry sequence. The default option **Inherit from input** means that the resulting objects become construction geometry if all input objects are construction geometry. Choose **Off** to never output construction geometry objects. For more information see [Construction Geometry](#) in the *COMSOL Multiphysics Reference Manual*.

## Projection



---

Use the **Projection** feature to compute the projection of 3D objects and entities to a work plane. This can be useful when you need to reference existing 3D objects in the 2D drawing on the work plane. You can also add a new 2D or 2D axisymmetric component and add the **Projection** node there. In that case you can select the work plane to use for the projection from the 3D component's geometry sequence, but first make sure that in the 3D component's **Geometry** node the **Geometry representation** is set to the **CAD kernel**.

To add a projection to a **Work Plane** node's **Plane Geometry** sequence, from the **Plane Geometry** toolbar select **Projection** () , or right-click a **Plane Geometry** node under a **Work Plane** node and select **Projection** (). Enter the properties of the projection using the following sections:

### PROJECTION

From the **Project** list, choose **All objects** (the default) to project all 3D geometry objects to the work plane, or choose **Selected objects**, **Selected domains**, **Selected boundaries**, **Selected edges**, or **Selected vertices** to project only the objects or entities that you add to the **Entities to project** list that appears. For **Selected Objects**, choose **All objects** to select all objects or choose **All nonconstruction objects** to automatically select all objects that have not been marked as [Construction Geometry](#). If the geometry sequence includes user-defined selections above the **Work Plane** node, choose **Manual** to select objects or entities, or choose one of the selection nodes from the list next to **Entities to project**.

Click the **Activate Selection** button to toggle between turning ON  and OFF  the **Entities to project** selections.

When projecting objects, domains, and boundaries you can select the **Projection type** to project the **Outline** (default) of the selected objects and entities, or to project the **Edges and vertices** only, or the **Outline, edges, and vertices**.

Projecting the outline for surface and solid objects results in the edges that form the boundary of the shadow of the object's faces. In this case the edges are projected only if they coincide with the outline. If you project the outline of a mixed object that contains isolated edges and vertices, only the outline of the faces is generated, the isolated edges and vertices are not projected.

For point and curve objects, projecting the outline is the same as projecting the edges and vertices.

You can change the settings for the **Repair tolerance** list if you experience problems with the projection operation. Geometric entities that have a distance less than the repair tolerance are merged.

- The default value in the **Repair tolerance** list is **Automatic**, which means a relative repair tolerance of  $10^{-6}$ .
- Choose **Relative** to enter a value for the **Relative repair tolerance** field (the default is determined by the main **Geometry** node's setting). This value is relative to the largest absolute value of the coordinates of all input objects.
- Choose **Absolute** to enter a value for the **Absolute repair tolerance** field (the default is determined by the main **Geometry** node's setting; SI unit: m). This value uses the same unit as the geometry sequence's length unit.

When you build this feature, the relative and absolute repair tolerances are set to the values that are used for the last projected object (with a precision of two digits). This is useful to find out the tolerance used for the last projected object. After the feature is built, you can set the **Repair tolerance** to either **Relative** or **Absolute**, then check the values displayed in the **Relative repair tolerance** or **Absolute repair tolerance** fields.

## SELECTIONS OF RESULTING ENTITIES

If you want to make the resulting entities contribute to a cumulative selection, select a cumulative selection from the **Contribute to** list (the default, **None**, gives no contribution), or click the **New** button to create a new cumulative selection (see [Cumulative Selections](#) in the *COMSOL Multiphysics Reference Manual*).

Select the **Resulting objects selection** checkbox to create predefined selections (for all levels — objects, boundaries, and points — that are applicable) in subsequent nodes in the plane geometry sequence. To also make all or one of the types of resulting entities (objects, boundaries, and points) available as selections in applicable selection lists in the main **Geometry** node's geometry sequence, choose an option from the **Show in 3D** list: **All levels**, **Object selection** (default), **Boundary selection**, or **Point selection**. These

selections do not appear as separate selection nodes in the model tree. Select **Off** to not make any selection available outside of the plane geometry sequence.

#### **ASSIGNED ATTRIBUTES**

From the **Construction geometry** list choose **On** to make the resulting objects available only in the feature's geometry sequence. The default option **Inherit from input** means that the resulting objects become construction geometry if all input objects are construction geometry. Choose **Off** to never output construction geometry objects. For more information see [Construction Geometry](#) in the *COMSOL Multiphysics Reference Manual*.



# Programming and Command Reference

In this section you find detailed COMSOL<sup>®</sup> API reference information for the geometry features in LiveLink<sup>™</sup> *for* PTC Creo Parametric<sup>™</sup>.

# Defeaturing Tools

To remove unnecessary details in objects imported from a 3D CAD file, and detect interferences between objects, you can use the defeaturing tools. You access these by typing:

```
model.component(<ctag>).geom(<tag>).defeaturing("Filletts");
model.component(<ctag>).geom(<tag>).defeaturing("Holes");
model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges");
model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces");
model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces");
model.component(<ctag>).geom(<tag>).defeaturing("Spikes");
model.component(<ctag>).geom(<tag>).defeaturing("ReplaceFaces");
model.component(<ctag>).geom(<tag>).defeaturing("DetachFaces");
model.component(<ctag>).geom(<tag>).
    defeaturing("DetectInterferences");
```

Using the defeaturing tools you can search for small details, without altering your geometry. If you find small details that you want to remove, a defeaturing tool can create a feature that removes the details from the geometry.

The features corresponding to the defeaturing tools are `DeleteFilletts`, `DeleteHoles`, `DeleteShortEdges`, `DeleteSliverFaces`, `DeleteSmallFaces`, `DeleteSpikes`, `ReplaceFaces`, and `DetachFaces`. If you already know which details you need to remove, it is also possible to create these features directly using the standard create syntax.

This section includes these topics:

- [Defeaturing Tools — Finding and Deleting Small Details](#)
- [Defeaturing Tools — Detach Faces](#)
- [Defeaturing Tools — Detect Interferences](#)
- [Defeaturing Tools — Replace Faces](#)

## *Defeaturing Tools — Finding and Deleting Small Details*

---

The defeaturing tools `Filletts`, `Holes`, `ShortEdges`, `SliverFaces`, `SmallFaces`, and `Spikes` search for and delete details smaller than a given size. First select the objects you want to examine by typing, for example,

```
model.component(<ctag>).geom(<tag>).defeaturing("Filletts").
    selection("input").set(<onames>);
```

where `<onames>` is a string array contains the object names.

Set the maximum size of the details (fillets in this case) you want to remove by typing

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    set("entsize",size);
```

The defeaturing tools `Fillets` and `Holes` also support specifying a minimum radius, to do this type (for fillets in this case):

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    set("minentsize",minsize);
```

To find the details in the specified size interval, type

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    find();
```

The found details appear in the selection

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    detail();
```

To get the number of found details, type

```
int nd = model.component(<ctag>).geom(<tag>).
    defeaturing("Fillets").detail().size();
```

To get the names of the found details, type

```
String[] filletNames = model.component(<ctag>).geom(<tag>).
    defeaturing("Fillets").detail().groupNames();
```

In general, a detail (fillet in this case) consists of a number of geometric entities. For example, a fillet consists of a number of faces. To get the entity numbers in the `n`th detail, type

```
int[] entities = model.component(<ctag>).geom(<tag>).
    defeaturing("Fillets").detail().groupEntities(n);
```

To get the object that contains the `n`th detail, type

```
String oname = model.component(<ctag>).geom(<tag>).
    defeaturing("Fillets").detail().groupObject(n);
```

To delete all details found, type

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    deleteAll(<ftag>);
```

This adds a feature, tagged `<ftag>`, that performs the deletion operation to the geometry sequence, after the current feature, and build this feature. In this case, it adds a `DeleteFillets` feature.

To delete a subset of the details found, type, for example

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillet").  
    detail().setGroup(2,5);
```

to delete fillets number 2 and 5. You can also use, for example,

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillet").  
    detail().addGroup(7,8);  
model.component(<ctag>).geom(<tag>).defeaturing("Fillet").  
    detail().removeGroup(3);
```

to add and remove details from the selection. Perform the deletion by typing

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillet").  
    delete(<ftag>);
```

This adds a `DeleteFillet` feature tagged `<ftag>` after the current feature in the geometry sequence.

#### DEFEATURING METHODS

`model.component(<ctag>).geom(<tag>).feature(<ftag>).find()` searches for small details, for a defeaturing feature `<ftag>`.

`model.component(<ctag>).geom(<tag>).defeaturing(tooltag).find()` searches for small details, for a defeaturing tool `tooltag`.

`model.component(<ctag>).geom(<tag>).defeaturing(tooltag).detail().selMethod` manipulates the selection of details to remove, for a defeaturing tool `tooltag`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).detail().selMethod` manipulates the selection of details to remove, for a defeaturing feature `<ftag>`.

`model.component(<ctag>).geom(<tag>).defeaturing(tooltag).delete(<ftag>)` creates a defeaturing feature of type `tooltag`, tagged `<ftag>`, with the properties currently specified in the defeaturing tool. The property `delete` of the created feature is set to `selected`. If the feature `<ftag>` can be built, it is inserted in the geometry sequence after the current feature, otherwise the feature is discarded.

`model.component(<ctag>).geom(<tag>).defeaturing(tooltag).deleteAll(<ftag>)` creates a defeaturing feature of type `tooltag`, tagged `<ftag>`, with the properties currently specified in the defeaturing tool. The property `delete` of the created feature is set to `all`. If the feature `<ftag>` can be built, it is inserted in the geometry sequence after the current feature, otherwise the feature is discarded.

## DEFEATURING SELECTION METHODS

For a defeaturing selection `sel` the following methods are available, in addition to the methods available for a general geometry selection.



Geometry Object Selection Methods in the *COMSOL Multiphysics Programming Reference Manual*

The `find` method on the corresponding feature or defeaturing tool provides the defeaturing selection with a list of details. Each detail is a group of geometric entities. Group numbers, `<groups>`, is an array of integers that index into the list of details.

You can select groups either by explicitly referring to group numbers, or by selecting geometric entities. In the latter case, any group that has nonempty intersection with the provided entity selection is selected.

`int[] sel.group(<groups>)` returns the group numbers for the selected groups.

`sel.addGroup(<groups>)` adds the specified groups to the selection.

`sel.setGroup(<groups>)` sets the selection groups.

`sel.removeGroup(<groups>)` removes the specified groups from the selection.

`String[] sel.groupNames()` returns a list of names of the groups found.

`String sel.groupObject(<group>)` returns the name of the geometry object that contains the specified detail group.

`int[] sel.groupEntities(<group>)` returns the entity numbers of the specified detail group.

`int sel.size()` returns the number of detail groups found.

### *Defeaturing Tools — Detach Faces*

Use the `DetachFaces` tool to detach faces from a solid object (the parent) to form a new solid object (the child). Select the faces to detach and properties for the operation like in the corresponding feature `DetachFaces`. The detach operation is performed when you issue the command

```
model.component(<ctag>).geom(<tag>).defeaturing("DetachFaces").  
    delete(<ftag>);
```

## *Defeaturing Tools — Detect Interferences*

---

Access the `DetectInterferences` tool by the command

```
GeomDefeature tool = model.component(<ctag>).geom(<tag>).  
    defeaturing("DetectInterferences");
```

To access the input objects selection, use

```
GeomObjectSelection input = tool.selection("input");
```

To set the tolerance for detecting intersections, use

```
tool.set("abstol", value);
```

To set the tolerance for detecting gaps, use

```
tool.set("gaptol", value);
```

To find interferences, type

```
tool.find();
```

To access the resulting interferences, use

```
GeomObjectGroupSelection interf = tool.detail();
```

Each node listed in Interfering faces list in the user interface corresponds to a group of faces in `GeomObjectGroupSelection`. To access the data for a group, use its integer group index:

```
String label = interf.groupNames()[group];  
String objName = interf.groupObject(group);  
int[] faces = interf.groupEntities(group);  
double gapSize = interf.entSize(group)[0];
```

The face numbers in the groups do not refer to the input objects. Rather, they refer to objects in a local state, where the tool has imprinted edges where objects interfere. To hide faces in the local state, first type

```
tool.localState(true);
```

to enter the local state. After doing the hiding, type

```
tool.localState(false);
```

to exit the local state.

See also [DetectInterferences](#).

## *Defeaturing Tools — Replace Faces*

---

Use the `ReplaceFaces` tool to delete faces and replace them either with a new face or by growing or shrinking the adjacent faces. Select the faces to replace and properties for the operation like in the corresponding feature `ReplaceFaces`. The faces are replaced when you issue the command

```
model.component(<ctag>).geom(<tag>).defeaturing("ReplaceFaces").  
    delete(<ftag>);
```

This adds a `ReplaceFaces` feature tagged `<ftag>` after the current feature in the geometry sequence.

# Summary of Commands

- `CapFaces`
- `Check`
- `ConvertToCOMSOL`
- `DeleteFillet`
- `DeleteHoles`
- `DeleteShortEdges`
- `DeleteSliverFaces`
- `DeleteSmallFaces`
- `DeleteSpikes`
- `DetachFaces`
- `DetectInterferences`
- `Export`, `ExportFinal`
- `Import 3D CAD`
- `Knit`
- `LiveLinkPTCCreoParametric`
- `Projection`
- `Repair`
- `ReplaceFaces`

# Commands Grouped by Function

## *Commands for Creating and Modifying Geometry in 2D*

<b>FUNCTION</b>	<b>PURPOSE</b>
<a href="#">Projection</a>	Project 3D objects and entities to a 2D work plane

## *Commands for Defeaturing*

<b>FUNCTION</b>	<b>PURPOSE</b>
<a href="#">DeleteFillets</a>	Find and delete fillets in CAD objects
<a href="#">DeleteHoles</a>	Find and delete holes in CAD objects
<a href="#">DeleteShortEdges</a>	Find and delete short edges in CAD objects
<a href="#">DeleteSliverFaces</a>	Find and delete sliver faces in CAD objects
<a href="#">DeleteSmallFaces</a>	Find and delete small faces in CAD objects
<a href="#">DeleteSpikes</a>	Find and delete spikes in CAD objects
<a href="#">DetachFaces</a>	Detach faces from CAD objects to form a new solid
<a href="#">DetectInterferences</a>	Detect intersections, touches, gaps, and containments between CAD objects
<a href="#">ReplaceFaces</a>	Delete faces from CAD objects and heal the wounds

## *Commands for File Import, Export, Conversion, and Repair*

<b>FUNCTION</b>	<b>PURPOSE</b>
<a href="#">Check</a>	Check the validity of CAD objects
<a href="#">ConvertToCOMSOL</a>	Convert CAD Import Module geometry objects to COMSOL objects
<a href="#">Export, ExportFinal</a>	Export geometry objects to a 3D CAD file
<a href="#">Import 3D CAD</a>	Import geometry objects from a 3D CAD file
<a href="#">Knit</a>	Knit surface CAD objects to form solids or surface objects
<a href="#">Repair</a>	Repair CAD objects

### *Commands for Creating and Modifying Geometry in 3D*

<b>FUNCTION</b>	<b>PURPOSE</b>
<a href="#">CapFaces</a>	Add cap faces to fill holes in CAD geometries
<a href="#">ProjectToFaces</a>	Project edges to faces in 3D

### *Commands for Interfacing CAD Software*

<b>FUNCTION</b>	<b>PURPOSE</b>
<a href="#">LiveLinkPTCCreoParametric</a>	Synchronize geometry objects with a PTC Creo Parametric document

# Commands in Alphabetical Order

## *CapFaces*

---

### **PURPOSE**

Add cap faces to objects.

### **SYNTAX**

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"CapFaces");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(<property>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    setAttribute(<attribute>,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getAttribute(<attribute>);
```

### **DESCRIPTION**

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"CapFaces")
```

creates a **CapFaces** feature. A cap face is created for each loop of edges in the input selection. The cap faces are joined with the original objects. If new domains are created by the cap faces, these domains are made solid.

The input selection can contain more than one edge loop, but no two loops can have edges or vertices in common.

The input selection can contain edges from more than one object. In this case, each object is processed individually.

TABLE 4-1: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		The input edges.
groupadjedg	on   off	off	Extend edge selection to adjacent edge loop or chain.
selresult	on   off	off	Create selections of all resulting objects.

TABLE 4-1: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

The following attributes are available:

TABLE 4-2: VALID ATTRIBUTES

NAME	VALUE	DEFAULT	DESCRIPTION
construction	on   off   inherit	inherit	Designate the resulting objects as construction geometry. Use inherit to set the construction geometry attribute only if all input objects are construction geometry.

## Check

Check the validity of CAD objects.

### SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"Check");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property)
```

### DESCRIPTION

`model.component(<ctag>).geom(<tag>).feature().create(<ftag>,"Check")` creates a check feature tagged `<ftag>`. The following properties are available.

TABLE 4-3: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		Names of input objects

## SEE ALSO

[Repair](#)

## *ConvertToCOMSOL*

---

Convert CAD objects to COMSOL objects.

### SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().  
    create(<ftag>,"ConvertToCOMSOL");  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    selection(property);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    setAttribute(attribute,<value>);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    getAttribute(attribute);
```

### DESCRIPTION

```
model.component(<ctag>).geom(<tag>).feature().  
    create(<ftag>,"ConvertToCOMSOL")
```

creates a ConvertToCOMSOL feature.

TABLE 4-4: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		Names of input objects.
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

The following attributes are available:

TABLE 4-5: VALID ATTRIBUTES

NAME	VALUE	DEFAULT	DESCRIPTION
construction	on   off   inherit	inherit	Designate the resulting objects as construction geometry. Use inherit to set the construction geometry attribute only if all input objects are construction geometry.

## SEE ALSO

[Import 3D CAD](#)

## *DeleteFillets*

Find and delete fillets in CAD objects.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"DeleteFillets");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).find();
model.component(<ctag>).geom(<tag>).feature(<ftag>).detail();

model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    selection(property);
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").find();
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    detail();
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    delete(<ftag>);
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    deleteAll(<ftag>);
```

## DESCRIPTION

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillets").
    delete(<ftag>)
```

creates a `DeleteFillets` feature tagged `<ftag>` with the specified properties. The property `delete` is set to `selected`. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

`model.component(<ctag>).geom(<tag>).defeaturing("Fillets").deleteAll(<ftag>)` works as the `delete` method, but the property `delete` is set to `all`.

It is also possible to create the `DeleteFillets` feature using the standard `create` method. The following properties are available.

TABLE 4-6: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>delete</code>	<code>all   selected</code>	<code>selected</code>	Delete all fillets of given size, or a selection. Only available for the feature.
<code>minentsize</code>	<code>double</code>	<code>0</code>	Minimum fillet radius.
<code>entsize</code>	<code>double</code>	<code>1e-3</code>	Maximum fillet radius.
<code>input</code>	<code>Selection</code>		Names of input objects.
<code>selresult</code>	<code>on   off</code>	<code>off</code>	Create selections of all resulting objects.
<code>selresultshow</code>	<code>all   obj   dom   bnd   edg   pnt   off</code>	<code>dom</code>	Show selections of resulting objects in physics, materials, and so on, or in part instances. <code>obj</code> is not available in a component's geometry. <code>dom</code> , <code>bnd</code> , and <code>edg</code> are not available in all features.
<code>contributeto</code>	<code>String</code>	<code>none</code>	Tag of cumulative selection to contribute to.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).find()` searches the input objects for fillets with radius less than `entsize`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).detail()` returns a selection object where you can select a subset of the fillets found.

The `find` and `detail` methods of

```
model.component(<ctag>).geom(<tag>).defeaturing("Fillets")
```

have the corresponding functionality for the defeaturing tool.

Only faces that can be deleted without invalidating the object are deleted. If a fillet was not possible to delete, a warning is given, accessible through `model.geom(<tag>).feature(<ftag>).problem()`.

## COMPATIBILITY

The following property is no longer supported:

TABLE 4-7: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx	none	Output variables

## EXAMPLE

The following example imports the CAD object in the COMSOL Multiphysics geometry file `defeaturing_demo_3.mphbin` and finds all fillets with radius less than  $4 \cdot 10^{-3}$ . The first of these fillets is deleted.

```

Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1", "Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename", "defeaturing_demo_3.mphbin");
model.component("comp1").geom("geom1").run("imp1");
model.component("comp1").geom("geom1").feature().
    create("dfi1", "DeleteFillets");
model.component("comp1").geom("geom1").feature("dfi1").
    selection("input").
    set("imp1");
model.component("comp1").geom("geom1").feature("dfi1").
    set("entsize", 4e-3);
model.component("comp1").geom("geom1").feature("dfi1").find();
model.component("comp1").geom("geom1").feature("dfi1").detail().
    setGroup(1);
model.component("comp1").geom("geom1").run();

```

## SEE ALSO

[ReplaceFaces](#)

### *DeleteHoles*

---

Find and delete holes in CAD objects.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"DeleteHoles");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).find();
model.component(<ctag>).geom(<tag>).feature(<ftag>).detail();

model.component(<ctag>).geom(<tag>).defeaturing("Holes").
    selection(property);
model.component(<ctag>).geom(<tag>).defeaturing("Holes").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("Holes").find();
model.component(<ctag>).geom(<tag>).defeaturing("Holes").detail();
model.component(<ctag>).geom(<tag>).defeaturing("Holes").
    delete(<ftag>);
model.component(<ctag>).geom(<tag>).defeaturing("Holes").
    deleteAll(<ftag>);
```

## DESCRIPTION

`model.component(<ctag>).geom(<tag>).defeaturing("Holes").delete(<ftag>)` creates a `DeleteHoles` feature tagged `<ftag>` with the specified properties. The property `delete` is set to `selected`. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

`model.component(<ctag>).geom(<tag>).defeaturing("Holes").deleteAll(<ftag>)` works as the `delete` method, but the property `delete` is set to `all`.

It is also possible to create the `DeleteHoles` feature using the standard `create` method. The following properties are available.

TABLE 4-8: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>delete</code>	<code>all   selected</code>	<code>selected</code>	Delete all holes of given size, or a selection. Only available for the feature
<code>minentsize</code>	<code>double</code>	<code>0</code>	Minimum hole radius
<code>entsize</code>	<code>double</code>	<code>1e-3</code>	Maximum hole radius
<code>input</code>	<code>Selection</code>		Names of input objects

TABLE 4-8: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
selresult	on   off	off	Create selections of all resulting objects
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features
contributeto	String	none	Tag of cumulative selection to contribute to

`model.component(<ctag>).geom(<tag>).feature(<ftag>).find()` searches the input objects for holes with radius less than `entsize`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).detail()` returns a selection object where you can select a subset of the holes found.

The `find` and `detail` methods of `model.component(<ctag>).geom(<tag>).defeaturing("Holes")` have the corresponding functionality for the defeaturing tool.

Only faces that can be deleted without invalidating the object are deleted. If a hole was not possible to delete, a warning is given, accessible through `model.component(<ctag>).geom(<tag>).feature(<ftag>).problem()`.

## COMPATIBILITY

The following property is no longer supported:

TABLE 4-9: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx	none	Output variables

## EXAMPLE

The following example imports the CAD object in the COMSOL Multiphysics geometry file `defeaturing_demo_3.mphbin` and finds all holes with radius less than  $4 \cdot 10^{-2}$ . The first four of these holes are deleted.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
```

```
model.component("comp1").geom("geom1").feature().
    create("imp1", "Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename", "defeaturing_demo_3.mphbin");
model.component("comp1").geom("geom1").run("imp1");
model.component("comp1").geom("geom1").feature().
    create("dho1", "DeleteHoles");
model.component("comp1").geom("geom1").feature("dho1").
    selection("input").
    set("imp1");
model.component("comp1").geom("geom1").feature("dho1").
    set("entsize", 4e-2);
model.component("comp1").geom("geom1").feature("dho1").find();
model.component("comp1").geom("geom1").feature("dho1").
    detail().setGroup(1, 2, 3, 4);
model.component("comp1").geom("geom1").run();
```

## SEE ALSO

[ReplaceFaces](#)

### *DeleteShortEdges*

---

Find and delete short edges in CAD objects.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"DeleteShortEdges");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).find();
model.component(<ctag>).geom(<tag>).feature(<ftag>).detail();

model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").
    selection(property);
model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").
    find();
model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").
    detail();
model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").
    delete(<ftag>);
model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").
    deleteAll(<ftag>);
```

## DESCRIPTION

`model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").delete(<ftag>)` creates a `DeleteShortEdges` feature tagged `<ftag>` with the specified properties. The property `delete` is set to `selected`. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

`model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges").deleteAll(<ftag>)` works as the `delete` method, but the property `delete` is set to `all`.

It is also possible to create a `DeleteShortEdges` feature using the standard `create` method. The following properties are available.

TABLE 4-10: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>delete</code>	<code>all   selected</code>	<code>selected</code>	Delete all edges of given size, or a selection. Only available for the feature.
<code>entsize</code>	<code>double</code>	<code>1e-3</code>	Maximum edge length

TABLE 4-10: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		Names of input objects
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).find()` searches the input objects for edges of length less than `entsize`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).detail()` returns a selection object where you can select a subset of the edge sets found.

The `find` and `detail` methods of `model.component(<ctag>).geom(<tag>).defeaturing("ShortEdges")` have the corresponding functionality for the defeating tool.

Only edges that can be deleted without invalidating the object are deleted. If an edge was not possible to delete, a warning is given, accessible through `model.component(<ctag>).geom(<tag>).feature(<ftag>).problem()`.

## COMPATIBILITY

The lengths of the edges are no longer returned.

The following property is no longer supported:

TABLE 4-11: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx	none	Output variables

## EXAMPLE

The following example imports the file `defeaturing_demo_4.x_b` and finds all edges with length less than  $3 \cdot 10^{-3}$ . The first of these edges is deleted.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
```

```

model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1","Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename","defeaturing_demo_4.x_b");
model.component("comp1").geom("geom1").runAll();
model.component("comp1").geom("geom1").feature().
    create("dse1","DeleteShortEdges");
model.component("comp1").geom("geom1").feature("dse1").
    selection("input").
    set("imp1");
model.component("comp1").geom("geom1").feature("dse1").
    set("entsize",3e-3);
model.component("comp1").geom("geom1").feature("dse1").find();
model.component("comp1").geom("geom1").feature("dse1").
    detail().setGroup(1);
model.component("comp1").geom("geom1").runAll();

```

### *DeleteSliverFaces*

---

Find and delete sliver faces in CAD objects.

#### **SYNTAX**

```

model.component(<ctag>).geom(gname).feature().
    create(<ftag>,"DeleteSliverFaces");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).find();
model.component(<ctag>).geom(<tag>).feature(<ftag>).detail();

model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").
    selection(property);
model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").
    find();
model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").
    detail();
model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").
    delete(<ftag>);
model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").
    deleteAll(<ftag>);

```

## DESCRIPTION

`model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").delete(<ftag>)` creates a `DeleteSliverFaces` feature tagged `<ftag>` with the specified properties. The property `delete` is set to `selected`. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

`model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces").deleteAll(<ftag>)` works as the `delete` method, but the property `delete` is set to `all`.

It is also possible to create a `DeleteSliverFaces` feature using the standard `create` method. The following properties are available.

TABLE 4-12: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>delete</code>	<code>all   selected</code>	<code>selected</code>	Delete all sliver faces of given width, or a selection. Only available for the feature.
<code>entsize</code>	<code>double</code>	<code>1e-3</code>	Maximum face width.
<code>input</code>	Selection		Names of input objects.
<code>selresult</code>	<code>on   off</code>	<code>off</code>	Create selections of all resulting objects.
<code>selresultshow</code>	<code>all   obj   dom   bnd   edg   pnt   off</code>	<code>dom</code>	Show selections of resulting objects in physics, materials, and so on, or in part instances. <code>obj</code> is not available in a component's geometry. <code>dom</code> , <code>bnd</code> , and <code>edg</code> are not available in all features.
<code>contributeto</code>	String	<code>none</code>	Tag of cumulative selection to contribute to.

Sliver faces are narrow but long faces with large aspect ratio, which usually give rise to extremely fine local meshes in their vicinity.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).find()` searches the input objects for faces with width less than `entsize`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).detail()` returns a selection object where you can select a subset of the faces found.

The `find` and `detail` methods of `model.component(<ctag>).geom(<tag>).defeaturing("SliverFaces")` have the corresponding functionality for the defeaturing tool.

Only faces that can be deleted without invalidating the object are deleted. If a face was not possible to delete, a warning message is given.

## COMPATIBILITY

The following property is no longer supported:

TABLE 4-13: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx   status	none	Output variables

## EXAMPLE

The following example imports the geometry model from the file `defeaturing_demo_5.x_b`, finds sliver faces narrower than  $2 \cdot 10^{-3}$ , and deletes the first of these.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1", "Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename", "defeaturing_demo_5.x_b");
model.component("comp1").geom("geom1").runAll();
model.component("comp1").geom("geom1").feature().
    create("dsl1", "DeleteSliverFaces");
model.component("comp1").geom("geom1").feature("dsl1").
    selection("input").
    set("imp1");
model.component("comp1").geom("geom1").feature("dsl1").
    set("entsize",2e-3);
model.component("comp1").geom("geom1").feature("dsl1").find();
model.component("comp1").geom("geom1").feature("dsl1").detail().
    setGroup(1);
model.component("comp1").geom("geom1").runAll();
```

## SEE ALSO

[ReplaceFaces](#), [DeleteSmallFaces](#)

## *DeleteSmallFaces*

---

Find and delete small faces in CAD objects.

### **SYNTAX**

```
model.component(<ctag>).geom(gname).feature().
    create(<ftag>,"DeleteSmallFaces");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).find();
model.component(<ctag>).geom(<tag>).feature(<ftag>).detail();

model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").
    selection(property);
model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").
    find();
model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").
    detail();
model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").
    delete(<ftag>);
model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").
    deleteAll(<ftag>);
```

### **DESCRIPTION**

`model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").delete(<ftag>)` creates a `DeleteSmallFaces` feature tagged `<ftag>` with the specified properties. The property `delete` is set to `selected`. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

`model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces").deleteAll(<ftag>)` works as the `delete` method, but the property `delete` is set to `all`.

It is also possible to create a `DeleteSmallFaces` feature using the standard `create` method. The following properties are available.

TABLE 4-14: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>delete</code>	<code>all   selected</code>	<code>selected</code>	Delete all small faces of given size, or a selection. Only available for the feature.
<code>entsize</code>	<code>double</code>	<code>1e-3</code>	Maximum face size.
<code>input</code>	<code>Selection</code>		Names of input objects.
<code>selresult</code>	<code>on   off</code>	<code>off</code>	Create selections of all resulting objects.
<code>selresultshow</code>	<code>all   obj   dom   bnd   edg   pnt   off</code>	<code>dom</code>	Show selections of resulting objects in physics, materials, and so on, or in part instances. <code>obj</code> is not available in a component's geometry. <code>dom</code> , <code>bnd</code> , and <code>edg</code> are not available in all features.
<code>contributeto</code>	<code>String</code>	<code>none</code>	Tag of cumulative selection to contribute to.

A small face is a face that fits within a sphere of specified radius, given in the property `entsize`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).find()` searches the input objects for faces with size less than `entsize`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).detail()` returns a selection object where you can select a subset of the faces found.

The `find` and `detail` methods of

`model.component(<ctag>).geom(<tag>).defeaturing("SmallFaces")` have the corresponding functionality for the defeating tool.

Only faces that can be deleted without invalidating the object are deleted. If a face was not possible to delete, a warning message is given, accessible through `model.component(<ctag>).geom(<tag>).feature(<ftag>).problem()`.

## COMPATIBILITY

The following property is no longer supported:

TABLE 4-15: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx   status	none	Output variables.

## EXAMPLE

The following example imports the geometry model from the file `defeaturing_demo_6.x_b`, finds sliver faces narrower than  $10^{-3}$ , and deletes the first of these.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1","Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename","defeaturing_demo_6.x_b");
model.component("comp1").geom("geom1").runAll();
model.component("comp1").geom("geom1").feature().
    create("df1","DeleteSmallFaces");
model.component("comp1").geom("geom1").feature("df1").
    selection("input").
    set("imp1");
model.component("comp1").geom("geom1").feature("df1").find();
model.component("comp1").geom("geom1").feature("df1").detail().
    setGroup(1);
model.component("comp1").geom("geom1").run();
```

## SEE ALSO

[ReplaceFaces](#), [DeleteSliverFaces](#)

### *DeleteSpikes*

---

Find and delete spikes in CAD objects.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"DeleteSpikes");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).find();
model.component(<ctag>).geom(<tag>).feature(<ftag>).detail();

model.component(<ctag>).geom(<tag>).defeaturing("Spikes").
    selection(property);
model.component(<ctag>).geom(<tag>).defeaturing("Spikes").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("Spikes").find();
model.component(<ctag>).geom(<tag>).defeaturing("Spikes").detail();
model.component(<ctag>).geom(<tag>).defeaturing("Spikes").
    delete(<ftag>);
model.component(<ctag>).geom(<tag>).defeaturing("Spikes").
    deleteAll(<ftag>);
```

## DESCRIPTION

`model.component(<ctag>).geom(<tag>).defeaturing("DeleteSpikes").delete(<ftag>)` creates a `DeleteSpikes` feature tagged `<ftag>` with the specified properties. The property `delete` is set to `selected`. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

`model.component(<ctag>).geom(<tag>).defeaturing("DeleteSpikes").deleteAll(<ftag>)` works as the `delete` method, but the property `delete` is set to `all`.

It is also possible to create a `DeleteSpikes` feature using the standard `create` method. The following properties are available.

TABLE 4-16: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>delete</code>	<code>all   selected</code>	<code>selected</code>	Delete all spikes of given width, or a selection. Only available for the feature.
<code>entsize</code>	<code>double</code>	<code>1e-3</code>	Maximum spike width.
<code>input</code>	<code>Selection</code>		Names of input objects.

TABLE 4-16: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

A spike is a long and narrow protrusion on an edge or corner of a face defined by two or three edges.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).find()` searches the input objects for spikes of width less than `entsize`.

`model.component(<ctag>).geom(<tag>).feature(<ftag>).detail()` returns a selection object where you can select a subset of the spikes found.

The `find` and `detail` methods of `model.component(<ctag>).geom(<tag>).defeaturing("Spikes")` have the corresponding functionality for the defeaturing tool.

Only spikes that can be deleted without invalidating the object are deleted. If a spike was not possible to delete, a warning message is given, accessible through `model.component(<ctag>).geom(<tag>).feature(<ftag>).problem()`.

## COMPATIBILITY

The width of each spike is no longer returned.

The following property is no longer supported:

TABLE 4-17: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx   status	none	Output variables.

## EXAMPLE

The following example imports the geometry model from the file `defeaturing_demo_7.x_b`, finds all spikes narrower than  $10^{-4}$ , and deletes the first of these.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1", "Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename", "defeaturing_demo_7.x_b");
model.component("comp1").geom("geom1").runAll();
model.component("comp1").geom("geom1").feature().
    create("dsp1", "DeleteSpikes");
model.component("comp1").geom("geom1").feature("dsp1").
    selection("input").
    set("imp1");
model.component("comp1").geom("geom1").feature("dsp1").
    set("entsize", 1e-4);
model.component("comp1").geom("geom1").feature("dsp1").find();
model.component("comp1").geom("geom1").feature("dsp1").detail().
    setGroup(1);
model.component("comp1").geom("geom1").runAll();
```

## SEE ALSO

[DeleteShortEdges](#), [DeleteSliverFaces](#)

### *DetachFaces*

---

Detach faces from CAD objects to form a new (child) solid.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"DetachFaces");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);

model.component(<ctag>).geom(<tag>).defeaturing("DetachFaces").
    selection(property);
model.component(<ctag>).geom(<tag>).defeaturing("DetachFaces").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("DetachFaces").
    delete(<ftag>);
```

## DESCRIPTION

`model.component(<ctag>).geom(<tag>).defeaturing("DetachFaces").delete(<ftag>)` creates a `DetachFaces` feature tagged `<ftag>` with the specified properties. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

It is also possible to create a `DetachFaces` feature using the standard create method.

TABLE 4-18: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		Faces to detach.
healchild	fill   patchchild   patchparent	patchparent	Healing method used on the child object.
healparent	fill   patch	patch	Healing method used on the parent object.
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

The faces in the property `input` are detached from their *parent* object. A new solid, the *child* object, are formed from the detached faces. The output objects are the healed parent and child objects.

The property `healparent` determines how the parent object is healed to form a new solid after detaching the faces. The value `fill` means that a new face is formed based on the surrounding edges of each wound. The value `patch` means that the surrounding faces of each wound are grown or shrunk.

The property `healchild` determines how the child solid is constructed from the detached faces. The value `fill` means that a new face is formed based on the surrounding edges of each wound. The value `patchchild` means that the detached faces are grown or shrunk to form a solid. The value `patchparent` means that the parent faces surrounding the detached faces are grown or shrunk to form a solid together with the detached faces.

### EXAMPLE

The following example imports the COMSOL Multiphysics geometry file `defeaturing_demo_2.mphbin` and detaches a hole defined by a set of faces:

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1", "Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename", "defeaturing_demo_2.mphbin");
model.component("comp1").geom("geom1").runAll();
model.component("comp1").geom("geom1").feature().
    create("det1", "DetachFaces");
model.component("comp1").geom("geom1").feature("det1").
    selection("input").set("imp1",6,7,8,9,11,12,13);
model.component("comp1").geom("geom1").runAll();
```

### COMPATIBILITY

The following property is no longer supported:

TABLE 4-19: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx	none	Output variables

### SEE ALSO

[ReplaceFaces](#)

## DetectInterferences

---

Detect intersections, touches, gaps, and containments between CAD objects.

### SYNTAX

```
model.component(<ctag>).geom(<tag>).
    defeating("DetectInterferences").selection(property);
model.component(<ctag>).geom(<tag>).
    defeating("DetectInterferences").set(property,<value>);
model.component(<ctag>).geom(<tag>).
    defeating("DetectInterferences").selection(property);
model.component(<ctag>).geom(<tag>).
    defeating("DetectInterferences").find();
model.component(<ctag>).geom(<tag>).
    defeating("DetectInterferences").detail();
```

### DESCRIPTION

See [Defeaturing Tools — Detect Interferences](#).

Available properties:

TABLE 4-20: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		Input objects
abstol	double	0.1[mm]	Absolute tolerance for detecting intersections
gaptol	double	1[mm]	Absolute tolerance for detecting gaps
showingraphics	interferingonly   selected   other   both   all	selected	Objects to show in graphics
groupbyobject	boolean	false	Group interferences by object in GUI
showintersections	boolean	true	List intersections in GUI
showtouches	boolean	true	List touches in GUI
showgaps	boolean	true	List gaps in GUI
showcontainments	boolean	true	List containments in GUI

## Export, ExportFinal

---

Using the CAD Import Module, Design Module, or a LiveLink product for CAD software, export selected geometry objects or the finalized geometry to a 3D CAD format, such as ACIS, Parasolid, STEP, and IGES.

To export selected geometry objects to a file, first select the objects to export using

```
model.component(<ctag>).geom(<tag>).export().selection().set(<objnames>);
```

where *<objnames>* is a string array of object names.

Set the file format using

```
model.component(<ctag>).geom(<tag>).export().setType(<format>);
```

where *<format>* determines the file format. See [Table 4-21](#) for valid type value names available with the CAD Import Module, Design Module, or a LiveLink product for CAD software.

TABLE 4-21: FILE FORMATS SUPPORTED FOR EXPORT.

FILE FORMAT	FILE EXTENSION	TYPE VALUE
Parasolid Binary (3D)	.x_b, .xmt_bin	parasolidbin
Parasolid Text (3D)	.x_t, .xmt_txt	parasolidascii
ACIS Binary (3D)	.sab	acisbin
ACIS Text (3D)	.sat	acisascii
IGES File (3D)	.igs, .iges	iges
STEP File (3D)	.step, .stp	step

Check which file format is set for the export using

```
String formatType =  
model.component(<ctag>).geom(<tag>).export().getType();
```

To export the file enter

```
model.component(<ctag>).geom(<tag>).export(<filename>);
```

To export the finalized geometry to a file, enter

```
model.component(<ctag>).geom(<tag>).exportFinal(<filename>);
```

where *<filename>* is a string.

### EXPORTING TO AN ACIS FILE

When exporting to an ACIS file you can set the ACIS file format version using

```
model.component(<ctag>).geom(<tag>).export().setAcisVersion(<version>);
```

where *<version>* is a string 4.0, 7.0, or 2016 1.0. Default is 2016 1.0.

Check which ACIS file format version is set for the export using

```
model.component(<ctag>).geom(<tag>).export().getAcisVersion();
```

### EXPORTING TO A PARASOLID FILE

The Parasolid text or binary file generated by the export is of version 37.

When exporting to a Parasolid format, a unit conversion can optionally be performed during export. Use the following method to select the export length unit:

```
model.component(<ctag>).geom(<tag>).export().setLengthUnit(<unit>);
```

where *<unit>* is either `fromgeom` (default) to disable unit conversion or a COMSOL Multiphysics length unit, such as `m` for meters or `in` for inches. To get the current value of the export length unit type:

```
model.component(<ctag>).geom(<tag>).export().getLengthUnit();
```

To decide how the nonmanifold objects are exported use the following method:

```
model.component(<ctag>).geom(<tag>).export().setSplitInManifold(<value>);
```

where *<value>* is either `true` (default) to split the objects into manifold objects during the export, or `false` to export the unmodified objects. To get the current method used for exporting nonmanifold objects use:

```
model.component(<ctag>).geom(<tag>).export().getSplitInManifold();
```

### EXPORTING TO AN IGES FILE

When exporting to the IGES format, a unit conversion can optionally be performed during export. Use the following method to select the export length unit:

```
model.component(<ctag>).geom(<tag>).export().setLengthUnitIGES(<unit>);
```

where *<unit>* is either `fromgeom` (default) to disable unit conversion or a supported length unit: `uin`, `um`, `mil`, `mm`, `cm`, `in`, `ft`, `m`, `km`, `mi`. To get the current value of the export length unit type:

```
model.component(<ctag>).geom(<tag>).export().getLengthUnitIGES();
```

## EXPORTING TO A STEP FILE

When exporting to the STEP format, a unit conversion can optionally be performed during export. Use the following method to select the export length unit:

```
model.component(<ctag>).geom(<tag>).export().setLengthUnitSTEP(<unit>);
```

where *<unit>* is either `fromgeom` (default) to disable unit conversion or a supported length unit: `nm`, `uin`, `um`, `mil`, `mm`, `cm`, `in`, `dm`, `ft`, `m`, `km`, `mi`. To get the current value of the export length unit type:

```
model.component(<ctag>).geom(<tag>).export().getLengthUnitSTEP();
```

## SEE ALSO

[Import 3D CAD](#)

### *Import 3D CAD*

---

Import geometry objects from a 3D CAD file using the CAD Import Module, Design Module, or a LiveLink product for CAD software.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"Import");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    loadAssemblyTree();
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    importData();
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    setAttribute(attribute,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getAttribute(attribute);
```

## DESCRIPTION

```
model.component(<ctag>).geom(<tag>).feature().
create(<ftag>,"Import") creates an import feature. When the property filename
```

is set to a filename recognized as a 3D CAD file, the property type is set to cad. The following properties are available.

TABLE 4-22: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
check	on   off		Check imported objects for errors.
deletedetails	on   off	on	Delete small geometric details from the geometry.
filename	String		Filename.
fillholes	on   off	off	Attempt to generate new faces to replace missing geometry if the property knit is solid or surface.
fixerrors	auto   on   off	auto	Attempt to repair topological errors. Use auto to repair only if errors are detected.
healedges	on   off	off	Attempt to replace tolerant edges with accurately calculated edges.
importbodynames	auto   on   off	auto	Include the body name in the object name. This property is available only when filename is set to a STEP file extension. Use auto to include the body name only for multibody parts.
importtol	double	1e-5	Absolute repair tolerance.
keepbnd	on   off	on	Import surface objects.
keepfree	on   off	off	Import curve and point objects.
keepsolid	on   off	on	Import solid objects.
knit	solid   surface   off	solid	Knit together surface objects to form solids or surface objects.
minimizetol	on   off	off	Attempt to reduce edge and vertex tolerances.
removedundant	on   off	off	Remove redundant edges and vertices.
simplify	on   off	off	Simplify the underlying curve and surface manifolds of geometric entities.

TABLE 4-22: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
type	cad		Type of import.
unit	source   current	source	Take length unit from file or from the current geometry unit.
unitecurves	on   off	on	Unite curve objects.
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

The file to import is specified by `filename`, which can have of any of the following formats:

TABLE 4-23: SUPPORTED 3D CAD FILE FORMATS.

FILE FORMAT	NOTE	FILE EXTENSION
ACIS <sup>®</sup>	1, 2	.sat, .sab
AutoCAD <sup>®</sup>	1, 3	.dwg, .dxf
CATIA <sup>®</sup> V5	3, 4	.CATPart, .CATProduct
IGES	1, 2	.igs, .iges
Inventor <sup>®</sup>	1, 3	.ipt, .iam
NX <sup>™</sup>	1, 3	.prt
Parasolid <sup>®</sup>	1	.x_t, .x_b
PTC Creo Parametric <sup>™</sup>	1, 2	.prt, .asm
PTC Pro/ENGINEER <sup>®</sup>	1, 2	.prt, .asm
SOLIDWORKS <sup>®</sup>	1, 3, 5	.sldprt, .sldasm
STEP	1, 2	.step, .stp

Note 1: This format requires a license for the CAD Import Module, Design Module, or a LiveLink product for a CAD package.

Note 2: This format is available only on supported Windows® and Linux operating systems with Intel® 64-bit processors and on macOS.

Note 3: This format is available only on supported Windows® and Linux operating systems with Intel® 64-bit processors.

Note 4: This format requires, in addition to the CAD Import Module, Design Module, or a LiveLink product for a CAD package, a license for the File Import for CATIA V5 module.

Note 5: Files saved with an educational version of the SOLIDWORKS® software are not supported.

The imported geometry objects are represented using the Parasolid geometry kernel, which is the geometry kernel utilized by the CAD Import Module and the LiveLink products for CAD software.

When importing CAD assemblies saved in the file formats of the CATIA V5, Inventor, NX, PTC Creo Parametric, PTC Pro/ENGINEER, and SOLIDWORKS software it is possible to set up the import for importing only specified components. The method

```
model.geom(gname).feature(<ftag>).loadAssemblyTree()
```

loads the assembly tree from the chosen assembly file, after which the following properties become available:

TABLE 4-24: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
assemnodename	String[]		The names of the nodes in the assembly tree
assemnodefile	String[]		The file names of the nodes in the assembly tree.
assemnodedepth	int[]		The depths of the nodes in the assembly tree.
assemnodetransform	double[][]		The linear transforms of the nodes in the assembly tree. Each linear transform $Ax+b$ is 9 numbers (in the order column 1, column 2, column 3) for the 3-by-3 rotation matrix A followed by 3 numbers for the translation vector b.
assemnodeimport	String[]		The import flag ("on" or "off") for the nodes in the assembly tree.

The properties `assemnodename`, `assemnodefile`, `assemnodedepth`, and `assemnodetransform` are available for reading and should not be modified.

The method

```
model.geom(gname).feature(<ftag>).importData()
```

imports the file again, even if the feature is built.

The import can generate object, boundary, edge, and point selections based on material, layer, and color assignments in the 3D CAD file. The following properties are available for working these selections:

TABLE 4-25: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>selcadshownamesfromfileobj</code>	boolean	false	Show the object selection names from the file in the GUI.
<code>selcadnameobj</code>	String[]	Empty	Names of object selections in 3D CAD import.
<code>selcadnameinfileobj</code>	String[]	Empty	Original names of object selections in 3D CAD import. Read-only.
<code>selcadkeepobj</code>	on   off	Empty	Keep object selections in 3D CAD import.
<code>selcadshowobj</code>	on   off	Empty	Show object selections in 3D CAD import in physics, materials, and so on; in part instances; or in 3D from a plane geometry.
<code>selcadcontributetoobj</code>	String[]	Empty	Tags of cumulative selection to contribute to (or none to not contribute), for object selections in 3D CAD import.
<code>selcadttagobj</code>	String[]	Empty	Tags of object selections (read only, hidden in GUI) in 3D CAD import.

TABLE 4-25: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
selcadcolorobj	String[]	Empty	Colors of object selections (read only) in 3D CAD import. The color is stored as a comma-separated triple of numbers between 0 and 1. It can also be none (in which case it will be displayed in yellow).
selindividualintable	boolean	false	Show individual object selections and, for the knit case, individual original object selections in the CAD-tables.
selcadshownamesfromfilebnd	boolean	false	Show the boundary selection names from the file in the GUI.
selcadnamebnd	String[]	Empty	Names of boundary selections in 3D CAD import.
selcadnameinfilebnd	String[]	Empty	Original names of boundary selections in 3D CAD import. Read only.
selcadkeepbnd	on   off	Empty	Keep boundary selections in 3D CAD import.
selcadshowbnd	on   off	Empty	Show boundary selections in 3D CAD import in physics, materials, and so on; in part instances; or in 3D from a plane geometry.
selcadcontributetobnd	String[]	Empty	Tags of cumulative selection to contribute to (or none to not contribute), for boundary selections in 3D CAD import.

TABLE 4-25: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
selcadtagnbd	String[]	Empty	Tags of boundary selections (read-only, hidden in GUI) in 3D CAD import.
selcadcolorbnd	String[]	Empty	Colors of boundary selections (read only) in 3D CAD import. The color is stored as a comma-separated triple of numbers between 0 and 1. It can also be none (in which case it will be displayed in yellow).
selcadshownamesfromfileedg	boolean	false	Show the edge selection names from the file in the GUI.
selcadnameedg	String[]	Empty	Names of edge selections in 3D CAD import.
selcadnameinfileedg	String[]	Empty	Original names of edge selections in 3D CAD import. Read only.
selcadkeepedg	on   off	Empty	Keep edge selections in 3D CAD import.
selcadshowedg	on   off	Empty	Show edge selections in 3D CAD import in physics, materials, and so on; in part instances; or in 3D from a plane geometry.
selcadcontributetoedg	String[]	Empty	Tags of cumulative selection to contribute to (or none to not contribute), for edge selections in 3D CAD import.
selcadtagedg	String[]	Empty	Tags of edge selections (read only, hidden in GUI) in 3D CAD import.

TABLE 4-25: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
selcadcoloredg	String[]	Empty	Colors of edge selections (read only) in 3D CAD import. The color is stored as a comma-separated triple of numbers between 0 and 1. It can also be none (in which case it will be displayed in yellow).
selcadshownamesfromfilepnt	boolean	false	Show the point selection names from the file in the GUI.
selcadnamepnt	String[]	Empty	Names of point selections in 3D CAD import.
selcadnameinfilepnt	String[]	Empty	Original names of point selections in 3D CAD import. Read only.
selcadkeeppnt	on   off	Empty	Keep point selections in 3D CAD import.
selcadshowpnt	on   off	Empty	Show point selections in 3D CAD import in physics, materials, and so on; in part instances; or in 3D from a plane geometry.
selcadcontributept	String[]	Empty	Tags of cumulative selection to contribute to (or none to not contribute), for point selections in 3D CAD import.

TABLE 4-25: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
selcadttagpnt	String[]	Empty	Tags of point selections (read only, hidden in GUI) in 3D CAD import.
selcadcolorpnt	String[]	Empty	Colors of point selections (read only) in 3D CAD import. The color is stored as a comma-separated triple of numbers between 0 and 1. It can also be none (in which case it will be displayed in yellow).

The following attributes are available:

TABLE 4-26: VALID ATTRIBUTES

NAME	VALUE	DEFAULT	DESCRIPTION
construction	on   off	off	Designate the resulting objects as construction geometry.

### COMPATIBILITY

The following properties are no longer supported:

TABLE 4-27: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
coercion	solid   face   off	solid	Alias for knit. face is equivalent to surface.
repair	on   off	on	Replaced by deletedetails.

### SEE ALSO

[Export](#), [ExportFinal](#)

### *Knit*

Knit surface CAD objects to form solids or surface objects.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().  
    create(<ftag>,"Knit");  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    selection(property);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    set(property,<value>);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    getType(property)  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    setAttribute(attribute,<value>);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    getAttribute(attribute);
```

## DESCRIPTION

`model.component(<ctag>).geom(<ftag>).feature().create(<ftag>,"Knit")` creates a knit feature tagged `<ftag>`. The following properties are available.

TABLE 4-28: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
fillholes	on   off	off	Attempt to generate new faces to replace missing geometry
input	Selection		Names of input surface objects.
repairtol	double	1e-5	Absolute repair tolerance.
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

This function also removes gaps and spikes that are within the absolute tolerance specified in the property `repairtol`.

The following attributes are available:

TABLE 4-29: VALID ATTRIBUTES

NAME	VALUE	DEFAULT	DESCRIPTION
construction	on   off   inherit	inherit	Designate the resulting objects as construction geometry. Use <code>inherit</code> to set the construction geometry attribute only if all input objects are construction geometry.

### COMPATIBILITY

The following property is no longer supported:

TABLE 4-30: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx	none	Output variables.

### EXAMPLE

The following example imports the file `repair_demo_2.x_b`, and knits the surface objects into a solid. A gap is also removed during the operation.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1","Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename","repair_demo_2.x_b");
model.component("comp1").geom("geom1").runAll();
model.component("comp1").geom("geom1").feature().
    create("knit1","Knit");
model.component("comp1").geom("geom1").feature("knit1").
    selection("input").set("imp1");
model.component("comp1").geom("geom1").feature("knit1").
    set("repairtol",1e-3);
model.component("comp1").geom("geom1").runAll();
```

### SEE ALSO

[Repair](#)

### *LiveLinkPTCCreoParametric*

Synchronize geometry objects with an PTC Creo Parametric document.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().  
    create(<ftag>,"LiveLinkPTCCreoParametric");  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    set(property,<value>);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    getType(property);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    updateCadParamTable(add,repl);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    importData();  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    setAttribute(attribute,<value>);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    getAttribute(attribute);
```

## DESCRIPTION

```
model.component(<ctag>).geom(<tag>).feature().  
    create(<ftag>,"LiveLinkPTCCreoParametric")  
creates a LiveLinkPTCCreoParametric feature.
```

The method

```
model.component(<ctag>).geom(<tag>).feature(<ftag>).importData();
```

sends the parameters with names in `param` and the values in `paramexpr` to PTC Creo Parametric, then rebuilds the geometry in PTC Creo Parametric using the parameters, and sends back the geometry objects to COMSOL.

The imported geometry objects are represented using the Parasolid geometry kernel, which is the geometry kernel utilized by the CAD Import Module and the LiveLink products for CAD software.

The method

```
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    updateCadParamTable(add,repl);
```

updates the properties `param` and `paramexpr` with data read from PTC Creo Parametric. If the `add` argument is true, all parameter names retrieved from PTC Creo Parametric that do not already exist in `param` are appended to `param`, corresponding COMSOL Multiphysics parameter names are appended to `paramexpr` and the corresponding values are added to the COMSOL Multiphysics global parameters table. If the `repl` argument is true, all parameters already present in `param` that also have `sync` set to on have their corresponding values replaced by the values retrieved from PTC Creo Parametric. If `paramexpr` has a value equal to a COMSOL

Multiphysics parameter, the value of that parameter is replaced. Otherwise, if `paramexpr` is a numerical value, possibly with unit, the value of `paramexpr` is replaced.

The following properties are available.

TABLE 4-31: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
<code>check</code>	<code>on   off</code>		Check imported objects for errors.
<code>deletedetails</code>	<code>on   off</code>	<code>off</code>	Delete small geometric details from the geometry.
<code>document</code>	String		The full path of the synchronized CAD document.
<code>fixerrors</code>	<code>auto   on   off</code>	<code>auto</code>	Attempt to repair errors. Use <code>auto</code> to repair only if errors are detected.
<code>importtol</code>	double	<code>1e-5</code>	Absolute repair tolerance.
<code>instance</code>	String		The family table instance of the synchronized CAD document.
<code>keepbnd</code>	<code>on   off</code>	<code>on</code>	Import surface objects.
<code>keepsolid</code>	<code>on   off</code>	<code>on</code>	Import solid objects.
<code>param</code>	String[]		Names of parameters to set in PTC Creo Parametric. Only parameters with <code>sync</code> set to <code>on</code> are sent.
<code>paramexpr</code>	String[]   double[]		Values of parameters to send to PTC Creo Parametric.
<code>removedundant</code>	<code>on   off</code>	<code>off</code>	Remove redundant edges and vertices.
<code>simplify</code>	<code>on   off</code>	<code>off</code>	Simplify the underlying curve and surface manifolds of geometric entities
<code>selname</code>	String[]		Read only property that corresponds to the names of the resulting selections.
<code>seltag</code>	String[]		Read only property that corresponds to the tags of the resulting selections.

TABLE 4-31: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
simprep	String		The simplified representation of the synchronized CAD document.
sync	String[]		Enable/disable synchronization of parameters. Valid values are on and off.
synchronizewith	active   specified	active	Synchronize the active CAD document in PTC Creo Parametric or the specified document.
unit	source   current	source	Take length unit from PTC Creo Parametric, or from the current geometry unit.

The following properties are available for offline synchronization.

TABLE 4-32: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
offline	on   off		Activate offline synchronization.
selectsweep	studyTag/studyStep Tag   none	none	Parametric sweep to request (for example stdl/param).
receivecount	integer	0	Number of synchronizations left in received synchronization file. Read only.
receivefilename	String	Empty	Received synchronization file. Read only.
requestfilename	String	Empty	Pending request file. Read only.
sweepcount	integer	0	Number of parameter tuples in received synchronization file with parametric sweep. Read only.
sweepfilename	String	Empty	Received synchronization file with parametric sweep. Read only.

The method

```
model.component(<ctag>).geom(<tag>).feature(<ftag>).
  receiveData(filename);
```

loads the synchronization file `filename`.

The method

```
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
  receiveDataNext();
```

loads the next synchronization from the previously received synchronization file that contains multiple synchronizations.

The method

```
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
  requestData(filename);
```

saves the request file `filename` for offline synchronization.

The method

```
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
  requestDataAppend();
```

appends a request for synchronization to the previously saved request file.

The following attributes are available:

TABLE 4-33: VALID ATTRIBUTES

NAME	VALUE	DEFAULT	DESCRIPTION
construction	on   off	off	Designate the resulting objects as construction geometry.

## COMPATIBILITY

The following property is no longer supported:

TABLE 4-34: OBSOLETE PROPERTIES

PROPERTY	VALUE	DEFAULT	DESCRIPTION
repair	on   off	off	Replaced by deletedetails.

## *Projection*

### PURPOSE

Project 3D objects and entities to a 2D work plane.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature(<wptag>).  
    geom().create(<ftag>,"Projection");  
model.component(<ctag>).geom(<tag>).feature(<wptag>).  
    geom().feature(<ftag>).selection("input");  
model.component(<ctag>).geom(<tag>).feature(<wptag>).  
    geom().feature(<ftag>).set(property,<value>);  
model.component(<ctag>).geom(<tag>).feature(<wptag>).  
    geom().feature(<ftag>).getType(property)  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    setAttribute(attribute,<value>);  
model.component(<ctag>).geom(<tag>).feature(<ftag>).  
    getAttribute(attribute);
```

## DESCRIPTION

Use

```
model.component(<ctag>).geom(<tag>).feature(<wptag>).geom().  
    create(<ftag>,"Projection")
```

to create a projection feature tagged *<ftag>* in the 2D sequence of the work plane feature *<wptag>*. It can compute the projection of 3D objects and entities to the work plane.

By default, you get the projection for all 3D objects that were generated by the features preceding the work plane feature. To select a subset of these objects or to select entities, set the *project* property to the appropriate entity level, and use the *property input* to select the 3D objects or entities.

The following properties are available.

TABLE 4-35: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
absrepairtool		...geom(<tag>). absRepairTol()	Absolute repair tolerance.
input	Selection		Entities to project. Used when project is not all.
project	all   obj   dom   bnd   edg   vtx	all	Project all objects or selected objects or entities
projectiontype	edgvtx   outline   all	outline	Projection type. Used when project is all, dom, or bnd.

TABLE 4-35: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
repairtol	double	...geom(<tag>). repairTol()	Relative repair tolerance, relative to size of each input object.
repairtoltype	auto   relative   absolute	...geom(<tag>). repairTolType()	Repair tolerance type: automatic, relative, or absolute.
workplane	String		Work plane to project onto.
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   bnd   pnt   off	bnd	Show selections, if selresult is on, in physics, materials, and so on; or in 3D from a plane geometry. obj is not available in a component's geometry.
contributeto	String	none	Tag of cumulative selection to contribute to.

The following attributes are available:

TABLE 4-36: VALID ATTRIBUTES

NAME	VALUE	DEFAULT	DESCRIPTION
construction	on   off   inherit	inherit	Designate the resulting objects as construction geometry. Use <code>inherit</code> to set the construction geometry attribute only if all input objects are construction geometry.

## SEE ALSO

[CrossSection](#), [WorkPlane](#)

## *Repair*

Repair CAD objects.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"Repair");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property)
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    setAttribute(attribute,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getAttribute(attribute);
```

## DESCRIPTION

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"Repair")
```

creates a repair feature tagged <ftag>. The following properties are available.

TABLE 4-37: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		Names of input objects.
check	on   off	on	Check the input objects for errors.
deletedetails	on   off	on	Delete small geometric details from the geometry.
fixerrors	on   off	on	Attempt to repair errors.
healedges	on   off	off	Attempt to replace tolerant edges with accurately calculated edges.
minimizetol	on   off	off	Attempt to reduce edge and vertex tolerances.
repairtol	double	1e-5	Absolute repair tolerance
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.

TABLE 4-37: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
simplify	on   off	off	Simplify the underlying curve and surface manifolds of geometric entities
repairfacetoface	on   off	off	Repair face-to-face inconsistencies in solid objects
contributeto	String	none	Tag of cumulative selection to contribute to.

The function tries to remove or repair the following geometric and topological errors:

- Entities with invalid sense
- Invalid edge and vertex tolerances
- Invalid manifolds
- Self-intersecting manifolds
- Non-G1 manifolds
- Missing edge or vertex manifolds
- Missing vertex
- Vertices not on curve of edge
- Edges and vertices not on surface of face
- Surface self-intersections that lie outside the face
- Edge intersections that have no vertex
- Removal of discontinuities by either splitting or smoothing.

The function can also remove small geometric details including short edges, small faces, sliver faces, and spikes.

The following attributes are available:

TABLE 4-38: VALID ATTRIBUTES

NAME	VALUE	DEFAULT	DESCRIPTION
construction	on   off   inherit	inherit	Designate the resulting objects as construction geometry. Use inherit to set the construction geometry attribute only if all input objects are construction geometry.

## COMPATIBILITY

The following property is no longer supported:

TABLE 4-39: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx	none	Output variables

## EXAMPLE

The following example imports the file `repair_demo_2.x_b`, and repairs the resulting objects.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1", "Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename", "repair_demo_2.x_b");
model.component("comp1").geom("geom1").runAll();
model.component("comp1").geom("geom1").feature().
    create("rep1", "Repair");
model.component("comp1").geom("geom1").feature("rep1").
    selection("input"). set("imp1");
model.component("comp1").geom("geom1").feature("rep1").
    set("repairtol",1e-3);
model.component("comp1").geom("geom1").runAll();
```

## SEE ALSO

[Check](#), [Knit](#)

## *ReplaceFaces*

---

Delete faces from CAD objects and heal the wounds by creating new faces.

## SYNTAX

```
model.component(<ctag>).geom(<tag>).feature().
    create(<ftag>,"ReplaceFaces");
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    selection(property);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    set(property,<value>);
model.component(<ctag>).geom(<tag>).feature(<ftag>).
    getType(property);

model.component(<ctag>).geom(<tag>).defeaturing("ReplaceFaces").
    selection(property)
model.component(<ctag>).geom(<tag>).defeaturing("ReplaceFaces").
    set(property,<value>);
model.component(<ctag>).geom(<tag>).defeaturing("ReplaceFaces").
    delete(<ftag>);
```

## DESCRIPTION

`model.component(<ctag>).geom(<tag>).defeaturing("ReplaceFaces").delete(<ftag>)` creates a `ReplaceFaces` feature tagged `<ftag>` with the specified properties. If the feature can be built, it is inserted in the geometry sequence after the current feature; otherwise, the feature is discarded.

It is also possible to create a `ReplaceFaces` feature using the standard `create` method.

TABLE 4-40: AVAILABLE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
input	Selection		Faces to replace.
heal	cap   extend	extend	Healing method.
throughhole	on   off	off	Heal as if the removed faces are a through hole.
selresult	on   off	off	Create selections of all resulting objects.
selresultshow	all   obj   dom   bnd   edg   pnt   off	dom	Show selections of resulting objects in physics, materials, and so on, or in part instances. obj is not available in a component's geometry. dom, bnd, and edg are not available in all features.
contributeto	String	none	Tag of cumulative selection to contribute to.

The faces in the property input are deleted from their objects. The resulting object is healed so that a solid object is obtained. If heal is `cap`, a new face is formed based on the surrounding edges of each wound. If heal is `extend`, the surrounding faces of each wound are grown or shrunk to heal the wound.

When you replacing faces that form through holes, set the `throughhole` property to `on` to indicate that the two wounds from where the hole entered and exited the geometry are to be healed independently instead of as a single wound. If `throughhole` is `off`, the wound would be healed with a single new face that would just recreate the hole.

### EXAMPLE

The following example imports the file `defeaturing_demo_2.mphbin`, and removes a hole from the geometry model.

```
Model model = ModelUtil.create("Model1");
model.component.create("comp1");
model.component("comp1").geom().create("geom1",3);
model.component("comp1").geom("geom1").feature().
    create("imp1","Import");
model.component("comp1").geom("geom1").feature("imp1").
    set("filename","defeaturing_demo_2.mphbin");
model.component("comp1").geom("geom1").run("imp1");
model.component("comp1").geom("geom1").feature().
    create("rfa1","ReplaceFaces");
model.component("comp1").geom("geom1").feature("rfa1").
    selection("input").set("imp1",6,7,8,9,11,12,13);
model.component("comp1").geom("geom1").run();
```

### COMPATIBILITY

The following property is no longer supported:

TABLE 4-41: OBSOLETE PROPERTIES.

PROPERTY	VALUE	DEFAULT	DESCRIPTION
Out	stx   ftx   ctx   ptx	none	Output variables

### SEE ALSO

[DeleteFillets](#), [DeleteSliverFaces](#), [DeleteSmallFaces](#), [DetachFaces](#)



# I n d e x

- A** Application Libraries window 12
- C** cap faces 68
  - COMSOL Client 30
  - COMSOL Server 30
- D** defeaturing tools 74
  - documentation 10
- E** emailing COMSOL 12
  - export (of geometries) 45
- F** filling holes 68
- G** geometry
  - exporting to file 45
- I** internet resources 10
- K** knowledge base, COMSOL 13
- M** MPH-files 12
- S** system requirements 22
- T** technical support, COMSOL 12
- W** web implementation of an application 30
  - websites, COMSOL 13

