



Model created in COMSOL Multiphysics 6.4

Block Pressing on Arch

Only contact without friction is considered and the augmented Lagrangian contact method is used.

A boundary load is applied the top surface of the block. Its magnitude is controlled by the monotonically increasing deflection of the arch, which makes it possible to track the entire load path, even though the force does not increase monotonically. The ends of the arch are fixed and the displacement of the block is constrained in the x direction.

Results and Discussion

Figure 2 depicts the deformed shape and the von Mises stress distribution at the last step of the simulation. The snap-through of the arch is clearly observed. The arch is represented by a shell dataset that shows the 3D geometry of the shell.

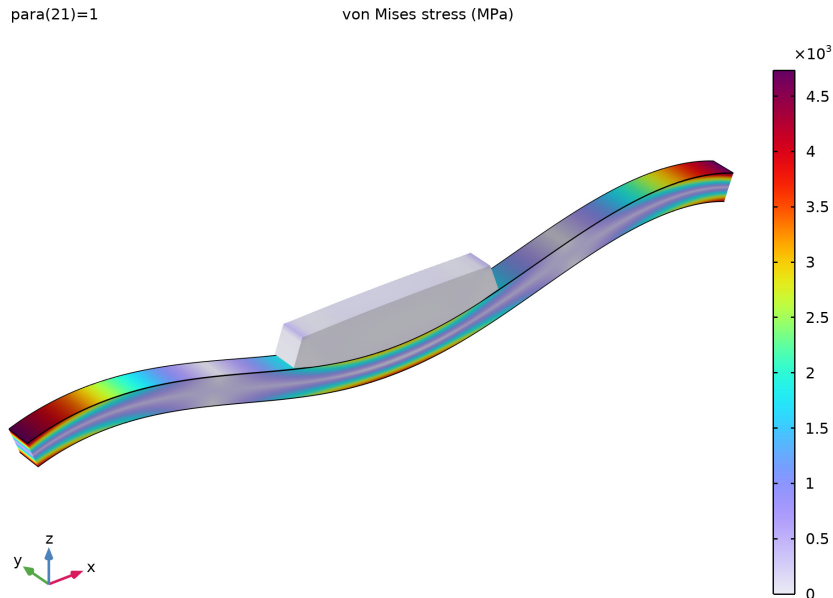


Figure 2: Deformation and von Mises stress at the final step.

The load versus deflection curve is shown in Figure 3. The load is in the figure represented by a dimensionless load factor. Two limit points can be observed, the first occurs for a load factor equal to 17.88 and a deflection of 36 mm. At this point the arch becomes unstable and a snap-through occurs. When the deflection of the arch reaches 78 mm, the load factor has decreased to 13.84. At this point the second limit point is reached, and the arch

finds a new stable configuration. After this point the load factor increases with increasing deflection.

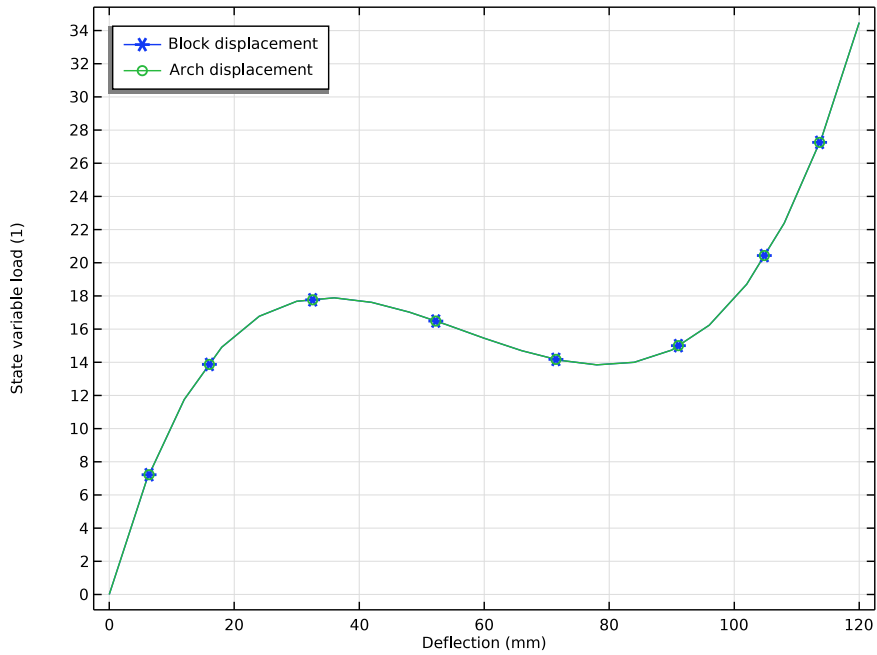


Figure 3: Load versus deflection curve.

The progressive deformation of the block and the arch, including the snap-through of the arch, is shown in Figure 4 for six values of the continuation parameter. Figure 5 shows the contact pressure exerted by the block on the arch during the snap-through.

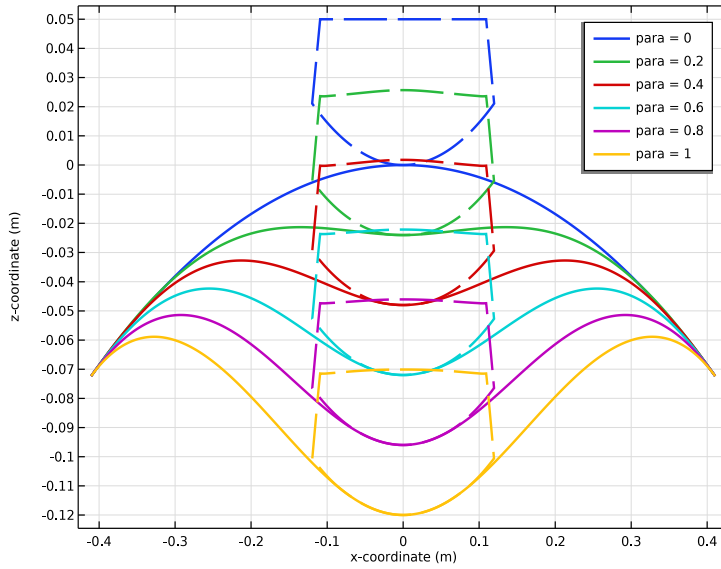


Figure 4: Deformation of the model for six different parameter values.

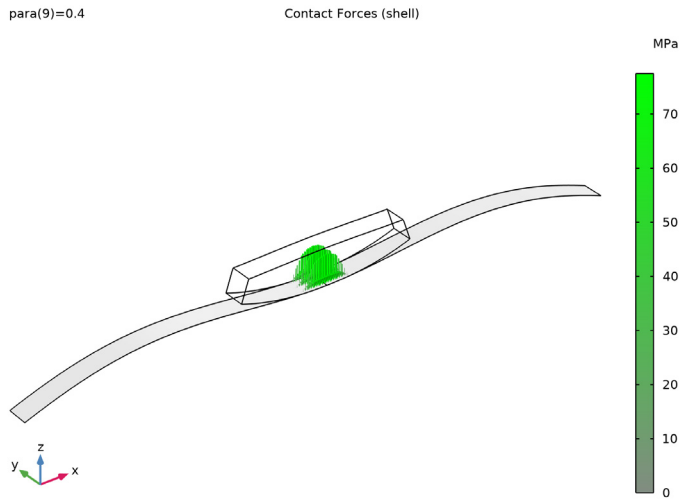


Figure 5: Contact pressure acting on the arch.

Notes About the COMSOL Implementation

When a **Shell** interface is used in a contact simulation, it is recommended that the destination boundary always belongs to the shell. Moreover, the contact definition should be made in the **Shell** interface. In this example, the block modeled with a **Solid Mechanics** interface is thus, in the **Contact** node, considered as external to the current physics.

Modeling the postcritical behavior of a system is not possible by incrementally increasing the boundary load. The unstable behavior is even more pronounced when contact is present. To be able to find all limit points and to track the full load versus deflection curve, a displacement controlled load scheme is used by adding a **Global Equation**. Here, the magnitude of the boundary load is controlled through the monotonically increasing deflection of the arch. Alternatively, the vertical displacement could be prescribed on the top surface of the block, but this is a less general technique that fails for some cases. Also, a prescribed displacement would not give an evenly distributed load.

Reference


1. P. Wriggers, *Computational Contact Mechanics*, Springer-Verlag, 2006

Application Library path: Structural_Mechanics_Module/
Verification_Examples/block_on_arch


Modeling Instructions



From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.


MODEL WIZARD

- 1 In the **Model Wizard** window, click  **3D**.
- 2 In the **Select Physics** tree, select **Structural Mechanics > Shell (shell)**.
- 3 Click **Add**.
- 4 In the **Select Physics** tree, select **Structural Mechanics > Solid Mechanics (solid)**.
- 5 Click **Add**.

- 6 In the **Displacement field (m)** text field, type u.
- 7 Click  **Study**.
- 8 In the **Select Study** tree, select **General Studies > Stationary**.
- 9 Click  **Done**.



GLOBAL DEFINITIONS

Parameters 1




- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters 1**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 Click  **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file `block_on_arch_parameters.txt`.

GEOMETRY 1

Work Plane 1 (wp1)

- 1 In the **Geometry** toolbar, click  **Work Plane**.
- 2 In the **Settings** window for **Work Plane**, locate the **Plane Definition** section.
- 3 From the **Plane** list, choose **xz-plane**.
- 4 Click  **Go to Plane Geometry**.


Work Plane 1 (wp1) > Circle 1 (c1)

- 1 In the **Work Plane** toolbar, click  **Circle**.
- 2 In the **Settings** window for **Circle**, locate the **Object Type** section.
- 3 From the **Type** list, choose **Curve**.
- 4 Locate the **Size and Shape** section. In the **Radius** text field, type `R_arch`.
- 5 In the **Sector angle** text field, type `seg_arch`.
- 6 Locate the **Position** section. In the **yw** text field, type `-R_arch`.
- 7 Locate the **Rotation Angle** section. In the **Rotation** text field, type `90-seg_arch/2`.
- 8 Click  **Build Selected**.
- 9 Click the  **Zoom Extents** button in the **Graphics** toolbar.




Work Plane 1 (wp1) > Delete Entities 1 (dell)

- 1 In the **Model Builder** window, right-click **Plane Geometry** and choose **Delete Entities**.
- 2 On the object **c1**, select Boundaries 2 and 3 only.



Work Plane 1 (wp1) > Partition Edges 1 (pare1)

- 1 In the **Work Plane** toolbar, click  **Booleans and Partitions** and choose **Partition Edges**.
- 2 On the object **dell**, select Boundary 1 only.

Work Plane 1 (wp1) > Circle 2 (c2)

- 1 In the **Work Plane** toolbar, click  **Circle**.
- 2 In the **Settings** window for **Circle**, locate the **Size and Shape** section.
- 3 In the **Radius** text field, type `R_block`.
- 4 In the **Sector angle** text field, type `seg_block`.
- 5 Locate the **Position** section. In the **yw** text field, type `R_block`.
- 6 Locate the **Rotation Angle** section. In the **Rotation** text field, type `-90-seg_block/2`.
- 7 Click  **Build Selected**.
- 8 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Work Plane 1 (wp1) > Rectangle 1 (r1)

- 1 In the **Work Plane** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type `R_block`.
- 4 In the **Height** text field, type `height_block`.
- 5 Locate the **Position** section. In the **xw** text field, type `-R_block/2`.
- 6 Click  **Build Selected**.

Work Plane 1 (wp1) > Intersection 1 (int1)

- 1 In the **Work Plane** toolbar, click  **Booleans and Partitions** and choose **Intersection**.
- 2 Select the objects **c2** and **r1** only.

Work Plane 1 (wp1)

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Geometry 1** click **Work Plane 1 (wp1)**.
- 2 In the **Settings** window for **Work Plane**, locate the **Unite Objects** section.
- 3 Clear the **Unite objects** checkbox.


Extrude 1 (ext1)

- 1 In the **Geometry** toolbar, click  **Extrude**.
- 2 In the **Settings** window for **Extrude**, locate the **Distances** section.

3 In the table, enter the following settings:

Distances (m)
d

4 Click  **Build Selected**.

5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Arch

1 In the **Geometry** toolbar, click  **Selections** and choose **Explicit Selection**.

2 In the **Settings** window for **Explicit Selection**, type Arch in the **Label** text field.

3 Locate the **Entities to Select** section. From the **Geometric entity level** list, choose **Object**.

4 Select the object **extI(1)** only.

5 Locate the **Color** section. From the **Color** list, choose **Color 4**.

6 Click  **Build Selected**.

Block

1 Right-click **Arch** and choose **Duplicate**.

2 In the **Settings** window for **Explicit Selection**, type Block in the **Label** text field.

3 Locate the **Entities to Select** section. In the list box, select **extI(1)**.

4 Select the object **extI(2)** only.

5 Locate the **Color** section. From the **Color** list, choose **Color 12**.


Form Union (fin)

1 In the **Model Builder** window, under **Component 1 (comp1) > Geometry 1** click **Form Union (fin)**.

2 In the **Settings** window for **Form Union/Assembly**, locate the **Form Union/Assembly** section.

3 From the **Action** list, choose **Form an assembly**.

4 Click  **Build Selected**.

5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

MATERIALS

Material 1 (mat1)

1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Materials** and choose **Blank Material**.

2 In the **Settings** window for **Material**, locate the **Material Contents** section.

3 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	E	10 [GPa]	Pa	Young's modulus and Poisson's ratio
Poisson's ratio	nu	0.2	l	Young's modulus and Poisson's ratio
Density	rho	1	kg/m ³	Basic


Material 2 (mat2)

- 1 Right-click **Materials** and choose **Blank Material**.
- 2 In the **Settings** window for **Material**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Boundary**.
- 4 From the **Selection** list, choose **Arch**.
- 5 Locate the **Material Contents** section. In the table, enter the following settings:


Property	Variable	Value	Unit	Property group
Young's modulus	E	70 [GPa]	Pa	Young's modulus and Poisson's ratio
Poisson's ratio	nu	0.3	l	Young's modulus and Poisson's ratio
Density	rho	1	kg/m ³	Basic

DEFINITIONS

Average 1 (aveop1)

- 1 In the **Definitions** toolbar, click  **Nonlocal Couplings** and choose **Average**.
- 2 In the **Settings** window for **Average**, locate the **Source Selection** section.
- 3 From the **Geometric entity level** list, choose **Point**.
- 4 Select Point 11 only.

Average 2 (aveop2)



- 1 Right-click **Average 1 (aveop1)** and choose **Duplicate**.
- 2 In the **Settings** window for **Average**, locate the **Source Selection** section.
- 3 Click  **Clear Selection**.
- 4 Select Point 3 only.

Variables 1

- 1 In the **Model Builder** window, right-click **Definitions** and choose **Variables**.
- 2 In the **Settings** window for **Variables**, locate the **Variables** section.
- 3 In the table, enter the following settings:

Name	Expression	Unit	Description
disp_block	aveop1 (-w)	m	Block displacement
disp_arch	aveop2 (-w)	m	Arch displacement

Contact Pair 1 (p1)

- 1 In the **Definitions** toolbar, click  **Pairs** and choose **Contact Pair**.
- 2 Select Boundaries 4 and 8 only.
- 3 Click the  **Go to Default View** button in the **Graphics** toolbar.
- 4 In the **Settings** window for **Pair**, locate the **Destination Boundaries** section.
- 5 From the **Selection** list, choose **Arch**.

The destination boundary should be on a boundary modeled with the **Shell** interface.


SHELL (SHELL)

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Shell (shell)**.
- 2 In the **Settings** window for **Shell**, locate the **Boundary Selection** section.
- 3 From the **Selection** list, choose **Arch**.

Thickness and Offset 1


- 1 In the **Model Builder** window, under **Component 1 (comp1)** > **Shell (shell)** click **Thickness and Offset 1**.
- 2 In the **Settings** window for **Thickness and Offset**, locate the **Thickness and Offset** section.
- 3 In the d_0 text field, type d.
- 4 From the **Position** list, choose **Top surface on boundary**.

Prescribed Displacement/Rotation 1

- 1 In the **Physics** toolbar, click  **Edges** and choose **Prescribed Displacement/Rotation**.
- 2 Select Edges 1 and 7 only.
- 3 In the **Settings** window for **Prescribed Displacement/Rotation**, locate the **Prescribed Displacement** section.
- 4 From the **Displacement in x direction** list, choose **Prescribed**.
- 5 From the **Displacement in z direction** list, choose **Prescribed**.

6 Locate the **Prescribed Rotation** section. From the **By** list, choose **Rotation**.

Symmetry I

- 1 In the **Physics** toolbar, click  **Edges** and choose **Symmetry**.
- 2 Select Edges 2, 3, 5, and 6 only.


Contact I

- 1 In the **Model Builder** window, click **Contact 1**.
- 2 In the **Settings** window for **Contact**, locate the **Contact Method** section.
- 3 From the list, choose **Augmented Lagrangian**.

SOLID MECHANICS (SOLID)

In the **Model Builder** window, under **Component 1 (comp1)** click **Solid Mechanics (solid)**.


Prescribed Displacement I

- 1 In the **Physics** toolbar, click  **Edges** and choose **Prescribed Displacement**.
- 2 Select Edges 13 and 19 only.
- 3 In the **Settings** window for **Prescribed Displacement**, locate the **Prescribed Displacement** section.
- 4 From the **Displacement in x direction** list, choose **Prescribed**.

Symmetry I


- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Symmetry**.
- 2 Select Boundaries 5 and 6 only.

Boundary Load I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Boundary Load**.
- 2 Select Boundary 7 only.
- 3 In the **Settings** window for **Boundary Load**, locate the **Force** section.
- 4 Specify the \mathbf{f}_A vector as

0	x
0	y
load*F_ref	z

The dependent variable `load` will be created in the next step using a global equation.

- 5 Click the  **Show More Options** button in the **Model Builder** toolbar.

6 In the **Show More Options** dialog, in the tree, select the checkbox for the node **Physics > Equation Contributions**.

7 Click **OK**.

Global Equations 1 (ODE1)

1 In the **Physics** toolbar, click  **Global** and choose **Global Equations**.

2 In the **Settings** window for **Global Equations**, locate the **Global Equations** section.

3 In the table, enter the following settings:

Name	$f(u, ut, utt, t)$ (1)	Initial value (u_0) (1)	Initial value (ut_0) (1/s)	Description
load	disp_block-para*max_disp	0	0	

4 Locate the **Units** section. Click  **Select Source Term Quantity**.

5 In the **Physical Quantity** dialog, type displacement in the text field.

6 In the tree, select **General > Displacement (m)**.

7 Click **OK**.

MESH 1

Mapped 1

1 In the **Mesh** toolbar, click  **More Generators** and choose **Mapped**.

2 In the **Settings** window for **Mapped**, locate the **Boundary Selection** section.

3 From the **Selection** list, choose **Arch**.

Distribution 1

1 Right-click **Mapped 1** and choose **Distribution**.

2 Select Edges 2 and 5 only.

3 In the **Settings** window for **Distribution**, locate the **Distribution** section.

4 In the **Number of elements** text field, type n_elem_arch.

Mapped 2

1 In the **Mesh** toolbar, click  **More Generators** and choose **Mapped**.

2 Select Boundary 5 only.



Distribution 1

- 1 Right-click **Mapped 2** and choose **Distribution**.
- 2 Select Edges 10 and 17 only.
- 3 In the **Settings** window for **Distribution**, locate the **Distribution** section.
- 4 In the **Number of elements** text field, type `n_elem_block`.

Distribution 2


- 1 In the **Model Builder** window, right-click **Mapped 2** and choose **Distribution**.
- 2 Select Edges 9 and 20 only.

Swept 1

- 1 In the **Mesh** toolbar, click  **Swept**.
- 2 In the **Model Builder** window, right-click **Mesh 1** and choose **Build All**.
- 3 Click the  **Zoom Extents** button in the **Graphics** toolbar.

STUDY 1


Step 1: Stationary



- 1 In the **Model Builder** window, under **Study 1** click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, click to expand the **Study Extensions** section.
- 3 Select the **Auxiliary sweep** checkbox.
- 4 Click  **Add**.
- 5 In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
para (Load parameter)	range (0,0.05,1)	

- 6 In the table, click to select the cell at row number 1 and column number 3.
- 7 Locate the **Study Settings** section. From the **Tolerance** list, choose **User controlled**.
- 8 In the **Relative tolerance** text field, type `0.0005`.



Solution 1 (sol1)

- 1 In the **Study** toolbar, click  **Show Default Solver**.
- 2 In the **Model Builder** window, expand the **Solution 1 (sol1)** node.
- 3 In the **Model Builder** window, expand the **Study 1 > Solver Configurations > Solution 1 (sol1) > Dependent Variables 1** node, then click **Global Equations 1 (comp1.ODE1)**.

- 4 In the **Settings** window for **State**, locate the **Scaling** section.
- 5 From the **Method** list, choose **Manual**.
- 6 In the **Model Builder** window, expand the **Study 1 > Solver Configurations > Solution 1 (sol1) > Stationary Solver 1 > Segregated 1** node, then click **Shell**.
- 7 In the **Settings** window for **Segregated Step**, locate the **General** section.
- 8 Under **Variables**, click  **Add**.
- 9 In the **Add** dialog, select **Global Equations 1 (comp1.ODE1)** in the **Variables** list.
- 10 Click **OK**.
- 11 In the **Model Builder** window, under **Study 1 > Solver Configurations > Solution 1 (sol1) > Stationary Solver 1 > Segregated 1** right-click **Solid Mechanics** and choose **Delete**.
Structural mechanics interfaces should be solved in a single segregated step.
- 12 In the **Study** toolbar, click  **Compute**.

RESULTS

Preferred Units 1

- 1 In the **Results** toolbar, click  **Configurations** and choose **Preferred Units**.
- 2 In the **Settings** window for **Preferred Units**, locate the **Units** section.
- 3 Click  **Add Physical Quantity**.
- 4 In the **Physical Quantity** dialog, select **Solid Mechanics > Stress tensor (N/m²)** in the tree.
- 5 Click **OK**.
- 6 In the **Settings** window for **Preferred Units**, locate the **Units** section.
- 7 In the table, enter the following settings:

Quantity	Unit	Preferred unit
Stress tensor	N/m ²	MPa




- 8 Select the **Apply conversions to expressions with the same dimensions** checkbox.
- 9 Click  **Apply**.

Volume 1



- 1 In the **Model Builder** window, right-click **Stress (shell)** and choose **Volume**.
- 2 In the **Settings** window for **Volume**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Solution 1 (sol1)**.
- 4 From the **Solution parameters** list, choose **From parent**.

- 5 Locate the **Expression** section. In the **Expression** text field, type `solid.misesGp`.
- 6 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 7 Click to expand the **Inherit Style** section. From the **Plot** list, choose **Surface I**.

Deformation I

- 1 Right-click **Volume I** and choose **Deformation**.
- 2 In the **Stress (shell)** toolbar, click  **Plot**.
- 3 Click the  **Show Grid** button in the **Graphics** toolbar.
- 4 Click the  **Zoom Extents** button in the **Graphics** toolbar.

RESULT TEMPLATES

- 1 In the **Results** toolbar, click  **Result Templates** to open the **Result Templates** window.
- 2 Go to the **Result Templates** window.
- 3 In the tree, select **Study I/Solution I (sol1) > Shell > Contact Forces (shell)**.
- 4 Click the **Add Result Template** button in the window toolbar.
- 5 In the **Results** toolbar, click  **Result Templates** to close the **Result Templates** window.

RESULTS


Contact Forces (shell)

- 1 In the **Settings** window for **3D Plot Group**, locate the **Data** section.
- 2 From the **Parameter value (para)** list, choose **0.4**.



Contact I, Pressure

- 1 In the **Model Builder** window, expand the **Contact Forces (shell)** node, then click **Contact I, Pressure**.
- 2 In the **Settings** window for **Arrow Surface**, locate the **Coloring and Style** section.
- 3 Select the **Scale factor** checkbox. In the associated text field, type `5e-4`.


Selection I

- 1 In the **Model Builder** window, expand the **Results > Contact Forces (shell) > Gray Surfaces** node, then click **Selection I**.
- 2 Select Boundary 1 only.
- 3 In the **Settings** window for **Selection**, locate the **Selection** section.
- 4 From the **Selection** list, choose **Arch**.
- 5 In the **Contact Forces (shell)** toolbar, click  **Plot**.

Animation 1

- 1 In the **Contact Forces (shell)** toolbar, click  **Animation** and choose **Player**.
- 2 In the **Settings** window for **Animation**, locate the **Frames** section.
- 3 From the **Frame selection** list, choose **All**.
- 4 Click the  **Play** button in the **Graphics** toolbar.

Load vs. Deflection

- 1 In the **Results** toolbar, click  **ID Plot Group**.
- 2 In the **Settings** window for **ID Plot Group**, type Load vs. Deflection in the **Label** text field.


Global 1

- 1 Right-click **Load vs. Deflection** and choose **Global**.
- 2 In the **Settings** window for **Global**, locate the **y-Axis Data** section.
- 3 In the table, enter the following settings:


Expression	Unit	Description
disp_block	mm	Block displacement
disp_arch	mm	Arch displacement

- 4 Locate the **x-Axis Data** section. From the **Parameter** list, choose **Expression**.
- 5 In the **Expression** text field, type load.
- 6 Click to expand the **Coloring and Style** section. Find the **Line markers** subsection. From the **Marker** list, choose **Cycle**.
- 7 From the **Positioning** list, choose **Interpolated**.

Load vs. Deflection

- 1 In the **Model Builder** window, click **Load vs. Deflection**.
- 2 In the **Settings** window for **ID Plot Group**, locate the **Plot Settings** section.
- 3 Select the **Flip the x- and y-axes** checkbox.
- 4 Locate the **Legend** section. From the **Position** list, choose **Upper left**.
- 5 Locate the **Plot Settings** section.
- 6 Select the **x-axis label** checkbox. In the associated text field, type Deflection (mm).
- 7 In the **Load vs. Deflection** toolbar, click  **Plot**.

Deformation

- 1 In the **Results** toolbar, click  **ID Plot Group**.

- 2 In the **Settings** window for **ID Plot Group**, type Deformation in the **Label** text field.
- 3 Locate the **Data** section. From the **Parameter selection (para)** list, choose **Manual**.
- 4 In the **Parameter indices (1-21)** text field, type range (1,4,21).
- 5 Click to expand the **Title** section. From the **Title type** list, choose **None**.


Line Graph 1

- 1 Right-click **Deformation** and choose **Line Graph**.
- 2 Select Edges 2 and 5 only.
- 3 In the **Settings** window for **Line Graph**, locate the **y-Axis Data** section.
- 4 In the **Expression** text field, type z.
- 5 Locate the **x-Axis Data** section. From the **Parameter** list, choose **Expression**.
- 6 In the **Expression** text field, type x.
- 7 Click to expand the **Coloring and Style** section. From the **Width** list, choose **2**.

Line Graph 2

- 1 Right-click **Line Graph 1** and choose **Duplicate**.
- 2 In the **Settings** window for **Line Graph**, locate the **Selection** section.
- 3 Click to select the **Activate Selection** toggle button.
- 4 Select Edges 9, 10, 14, 17, and 20 only.
- 5 Locate the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dashed**.
- 6 From the **Color** list, choose **Cycle (reset)**.

Line Graph 1

- 1 In the **Model Builder** window, click **Line Graph 1**.
- 2 In the **Settings** window for **Line Graph**, click to expand the **Legends** section.
- 3 Select the **Show legends** checkbox.
- 4 Find the **Prefix and suffix** subsection. In the **Prefix** text field, type para = .
- 5 In the **Deformation** toolbar, click  **Plot**.