

Condensation Risk in a Wood-Frame Wall

Introduction

This tutorial shows how to model heat and moisture transport in a wood-frame wall to evaluate the risk of condensation inside the wall. Different design and modeling approaches are compared under stationary outdoor conditions. In addition, the effect of the diurnal variation of outdoor humidity on the humidity distribution in the wall is computed.

Model Definition

The model is the 2D representation of a portion of a wood-frame wall placed between different outdoor and indoor conditions. The risk of condensation in the wall is evaluated through the coupled computation of heat and moisture transport. Values of relative humidity close to unity indicate a risk of condensation.

The geometry is shown on the figure below:

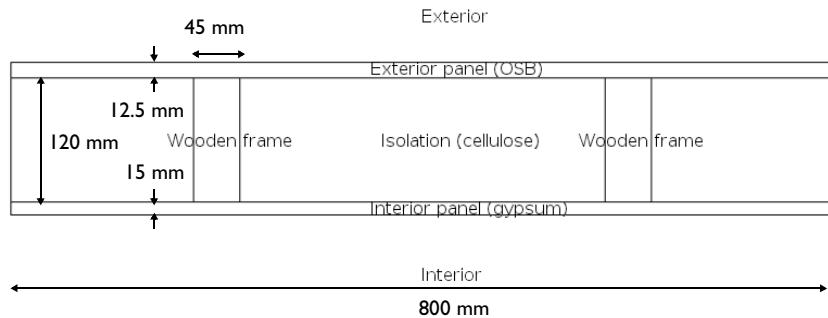


Figure 1: Geometry of the model

The wall is made of the following components:

- Two wood studs made in pine
- Three isolation boards made in cellulose
- A bracing made of a wooden panel
- An interior siding made of a gypsum

In addition, a vapor barrier made of plastic coated paper may be placed between the gypsum interior siding and the isolation boards.

Convective heat and moisture flux conditions are applied on the top and bottom boundaries to model the outdoor and indoor air flows surrounding the wall. The outdoor and indoor heat transfer coefficients are set as $h_{\text{ext}}=25 \text{ W}/(\text{m}\cdot\text{K})$ and $h_{\text{int}}=8 \text{ W}/(\text{m}\cdot\text{K})$. The outdoor and indoor moisture transfer coefficients are set to $\beta_{\text{ext}}=25\cdot10^{-8} \text{ s}/\text{m}$ and $\beta_{\text{int}}=8\cdot10^{-8} \text{ s}/\text{m}$, according to the heat and mass transfer boundary layers analogy.

The side boundaries are supposed to be totally isolated regarding heat and moisture.

DYNAMIC MODELING OF HEAT AND MOISTURE TRANSPORT

In this approach, both the transport of liquid moisture by capillary forces and the transport of vapor by diffusion are computed, and the latent heat effect due to vapor diffusion is modeled. In addition, heat and moisture storage is considered, and moisture-dependent thermal properties are used. The corresponding equations, defined in the Norm EN 15026, are solved by default by the Moisture Transport in Building Materials and Heat Transfer in Building Materials interfaces:

$$(\rho C_p)_{\text{eff}} \frac{\partial T}{\partial t} - \nabla \cdot (k_{\text{eff}} \nabla T + L_v \delta_p \nabla (\phi p_{\text{sat}})) = Q$$

$$\xi \frac{\partial \phi}{\partial t} - \nabla \cdot (\xi D_w \nabla \phi + \delta_p \nabla (\phi p_{\text{sat}})) = G$$

where:

- $(\rho C_p)_{\text{eff}}$ (SI unit: $\text{J}/(\text{m}^3\cdot\text{K})$) is the effective volumetric heat capacity at constant pressure
- T (SI unit: K) is the temperature
- k_{eff} (SI unit: $\text{W}/(\text{m}\cdot\text{K})$) is the effective thermal conductivity
- L_v (SI unit: J/kg) is the latent heat of evaporation
- δ_p (SI unit: s) is the vapor permeability
- ϕ (dimensionless) is the relative humidity
- p_{sat} (SI unit: Pa) is the vapor saturation pressure
- Q (SI unit: $\text{W}/\text{m}^3\cdot\text{s}$) is the heat source
- ξ (SI unit: kg/m^3) is the moisture storage capacity
- D_w (SI unit: m^2/s) is the moisture diffusivity
- G (SI unit: $\text{kg}/\text{m}^3\cdot\text{s}$) is the moisture source

See Ref. 1 for details about the norm EN 15026.

STATIC MODELING OF HEAT AND MOISTURE TRANSPORT

By ignoring heat and moisture storage, latent heat effect, and capillary transport of liquid moisture, the following equations are obtained for heat and moisture transport:

$$-\nabla \cdot (k_{\text{eff}} \nabla T) = Q$$

$$-\nabla \cdot (\delta_p \nabla (\phi p_{\text{sat}})) = G$$

These equations are known as the Glaser Method. They can be solved in the Moisture Transport in Building Materials interface by setting the moisture diffusivity to 0, and in the Heat Transfer in Building Materials interface by setting the vapor permeability to 0.

The advantage of this second approach is that you need to provide less hygroscopic material properties. In particular, the moisture diffusivity used for the expression of the liquid transport flux is not required. However, for high values of relative humidity, the simplifications mentioned above may result in an over-estimation of the condensation.

MODELING OF THE VAPOR BARRIER

Upside and downside moisture fluxes defined by $\beta(\phi_d - \phi_u)$ and $\beta(\phi_u - \phi_d)$ are applied at the interface between the interior siding and the isolation to model the vapor barrier. The moisture transfer coefficient β is defined as

$$\beta = \frac{\delta p_{\text{sat}}}{\mu d_s}$$

where δ is the vapor permeability of still air (SI unit: s), p_{sat} is the saturation pressure of water vapor (SI unit: Pa), μ is the vapor resistance factor (dimensionless), and d_s is the vapor barrier thickness (SI unit: m).

DIURNAL VARIATIONS OF OUTDOOR CONDITIONS

The effect of time-dependent outdoor conditions on condensation risk is studied by using typical weather data from ASHRAE 2013 database. Average temperature and relative humidity ambient conditions in Dublin from the 1st to the 3rd of June are used for the definition of the convective flux conditions on the exterior side of the wall. The simulation is run over two days with the temperature and relative humidity conditions shown on the graph of Figure 2.

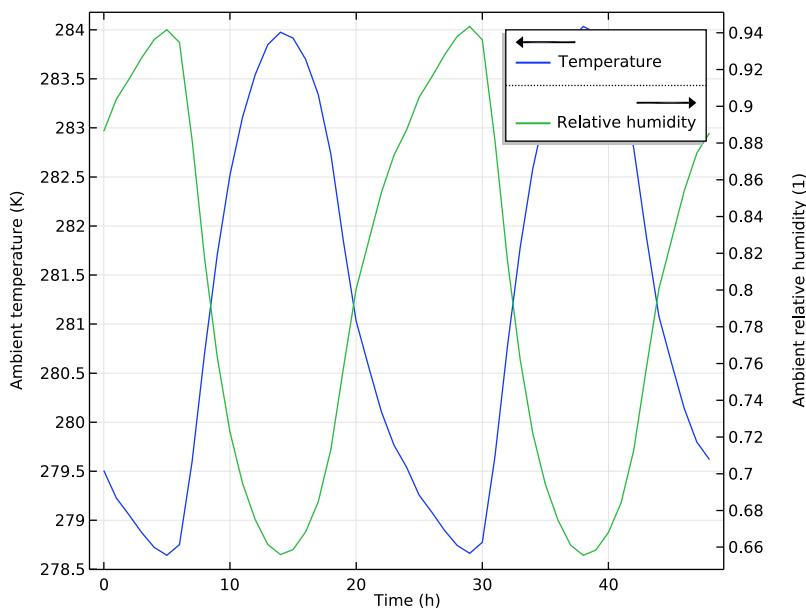


Figure 2: Ambient data for temperature and relative humidity used on the exterior side of the wall.

Results and Discussion

TEMPERATURE AND MOISTURE DISTRIBUTIONS WITHOUT VAPOR BARRIER

The temperature and moisture distributions due to the different outdoor and indoor conditions are shown on [Figure 3](#) and [Figure 4](#). The highest values of relative humidity are obtained close to the bracing.

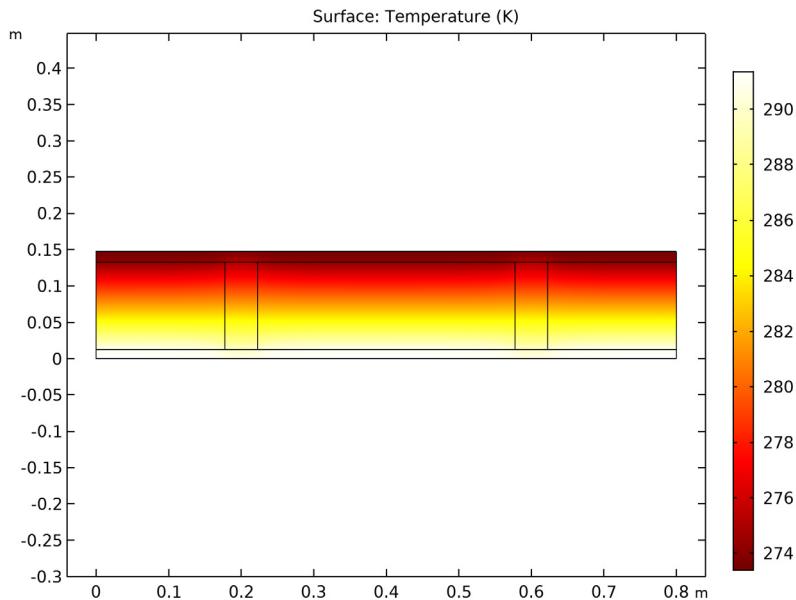


Figure 3: Temperature distribution, stationary study without vapor barrier

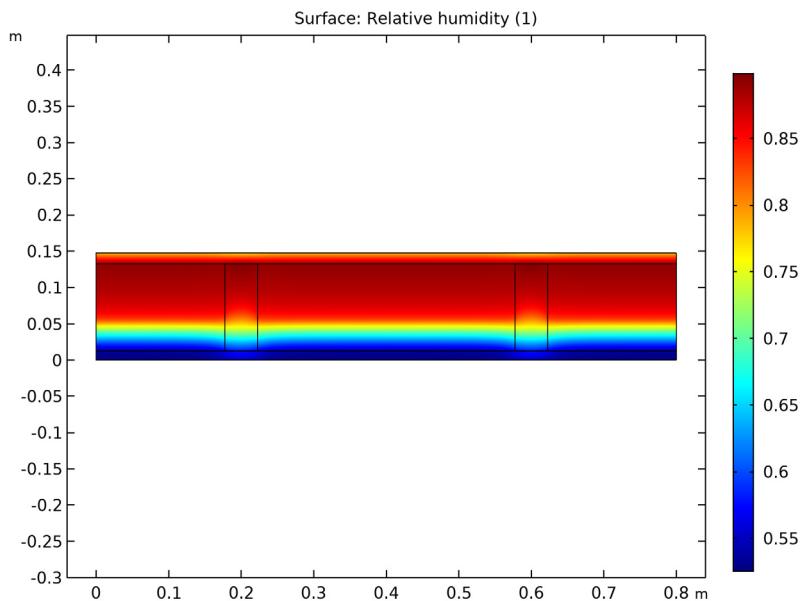


Figure 4: Relative humidity distribution, stationary study without vapor barrier

EFFECT OF VAPOR BARRIER ON HEAT AND MOISTURE DISTRIBUTION

The graph of [Figure 5](#) shows that the addition of a vapor barrier between the interior siding and the isolation reduces the risk of condensation at the interface between the wooden frame/isolation and the bracing.

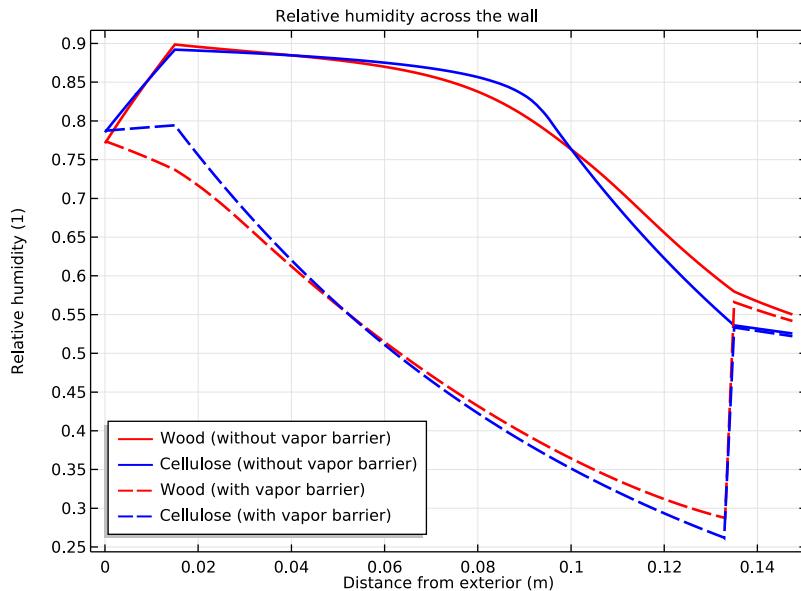


Figure 5: Effect of vapor barrier on relative humidity distribution across the wall, in the wooden frame and in the isolation.

The effect on temperature distribution is shown on Figure 6.

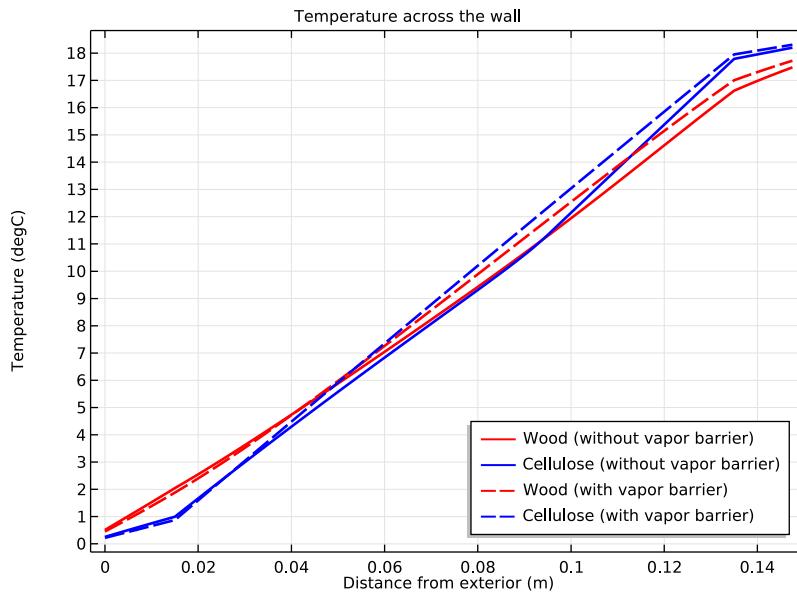


Figure 6: Effect of vapor barrier on temperature distribution across the wall, in the wooden frame and in the isolation.

COMPARISON OF THE MODELING APPROACHES

The Glaser method over-estimates condensation by not taking into account the liquid transport which becomes significant when the relative humidity is high, close to the

bracing. The effect on temperature and moisture distribution is shown on Figure 7 and Figure 8.

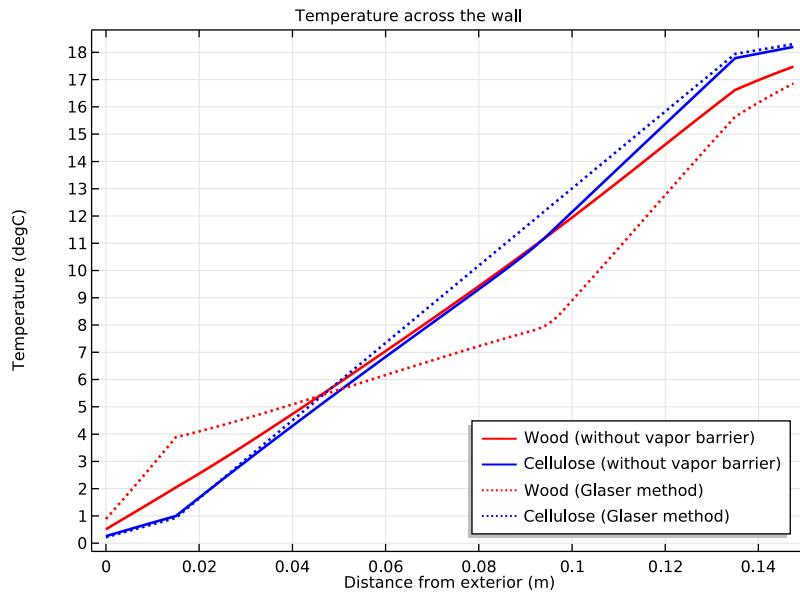


Figure 7: Comparison of the modeling approaches for the temperature distribution across the wall, in the wooden frame and in the isolation.

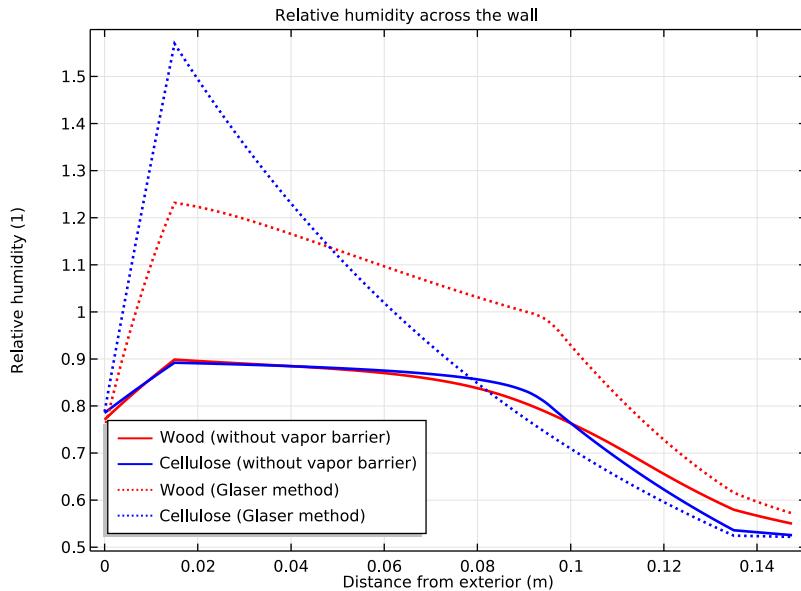


Figure 8: Comparison of the modeling approaches for the relative humidity distribution across the wall, in the wooden frame and in the isolation.

Reference

1. EN 15026, *Hygrothermal performance of building components and building elements - Assessment of moisture transfer by numerical simulation*, CEN, 2007.

Application Library path: Heat_Transfer_Module/
Buildings_and_Constructions/wood_frame_wall

Modeling Instructions

From the **File** menu, choose **New**.

NEW

In the **New** window, click **Model Wizard**.

MODEL WIZARD

- 1 In the **Model Wizard** window, click **2D**.
- 2 In the **Select Physics** tree, select **Heat Transfer>Heat and Moisture Transport>Building Materials**.
- 3 Click **Add**.
- 4 Click **Study**.
- 5 In the **Select Study** tree, select **General Studies>Stationary**.
- 6 Click **Done**.

ROOT

First define the geometry of the wall, composed of wood studs and isolation boards, completed at the top and bottom by a bracing and an interior siding.

GLOBAL DEFINITIONS

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters 1**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 Click **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file `wood_frame_wall_parameters.txt`.

GEOMETRY 1

Rectangle 1 (r1)

- 1 In the **Geometry** toolbar, click **Primitives** and choose **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type `L`.
- 4 In the **Height** text field, type `t_il + t_i + t_b`.
- 5 Click **Build Selected**.
- 6 Click to expand the **Layers** section. In the table, enter the following settings:

Layer name	Thickness (m)
Layer 1	<code>t_il</code>
Layer 2	<code>t_i</code>

- 7 Click **Build All Objects**.

Rectangle 2 (r2)

- 1 In the **Geometry** toolbar, click **Primitives** and choose **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type `d_wf`.
- 4 In the **Height** text field, type `t_i`.
- 5 Locate the **Position** section. In the **x** text field, type `L/4-d_wf/2`.
- 6 In the **y** text field, type `t_il`.
- 7 Click **Build All Objects**.

Rectangle 3 (r3)

- 1 Right-click **Rectangle 2 (r2)** and choose **Duplicate**.
- 2 In the **Settings** window for **Rectangle**, locate the **Position** section.
- 3 In the **x** text field, type `3*L/4-d_wf/2`.
- 4 Click **Build All Objects**.
- 5 In the **Physics** toolbar, click **Ambient Thermal Properties**.

DEFINITIONS

Ambient Thermal Properties 1 (amth1)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Definitions** click **Ambient Thermal Properties 1 (amth1)**.
- 2 In the **Settings** window for **Ambient Thermal Properties**, locate the **Ambient Conditions** section.
- 3 In the T_{amb} text field, type `T_ext`.
- 4 In the ϕ_{amb} text field, type `phi_ext`.

Now, set the physics interfaces for the modeling of heat and moisture transport with the method described in [Dynamic modeling of Heat and Moisture Transport](#).

HEAT TRANSFER IN BUILDING MATERIALS (HT)

Building Material 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Heat Transfer in Building Materials (ht)** click **Building Material 1**.
- 2 In the **Settings** window for **Building Material**, locate the **Building Material Properties** section.
- 3 From the **Specify** list, choose **Vapor resistance factor**.

Heat Flux 1

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Heat Flux**.
- 2 Select Boundary 7 only.
- 3 In the **Settings** window for **Heat Flux**, locate the **Heat Flux** section.
- 4 Click the **Convective heat flux** button.
- 5 In the h text field, type h_{ext} .
- 6 From the T_{ext} list, choose **Ambient temperature (amth1)**.

Heat Flux 2

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Heat Flux**.
- 2 Select Boundary 2 only.
- 3 In the **Settings** window for **Heat Flux**, locate the **Heat Flux** section.
- 4 Click the **Convective heat flux** button.
- 5 In the h text field, type h_{int} .
- 6 In the T_{ext} text field, type T_{int} .

Initial Values 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)> Heat Transfer in Building Materials (ht)** click **Initial Values 1**.
- 2 In the **Settings** window for **Initial Values**, type T_{int} in the T text field.

MOISTURE TRANSPORT IN BUILDING MATERIALS (MT)

In the **Physics** toolbar, click **Heat Transfer in Building Materials (ht)** and choose **Moisture Transport in Building Materials (mt)**.

Building Material 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)> Moisture Transport in Building Materials (mt)** click **Building Material 1**.
- 2 In the **Settings** window for **Building Material**, locate the **Building Material** section.
- 3 From the **Specify** list, choose **Vapor resistance factor**.
- 4 In the **Model Builder** window, click **Moisture Transport in Building Materials (mt)**.

Moisture Flux 1

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Moisture Flux**.
- 2 Select Boundary 7 only.
- 3 In the **Settings** window for **Moisture Flux**, locate the **Moisture Flux** section.

- 4 Click the **Convective moisture flux, pressures difference** button.
- 5 In the β_p text field, type beta_ext.
- 6 From the T_{ext} list, choose **Ambient temperature (amth1)**.
- 7 From the ϕ_{ext} list, choose **Ambient relative humidity (amth1)**.

Moisture Flux 2

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Moisture Flux**.
- 2 Select Boundary 2 only.
- 3 In the **Settings** window for **Moisture Flux**, locate the **Moisture Flux** section.
- 4 Click the **Convective moisture flux, pressures difference** button.
- 5 In the β_p text field, type beta_int.
- 6 In the T_{ext} text field, type T_int.
- 7 In the ϕ_{ext} text field, type phi_int.

Initial Values 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)> Moisture Transport in Building Materials (mt)** click **Initial Values 1**.
- 2 In the **Settings** window for **Initial Values**, locate the **Initial Values** section.
- 3 In the ϕ_0 text field, type phi_int.

Thin Moisture Barrier 1

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Thin Moisture Barrier**.
- 2 Select Boundaries 4, 9, 12, 15, and 18 only.

Pick materials from the library for the wood studs (pine), the isolation (cellulose), the interior siding (gypsum), and the vapor barrier (plastic coated paper). In addition, define a new material for the bracing.

ADD MATERIAL

- 1 In the **Home** toolbar, click **Add Material** to open the **Add Material** window.
- 2 Go to the **Add Material** window.
- 3 In the tree, select **Building>Wood (pine)**.
- 4 Click **Add to Component** in the window toolbar.
- 5 In the tree, select **Building>Cellulose board**.
- 6 Click **Add to Component** in the window toolbar.
- 7 In the tree, select **Building>Gypsum board**.

- 8 Click **Add to Component** in the window toolbar.
- 9 In the tree, select **Building>Plastic coated paper**.
- 10 Click **Add to Component** in the window toolbar.
- 11 In the **Home** toolbar, click **Add Material** to close the **Add Material** window.

MATERIALS

Wood (pine) (mat1)

Select Domains 4 and 6 only.

Cellulose board (mat2)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Materials** click **Cellulose board (mat2)**.
- 2 Select Domains 2, 5, and 7 only.

Gypsum board (mat3)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Materials** click **Gypsum board (mat3)**.
- 2 Select Domain 1 only.

Plastic coated paper (mat4)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Materials** click **Plastic coated paper (mat4)**.
- 2 In the **Settings** window for **Material**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundaries 4, 9, 12, 15, and 18 only.

Material 5 (mat5)

- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Materials** and choose **Blank Material**.
- 2 In the **Settings** window for **Material**, type **Wooden panel (OSB)** in the **Label** text field.
- 3 Select Domain 3 only.

Wooden panel (OSB) (mat5)

In the **Home** toolbar, click **Functions** and choose **Global>Interpolation**.

Interpolation 1 (int1)

- 1 In the **Model Builder** window, expand the **Component 1 (comp1)>Materials> Wooden panel (OSB) (mat5)** node, then click **Basic (def)>Interpolation 1 (int1)**.

- 2 In the **Settings** window for **Interpolation**, type **k_eff** in the **Label** text field.
- 3 Locate the **Definition** section. In the **Function name** text field, type **k_eff**.
- 4 In the table, enter the following settings:

t	f(t)
0	0.11
0.97	0.14
1	0.6

- 5 Locate the **Interpolation and Extrapolation** section. From the **Interpolation** list, choose **Piecewise cubic**.
- 6 From the **Extrapolation** list, choose **Linear**.
- 7 Locate the **Units** section. In the **Arguments** text field, type **1**.
- 8 In the **Function** text field, type **W/ (m*K)**.

Wooden panel (OSB) (mat5)

In the **Home** toolbar, click **Functions** and choose **Global>Interpolation**.

Interpolation 2 (int2)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Materials> Wooden panel (OSB) (mat5)>Basic (def)** click **Interpolation 2 (int2)**.
- 2 In the **Settings** window for **Interpolation**, type **Interpolation: Dw** in the **Label** text field.
- 3 Locate the **Definition** section. In the **Function name** text field, type **Dw**.
- 4 In the table, enter the following settings:

t	f(t)
0	2.93e-12
0.97	2.93e-12
1	6.52e-10

- 5 Locate the **Interpolation and Extrapolation** section. From the **Interpolation** list, choose **Piecewise cubic**.
- 6 From the **Extrapolation** list, choose **Linear**.
- 7 Locate the **Units** section. In the **Arguments** text field, type **1**.
- 8 In the **Function** text field, type **m^2/s**.

Wooden panel (OSB) (mat5)

In the **Home** toolbar, click **Functions** and choose **Global>Analytic**.

Analytic 1 (an1)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Materials> Wooden panel (OSB) (mat5)>Basic (def)** click **Analytic 1 (an1)**.
- 2 In the **Settings** window for **Analytic**, type **Analytic: wc** in the **Label** text field.
- 3 In the **Function name** text field, type **wc**.
- 4 Locate the **Definition** section. In the **Expression** text field, type $202.68*x^2 - 24.813*x + 6.1962$.
- 5 Locate the **Units** section. In the **Arguments** text field, type **1**.
- 6 In the **Function** text field, type **kg/m^3**.

Wooden panel (OSB) (mat5)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Materials** click **Wooden panel (OSB) (mat5)**.
- 2 In the **Settings** window for **Material**, locate the **Material Contents** section.
- 3 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Thermal conductivity	$k_{iso} ; k_{ii} = k_{iso}, k_{ij} = 0$	$k_{eff}(mt.ph)$	W/(m·K)	Basic
Density	ρ	646	kg/m ³	Basic
Heat capacity at constant pressure	C_p	1500	J/(kg·K)	Basic
Diffusion coefficient	$D_{iso} ; D_{ii} = D_{iso}, D_{ij} = 0$	$D_w(mt.ph)$	m ² /s	Basic
Water content	w_c	$w_c(mt.ph)$	kg/m ³	Basic
Vapor resistance factor	μ_{vrf}	162	1	Basic

- 4 In the **Model Builder** window, collapse the **Wooden panel (OSB) (mat5)** node.

Refine the mesh to improve the discretization of the bracing and interior siding.

MESH 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Mesh 1**.

- 2 In the **Settings** window for **Mesh**, locate the **Physics-Controlled Mesh** section.
- 3 From the **Element size** list, choose **Extremely fine**.

Set the study to ignore the vapor barrier as a first step, and compute.

STUDY 1

- 1 In the **Model Builder** window, click **Study 1**.
- 2 In the **Settings** window for **Study**, type **Study 1 (Stationary, without vapor barrier)** in the **Label** text field.

STUDY 1 (STATIONARY, WITHOUT VAPOR BARRIER)

Step 1: Stationary

- 1 In the **Model Builder** window, under **Study 1 (Stationary, without vapor barrier)** click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, locate the **Physics and Variables Selection** section.
- 3 Select the **Modify model configuration for study step** check box.
- 4 In the **Physics and variables selection** tree, select **Component 1 (compl)>Moisture Transport in Building Materials (mt)>Thin Moisture Barrier 1**.
- 5 Click **Disable**.
- 6 In the **Home** toolbar, click **Compute**.

RESULTS

Temperature (ht)

You obtain the temperature and relative humidity distributions shown in [Figure 3](#) and [Figure 4](#).

Now, define another study and run the computation with the vapor barrier.

ADD STUDY

- 1 In the **Home** toolbar, click **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies>Stationary**.
- 4 Click **Add Study** in the window toolbar.
- 5 In the **Home** toolbar, click **Add Study** to close the **Add Study** window.

STUDY 2

- 1 In the **Settings** window for **Study**, type Study 2 (Stationary, with vapor barrier) in the **Label** text field.
- 2 In the **Home** toolbar, click **Compute**.

RESULTS

Temperature (ht) /

You can check the effect of the vapor barrier on the temperature and moisture distribution. First, define cut lines across the wall, through the wood and the cellulose.

Cut Line 2D /

- 1 In the **Results** toolbar, click **Cut Line 2D**.
- 2 In the **Settings** window for **Cut Line 2D**, type Cut Line Wood (solution 1) in the **Label** text field.
- 3 Locate the **Line Data** section. In row **Point 1**, set **X** to $L/4$.
- 4 In row **Point 2**, set **X** to $L/4$.
- 5 Click **Plot**.
- 6 In row **Point 1**, set **Y** to 0.15.
- 7 Click **Plot**.

Cut Line Wood (solution 1) /

- 1 Right-click **Cut Line Wood (solution 1)** and choose **Duplicate**.
- 2 In the **Settings** window for **Cut Line 2D**, type Cut Line Cellulose (solution 1) in the **Label** text field.
- 3 Locate the **Line Data** section. In row **Point 1**, set **X** to $L/2$.
- 4 In row **Point 2**, set **X** to $L/2$.
- 5 Click **Plot**.

Cut Line Wood (solution 1) /

- 1 In the **Model Builder** window, under **Results>Data Sets** right-click **Cut Line Wood (solution 1)** and choose **Duplicate**.
- 2 In the **Settings** window for **Cut Line 2D**, type Cut Line Wood (solution 2) in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **Study 2 (Stationary, with vapor barrier)/Solution 2 (sol2)**.
- 4 Click **Plot**.

Cut Line Cellulose (solution 1) |

- 1 In the **Model Builder** window, under **Results>Data Sets** right-click **Cut Line Cellulose (solution 1)** and choose **Duplicate**.
- 2 In the **Settings** window for **Cut Line 2D**, type **Cut Line Cellulose (solution 2)** in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **Study 2 (Stationary, with vapor barrier)/Solution 2 (sol2)**.
- 4 Click **Plot**.

Now, follow the instructions below to reproduce the plots of [Figure 5](#) and [Figure 6](#).

ID Plot Group 7

- 1 In the **Results** toolbar, click **ID Plot Group**.
- 2 In the **Settings** window for **ID Plot Group**, type **Temperature across the wall (comparison)** in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **None**.
- 4 Locate the **Plot Settings** section. Select the **x-axis label** check box.
- 5 In the associated text field, type **Distance from exterior (m)**.

Line Graph 1

- 1 Right-click **Temperature across the wall (comparison)** and choose **Line Graph**.
- 2 In the **Settings** window for **Line Graph**, locate the **Data** section.
- 3 From the **Data set** list, choose **Cut Line Wood (solution 1)**.
- 4 Locate the **y-Axis Data** section. From the **Unit** list, choose **degC**.
- 5 Click to expand the **Coloring and Style** section. From the **Color** list, choose **Red**.
- 6 In the **Width** text field, type **2**.
- 7 Click to expand the **Legends** section. Select the **Show legends** check box.
- 8 From the **Legends** list, choose **Manual**.
- 9 In the table, enter the following settings:

Legends

Wood (without vapor barrier)

- 10 In the **Label** text field, type **Wood (without vapor barrier)**.
- 11 In the **Temperature across the wall (comparison)** toolbar, click **Plot**.

Wood (without vapor barrier) |

- 1 Right-click **Results>Temperature across the wall (comparison)> Wood (without vapor barrier)** and choose **Duplicate**.
- 2 In the **Settings** window for **Line Graph**, type **Cellulose (without vapor barrier)** in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **Cut Line Cellulose (solution 1)**.
- 4 Locate the **Coloring and Style** section. From the **Color** list, choose **Blue**.
- 5 Locate the **Legends** section. In the table, enter the following settings:

Legends

Cellulose (without vapor barrier)

- 6 In the **Temperature across the wall (comparison)** toolbar, click **Plot**.

Wood (without vapor barrier) |

- 1 Right-click **Wood (without vapor barrier)** and choose **Duplicate**.
- 2 In the **Settings** window for **Line Graph**, type **Wood (with vapor barrier)** in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **Cut Line Wood (solution 2)**.
- 4 Locate the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dashed**.
- 5 Locate the **Legends** section. In the table, enter the following settings:

Legends

Wood (with vapor barrier)

- 6 In the **Temperature across the wall (comparison)** toolbar, click **Plot**.

Cellulose (without vapor barrier) |

- 1 In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** right-click **Cellulose (without vapor barrier)** and choose **Duplicate**.
- 2 In the **Settings** window for **Line Graph**, type **Cellulose (with vapor barrier)** in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **Cut Line Cellulose (solution 2)**.
- 4 Locate the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dashed**.

5 Locate the **Legends** section. In the table, enter the following settings:

Legends

Cellulose (with vapor barrier)

6 In the **Temperature across the wall (comparison)** toolbar, click **Plot**.

Temperature across the wall (comparison)

- 1 In the **Model Builder** window, under **Results** click **Temperature across the wall (comparison)**.

- 2 In the **Settings** window for **ID Plot Group**, locate the **Legend** section.

- 3 From the **Position** list, choose **Lower right**.

Wood (without vapor barrier)

- 1 In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** click **Wood (without vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, click to expand the **Title** section.
- 3 From the **Title type** list, choose **None**.

Cellulose (without vapor barrier)

- 1 In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** click **Cellulose (without vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, locate the **Title** section.
- 3 From the **Title type** list, choose **None**.

Wood (with vapor barrier)

- 1 In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** click **Wood (with vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, locate the **Title** section.
- 3 From the **Title type** list, choose **None**.

Cellulose (with vapor barrier)

- 1 In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** click **Cellulose (with vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, locate the **Title** section.
- 3 From the **Title type** list, choose **None**.

Temperature across the wall (comparison)

- 1 In the **Model Builder** window, under **Results** click **Temperature across the wall (comparison)**.
- 2 In the **Settings** window for **ID Plot Group**, click to expand the **Title** section.
- 3 From the **Title type** list, choose **Manual**.
- 4 In the **Title** text area, type **Temperature across the wall**.
- 5 In the **Temperature across the wall (comparison)** toolbar, click **Plot**.

Temperature across the wall (comparison) |

- 1 Right-click **Results>Temperature across the wall (comparison)** and choose **Duplicate**.
- 2 In the **Settings** window for **ID Plot Group**, type **Relative humidity across the wall (comparison)** in the **Label** text field.

Wood (without vapor barrier)

- 1 In the **Model Builder** window, expand the **Temperature across the wall (comparison) |** node, then click **Results>Relative humidity across the wall (comparison)>Wood (without vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, locate the **y-Axis Data** section.
- 3 In the **Expression** text field, type **mt.phi**.

Cellulose (without vapor barrier)

- 1 In the **Model Builder** window, under **Results>Relative humidity across the wall (comparison)** click **Cellulose (without vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, locate the **y-Axis Data** section.
- 3 In the **Expression** text field, type **mt.phi**.

Wood (with vapor barrier)

- 1 In the **Model Builder** window, under **Results>Relative humidity across the wall (comparison)** click **Wood (with vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, locate the **y-Axis Data** section.
- 3 In the **Expression** text field, type **mt.phi**.

Cellulose (with vapor barrier)

- 1 In the **Model Builder** window, under **Results>Relative humidity across the wall (comparison)** click **Cellulose (with vapor barrier)**.
- 2 In the **Settings** window for **Line Graph**, locate the **y-Axis Data** section.
- 3 In the **Expression** text field, type **mt.phi**.

- 4 In the **Relative humidity across the wall (comparison)** toolbar, click **Plot**.

Relative humidity across the wall (comparison)

- 1 In the **Model Builder** window, under **Results** click **Relative humidity across the wall (comparison)**.
- 2 In the **Settings** window for **ID Plot Group**, locate the **Legend** section.
- 3 From the **Position** list, choose **Lower left**.
- 4 Locate the **Title** section. In the **Title** text area, type **Relative humidity across the wall**.
- 5 In the **Relative humidity across the wall (comparison)** toolbar, click **Plot**.

Next, define new interfaces and a new study for the modeling of heat and moisture transport with the method described in [Static modeling of Heat and Moisture Transport](#).

ADD PHYSICS

- 1 In the **Home** toolbar, click **Add Physics** to open the **Add Physics** window.
- 2 Go to the **Add Physics** window.
- 3 In the tree, select **Heat Transfer>Heat and Moisture Transport>Building Materials**.
- 4 Click **Add to Component** in the window toolbar.

Disable the multiphysics coupling node to be able to set the vapor permeability to 0 in the **Heat Transfer in Building Materials** interface. By doing this you ignore the latent heat effect in the heat transfer equation.

- 5 In the **Home** toolbar, click **Add Physics** to close the **Add Physics** window.

MULTIPHYSICS

In the **Model Builder** window, under **Component 1 (comp1)>Multiphysics** right-click **Heat and Moisture 2 (ham2)** and choose **Disable**.

Now, define the physics features.

HEAT TRANSFER IN BUILDING MATERIALS 2 (HT2)

Building Material 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Heat Transfer in Building Materials 2 (ht2)** click **Building Material 1**.
- 2 In the **Settings** window for **Building Material**, locate the **Model Inputs** section.
- 3 From the ϕ list, choose **Relative humidity (mt2/bm1)**.

4 Locate the **Building Material Properties** section. From the δ_p list, choose **User defined**. In the associated text field, type 0.

Heat Flux 1

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Heat Flux**.
- 2 In the **Settings** window for **Heat Flux**, locate the **Heat Flux** section.
- 3 Click the **Convective heat flux** button.
- 4 In the h text field, type h_{ext} .
- 5 In the T_{ext} text field, type T_{ext} .
- 6 Select Boundary 7 only.

Heat Flux 2

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Heat Flux**.
- 2 In the **Settings** window for **Heat Flux**, locate the **Heat Flux** section.
- 3 Click the **Convective heat flux** button.
- 4 In the h text field, type h_{int} .
- 5 In the T_{ext} text field, type T_{int} .
- 6 Select Boundary 2 only.

Initial Values 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)> Heat Transfer in Building Materials 2 (ht2)** click **Initial Values 1**.
- 2 In the **Settings** window for **Initial Values**, type T_{int} in the T_2 text field.

MOISTURE TRANSPORT IN BUILDING MATERIALS 2 (MT2)

In the **Physics** toolbar, click **Heat Transfer in Building Materials 2 (ht2)** and choose **Moisture Transport in Building Materials 2 (mt2)**.

Building Material 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)> Moisture Transport in Building Materials 2 (mt2)** click **Building Material 1**.
- 2 In the **Settings** window for **Building Material**, locate the **Model Input** section.
- 3 From the T list, choose **Temperature (ht2)**.
- 4 In the p_A text field, type $ht2.pA$.

Set the moisture diffusivity to 0 to ignore the capillary transport of liquid moisture.

- 5 Locate the **Building Material** section. From the D_w list, choose **User defined**. From the **Specify** list, choose **Vapor resistance factor**.

6 In the **Model Builder** window, click **Moisture Transport in Building Materials 2 (mt2)**.

Moisture Flux 1

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Moisture Flux**.
- 2 In the **Settings** window for **Moisture Flux**, locate the **Moisture Flux** section.
- 3 Click the **Convective moisture flux, pressures difference** button.
- 4 In the β_p text field, type `beta_ext`.
- 5 In the T_{ext} text field, type `T_ext`.
- 6 In the ϕ_{ext} text field, type `phi_ext`.
- 7 Select Boundary 7 only.

Moisture Flux 2

- 1 In the **Physics** toolbar, click **Boundaries** and choose **Moisture Flux**.
- 2 In the **Settings** window for **Moisture Flux**, locate the **Moisture Flux** section.
- 3 Click the **Convective moisture flux, pressures difference** button.
- 4 In the β_p text field, type `beta_int`.
- 5 In the T_{ext} text field, type `T_int`.
- 6 In the ϕ_{ext} text field, type `phi_int`.
- 7 Select Boundary 2 only.

Initial Values 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)> Moisture Transport in Building Materials 2 (mt2)** click **Initial Values 1**.
- 2 In the **Settings** window for **Initial Values**, locate the **Initial Values** section.
- 3 In the ϕ_0 text field, type `phi_int`.

ADD STUDY

- 1 In the **Home** toolbar, click **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies>Stationary**.
- 4 Click **Add Study** in the window toolbar.
- 5 In the **Home** toolbar, click **Add Study** to close the **Add Study** window.

STUDY 3

Step 1: Stationary

- 1 In the **Settings** window for **Stationary**, locate the **Physics and Variables Selection** section.
- 2 In the table, enter the following settings:

Physics interface	Solve for	Discretization
Heat Transfer in Building Materials (ht)		physics
Moisture Transport in Building Materials (mt)		physics

- 3 In the table, enter the following settings:

Multiphysics couplings	Solve for
Heat and Moisture 1 (ham1)	

- 4 In the **Model Builder** window, click **Study 3**.
- 5 In the **Settings** window for **Study**, type **Study 3 (Stationary, Glaser method)** in the **Label** text field.
- 6 In the **Home** toolbar, click **Compute**.

Next, compare the results with those obtained with the first approach (without vapor barrier). Follow the instructions below to reproduce the plots of [Figure 7](#) and [Figure 8](#).

RESULTS

Cut Line Wood (solution 2) 1

- 1 In the **Model Builder** window, under **Results>Data Sets** right-click **Cut Line Wood (solution 2)** and choose **Duplicate**.
- 2 Right-click **Cut Line Cellulose (solution 2)** and choose **Duplicate**.
- 3 In the **Settings** window for **Cut Line 2D**, locate the **Data** section.
- 4 From the **Data set** list, choose **Study 3 (Stationary, Glaser method)/Solution 3 (sol3)**.
- 5 In the **Label** text field, type **Cut Line Wood (solution 3)**.

Cut Line Cellulose (solution 2) 1

- 1 In the **Model Builder** window, under **Results>Data Sets** click **Cut Line Cellulose (solution 2) 1**.
- 2 In the **Settings** window for **Cut Line 2D**, locate the **Data** section.
- 3 From the **Data set** list, choose **Study 3 (Stationary, Glaser method)/Solution 3 (sol3)**.
- 4 In the **Label** text field, type **Cut Line Cellulose (solution 3)**.

Wood (with vapor barrier)

In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** right-click **Wood (with vapor barrier)** and choose **Disable**.

Cellulose (with vapor barrier)

In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** right-click **Cellulose (with vapor barrier)** and choose **Disable**.

Wood (without vapor barrier) 1

- 1 In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** right-click **Wood (without vapor barrier)** and choose **Duplicate**.
- 2 Right-click **Cellulose (without vapor barrier)** and choose **Duplicate**.
- 3 In the **Settings** window for **Line Graph**, type **Wood (Glaser method)** in the **Label** text field.
- 4 Locate the **Data** section. From the **Data set** list, choose **Cut Line Wood (solution 3)**.
- 5 Locate the **y-Axis Data** section. In the **Expression** text field, type **T2**.
- 6 Locate the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dotted**.
- 7 Locate the **Legends** section. In the table, enter the following settings:

Legends

Wood (Glaser method)

Cellulose (without vapor barrier) 1

- 1 In the **Model Builder** window, under **Results>Temperature across the wall (comparison)** click **Cellulose (without vapor barrier) 1**.
- 2 In the **Settings** window for **Line Graph**, type **Cellulose (Glaser method)** in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **Cut Line Cellulose (solution 3)**.
- 4 Locate the **y-Axis Data** section. In the **Expression** text field, type **T2**.
- 5 Locate the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dotted**.
- 6 Locate the **Legends** section. In the table, enter the following settings:

Legends

Cellulose (Glaser method)

- 7 In the **Temperature across the wall (comparison)** toolbar, click **Plot**.

Wood (with vapor barrier)

In the **Model Builder** window, under **Results>Relative humidity across the wall (comparison)** right-click **Wood (with vapor barrier)** and choose **Disable**.

Cellulose (with vapor barrier)

In the **Model Builder** window, under **Results>Relative humidity across the wall (comparison)** right-click **Cellulose (with vapor barrier)** and choose **Disable**.

Wood (without vapor barrier) |

- 1 In the **Model Builder** window, under **Results>Relative humidity across the wall (comparison)** right-click **Wood (without vapor barrier)** and choose **Duplicate**.
- 2 Right-click **Cellulose (without vapor barrier)** and choose **Duplicate**.
- 3 In the **Settings** window for **Line Graph**, type **Wood (Glaser method)** in the **Label** text field.
- 4 Locate the **Data** section. From the **Data set** list, choose **Cut Line Wood (solution 3)**.
- 5 Locate the **y-Axis Data** section. In the **Expression** text field, type **mt2.phi**.
- 6 Locate the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dotted**.
- 7 Locate the **Legends** section. In the table, enter the following settings:

Legends

Wood (Glaser method)

Cellulose (without vapor barrier) |

- 1 In the **Model Builder** window, under **Results>Relative humidity across the wall (comparison)** click **Cellulose (without vapor barrier) |**.
- 2 In the **Settings** window for **Line Graph**, type **Cellulose (Glaser method)** in the **Label** text field.
- 3 Locate the **Data** section. From the **Data set** list, choose **Cut Line Cellulose (solution 3)**.
- 4 Locate the **y-Axis Data** section. In the **Expression** text field, type **mt2.phi**.
- 5 Locate the **Coloring and Style** section. Find the **Line style** subsection. From the **Line** list, choose **Dotted**.
- 6 Locate the **Legends** section. In the table, enter the following settings:

Legends

Cellulose (Glaser method)

7 In the **Relative humidity across the wall (comparison)** toolbar, click **Plot**.

Finally, use typical weather data for the temperature and relative humidity on exterior side, and set a new time-dependent study to check the evolution of the relative humidity in the bracing and in the isolation over two days.

DEFINITIONS

Ambient Thermal Properties 1 (amth1)

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Definitions** click **Ambient Thermal Properties 1 (amth1)**.
- 2 In the **Settings** window for **Ambient Thermal Properties**, locate the **Ambient Settings** section.
- 3 From the **Ambient data** list, choose **Meteorological data (ASHRAE 2013)**.
- 4 Locate the **Location** section. Click **Set Weather Station**.
- 5 In the **Weather Station** dialog box, select **Europe>Ireland>Dublin Airport (039690)** in the tree.
- 6 Click **OK**.
- 7 In the **Settings** window for **Ambient Thermal Properties**, locate the **Time** section.
- 8 Find the **Date** subsection. In the table, enter the following settings:

Day	Month
15	04

- 9 Find the **Local time** subsection. In the table, enter the following settings:

Hour	Minute	Second
0	00	00

ADD STUDY

- 1 In the **Home** toolbar, click **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies>Time Dependent**.
- 4 Click **Add Study** in the window toolbar.
- 5 In the **Home** toolbar, click **Add Study** to close the **Add Study** window.

STUDY 4

In the **Settings** window for **Study**, type Study 4 (Time dependent, with vapor barrier) in the **Label** text field.

STUDY 4 (TIME DEPENDENT, WITH VAPOR BARRIER)

Step 1: Time Dependent

- 1 In the **Model Builder** window, under **Study 4 (Time dependent, with vapor barrier)** click **Step 1: Time Dependent**.
- 2 In the **Settings** window for **Time Dependent**, locate the **Physics and Variables Selection** section.
- 3 In the table, enter the following settings:

Physics interface	Solve for	Discretization
Heat Transfer in Building Materials 2 (ht2)		physics
Moisture Transport in Building Materials 2 (mt2)		physics

- 4 Locate the **Study Settings** section. From the **Time unit** list, choose **h**.
- 5 In the **Times** text field, type **range(0,1,48)**.
- 6 In the **Home** toolbar, click **Compute**.

You can visualize the ambient data used as exterior conditions as in [Figure 2](#) by following the instructions below.

1D Plot Group 15

In the **Home** toolbar, click **Add Plot Group** and choose **1D Plot Group**.

RESULTS

1D Plot Group 15

- 1 In the **Settings** window for **1D Plot Group**, type **Ambient data** in the **Label** text field.
- 2 Locate the **Data** section. From the **Data set** list, choose **Study 4 (Time dependent, with vapor barrier)/Solution 4 (sol4)**.

Point Graph 1

- 1 Right-click **Results>Ambient data** and choose **Point Graph**.
- 2 Select Point 4 only.
- 3 In the **Settings** window for **Point Graph**, locate the **y-Axis Data** section.
- 4 In the **Expression** text field, type **amth1.T_amb**.

- 5 Click to expand the **Legends** section. Select the **Show legends** check box.
- 6 From the **Legends** list, choose **Manual**.
- 7 In the table, enter the following settings:

Legends
Temperature

Point Graph 2

- 1 Right-click **Ambient data** and choose **Point Graph**.
- 2 Select Point 4 only.
- 3 In the **Settings** window for **Point Graph**, locate the **y-Axis Data** section.
- 4 In the **Expression** text field, type `amth1.phi_amb`.
- 5 Locate the **Legends** section. Select the **Show legends** check box.
- 6 From the **Legends** list, choose **Manual**.
- 7 In the table, enter the following settings:

Legends
Relative humidity

Ambient data

- 1 In the **Model Builder** window, under **Results** click **Ambient data**.
- 2 In the **Settings** window for **ID Plot Group**, locate the **Plot Settings** section.
- 3 Select the **Two y-axes** check box.
- 4 In the table, enter the following settings:

Plot	Plot on secondary y-axis
Point Graph 2	✓

- 5 Locate the **Title** section. From the **Title type** list, choose **None**.
- 6 Click the **Zoom Extents** button in the **Graphics** toolbar.
- 7 In the **Ambient data** toolbar, click **Plot**.

Finally, define probes to plot the relative humidity in the bracing and in the isolation over time.

- 8 In the **Definitions** toolbar, click **Probes** and choose **Domain Point Probe**.

DEFINITIONS

- 1 In the **Model Builder** window, under **Component I (compI)>Definitions** click **Domain Point Probe I**.
- 2 In the **Settings** window for **Domain Point Probe**, type Domain Point Probe: Relative humidity (bracing) in the **Label** text field.
- 3 Locate the **Point Selection** section. In row **Coordinates**, set **x** to $L/2$.
- 4 In row **Coordinates**, set **y** to $t_{il}+t_i+t_b*0.95$.
- 5 In the **Model Builder** window, expand the **Component I (compI)>Definitions>Domain Point Probe: Relative humidity (bracing)** node, then click **Point Probe Expression I (ppbI)**.
- 6 In the **Settings** window for **Point Probe Expression**, locate the **Expression** section.
- 7 In the **Expression** text field, type `mt.phi`.
- 8 Click **Update Results**.
- 9 In the **Model Builder** window, under **Component I (compI)>Definitions** right-click **Domain Point Probe: Relative humidity (bracing)** and choose **Duplicate**.
- 10 In the **Settings** window for **Domain Point Probe**, type Domain Point Probe: Relative humidity (isolation) in the **Label** text field.
- 11 Locate the **Point Selection** section. In row **Coordinates**, set **y** to $t_{il}+t_i*0.95$.
- 12 In the **Model Builder** window, expand the **Component I (compI)>Definitions>Domain Point Probe: Relative humidity (bracing) I** node, then click **Component I (compI)>Definitions>Domain Point Probe: Relative humidity (isolation)>Point Probe Expression I (ppb2)**.
- 13 In the **Settings** window for **Point Probe Expression**, click to expand the **Table and Window Settings** section.
- 14 From the **Output table** list, choose **New table**.
- 15 Click **Update Results**.

RESULTS

Probe Plot Group 16

- 1 In the **Model Builder** window, under **Results** click **Probe Plot Group 16**.
- 2 In the **Settings** window for **ID Plot Group**, type Relative humidity over two days in the **Label** text field.

3 In the **Relative humidity over two days** toolbar, click **Plot**.

