



Model created in COMSOL Multiphysics 6.4

Electrochemical Polishing

Introduction

This example illustrates the principle of electrochemical polishing. The simplified 2D model geometry consists of two electrodes and an intermediate electrolyte domain. The positive electrode has a protrusion, representing a surface defect. The purpose of the application is to examine how this protrusion and the surrounding electrode material are depleted over a period of time.

Model Definition

The potential drop over the electrodes is 30 V, and the electrolyte has a conductivity of 10 S/m.

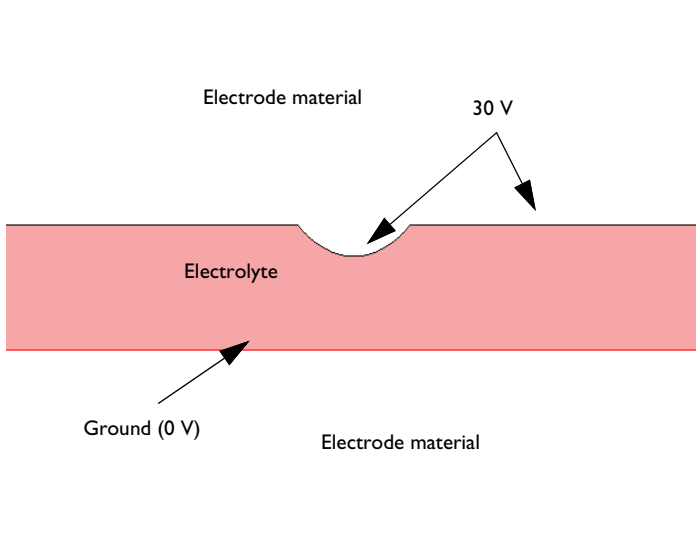


Figure 1: Model geometry.

Modeling the depletion of the positive electrode requires a moving boundary because the geometry changes and the current density distribution with it. A simple model for the depletion is based on the assumption that the depletion rate is proportional to the normal current density at the electrode surface. The velocity, U , normal to the mesh at the electrode surface then becomes

$$U = -KJ_n \quad (1)$$

where K is the coefficient of proportionality, and J_n is the normal current density. In this example, $K = 10^{-11} \text{ m}^3/\text{As}$.

The part of the electrode and electrolyte that the model includes is about 3 mm wide and the distance between the electrodes is 0.4 mm.

Results and Discussion

After a period of 10 s, the protrusion is somewhat smoothed out, and a significant portion of the positive electrode has been depleted.

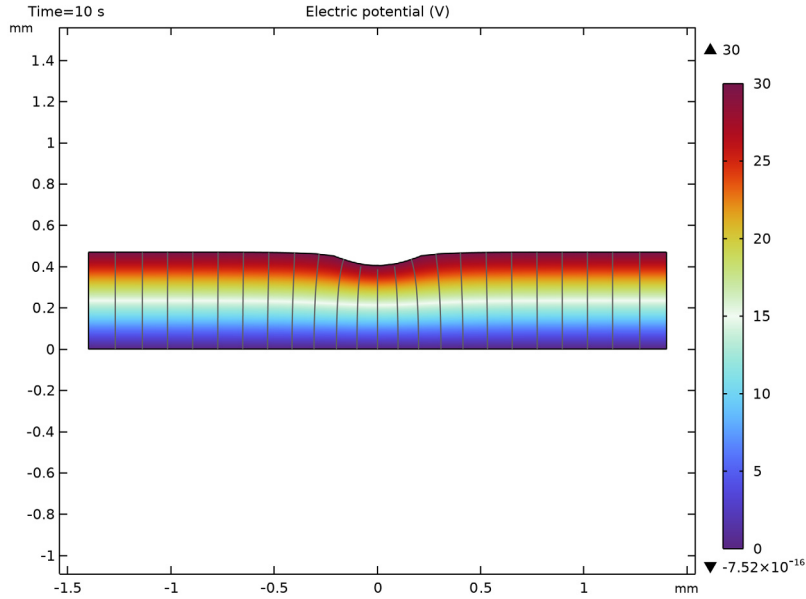


Figure 2: Potential distribution and electrode depletion after 10 s.

Using Equation 1, the expected total depletion increment, $d(\Delta t = 10 \text{ s})$, over the simulated time interval can be estimated as

$$d(\Delta t) = |U|\Delta t = K|J_n|\Delta t = \left(10^{-11} \frac{\text{m}^3}{\text{As}}\right) \cdot \left(10^6 \frac{\text{A}}{\text{m}}\right) \cdot (10^1 \text{ s}) = 10^{-4} \text{ m} \quad (2)$$

This estimate agrees with the maximum value for the y -displacement obtained for the model, showing that the approximate formula (which does not take effects from the curved boundary into account) is in fact very accurate.

Notes About the COMSOL Implementation


This application uses the Electric Currents interface in combination with a Deformed Geometry. The variable for the normal current density defines the deforming boundary velocity. Due to good stirring of the electrolyte, the dynamics in this example is quasi static in nature with regards to the electrolyte charge transport, and the time dependence only enters in the depletion (removal of material) of the electrode.

Application Library path: COMSOL_Multiphysics/Electromagnetics/
electrochemical_polishing




Modeling Instructions

From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.

MODEL WIZARD

- 1 In the **Model Wizard** window, click  **2D**.
- 2 In the **Select Physics** tree, select **AC/DC** > **Electric Fields and Currents** > **Electric Currents (ec)**.
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies** > **Time Dependent**.
- 6 Click  **Done**.

GLOBAL DEFINITIONS

Parameters I



- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters I**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 In the table, enter the following settings:

Name	Expression	Description
K	$1e-11[m^3/(A*s)]$	Coefficient of proportionality


GEOMETRY I

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Geometry I**.
- 2 In the **Settings** window for **Geometry**, locate the **Units** section.
- 3 From the **Length unit** list, choose **mm**.




Rectangle 1 (r1)


- 1 In the **Geometry** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type 2.8.
- 4 In the **Height** text field, type 0.4.
- 5 Locate the **Position** section. In the **x** text field, type -1.4.
- 6 Click  **Build Selected**.

Circle 1 (c1)


- 1 In the **Geometry** toolbar, click  **Circle**.
- 2 In the **Settings** window for **Circle**, locate the **Size and Shape** section.
- 3 In the **Radius** text field, type 0.3.
- 4 Locate the **Position** section. In the **y** text field, type 0.6.

Difference 1 (dif1)

- 1 In the **Geometry** toolbar, click  **Booleans and Partitions** and choose **Difference**.
- 2 Select the object **r1** only to add it to the **Objects to add** list.
- 3 In the **Settings** window for **Difference**, locate the **Difference** section.
- 4 Click to select the  **Activate Selection** toggle button for **Objects to subtract**.
- 5 Select the object **c1** only.
- 6 Click  **Build Selected**.

7 Click the  **Zoom Extents** button in the **Graphics** toolbar.


The model geometry is now complete.

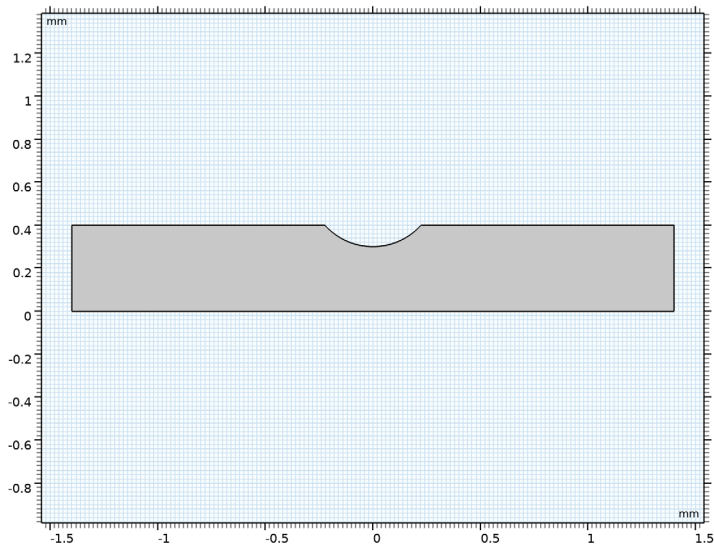

Before turning to the **Deformed Geometry** interface settings, define variables for the local displacement components.

DEFINITIONS

Variables 1

- 1 In the **Definitions** toolbar, click  **Local Variables**.
- 2 In the **Settings** window for **Variables**, locate the **Variables** section.
- 3 In the table, enter the following settings:

Name	Expression	Unit	Description
dx	$x - Xg$	m	x-displacement
dy	$y - Yg$	m	y-displacement

Here, Xg and Yg are geometry-frame coordinates corresponding to x and y .

ELECTRIC CURRENTS (EC)

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Electric Currents (ec)**.
- 2 In the **Settings** window for **Electric Currents**, click to expand the **Equation** section.


- 3 From the **Equation form** list, choose **Stationary**.

With this setting you specify that the current distribution can be regarded as stationary on the time scale determined by the depletion rate.


Current Conservation in Solids I

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Electric Currents (ec)** click **Current Conservation in Solids I**.
- 2 In the **Settings** window for **Current Conservation in Solids**, locate the **Constitutive Relation Jc-E** section.
- 3 From the σ list, choose **User defined**. In the associated text field, type 10.
- 4 Locate the **Constitutive Relation D-E** section. From the ϵ_r list, choose **User defined**. In the associated text field, type 80.

Electric Potential I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Electric Potential**.
- 2 Select Boundaries 3, 4, 6, and 7 only.
- 3 In the **Settings** window for **Electric Potential**, locate the **Electric Potential** section.
- 4 In the V_0 text field, type 30.

Ground I


- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Ground**.
- 2 Select Boundary 2 only.

Electric Insulation I


For the left and right boundaries, the default boundary condition is a good approximation if you want to simulate that the electrodes are extended indefinitely in both directions.

COMPONENT 1 (COMP1)

Deforming Domain I

- 1 In the **Physics** toolbar, click  **Deformed Geometry** and choose **Free Deformation**.
- 2 Select Domain 1 only.
- 3 In the **Settings** window for **Deforming Domain**, locate the **Smoothing** section.
- 4 From the **Mesh smoothing type** list, choose **Laplace**.

Prescribed Normal Mesh Velocity I

- 1 In the **Deformed Geometry** toolbar, click  **Prescribed Normal Mesh Velocity**.
- 2 Select Boundaries 3, 4, 6, and 7 only.

3 In the **Settings** window for **Prescribed Normal Mesh Velocity**, locate the **Prescribed Normal Mesh Velocity** section.

4 In the \mathbf{v}_n text field, type $-K^*(-\mathbf{e}c \cdot \mathbf{n})$.

Prescribed Normal Mesh Displacement I

1 In the **Deformed Geometry** toolbar, click  **Prescribed Normal Mesh Displacement**.

2 Select Boundaries 1, 2, and 5 only.


MESH I


1 In the **Model Builder** window, under **Component I (comp1)** click **Mesh I**.

2 In the **Settings** window for **Mesh**, locate the **Physics-Controlled Mesh** section.

3 From the **Element size** list, choose **Finer**.

4 Click  **Build All**.

5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

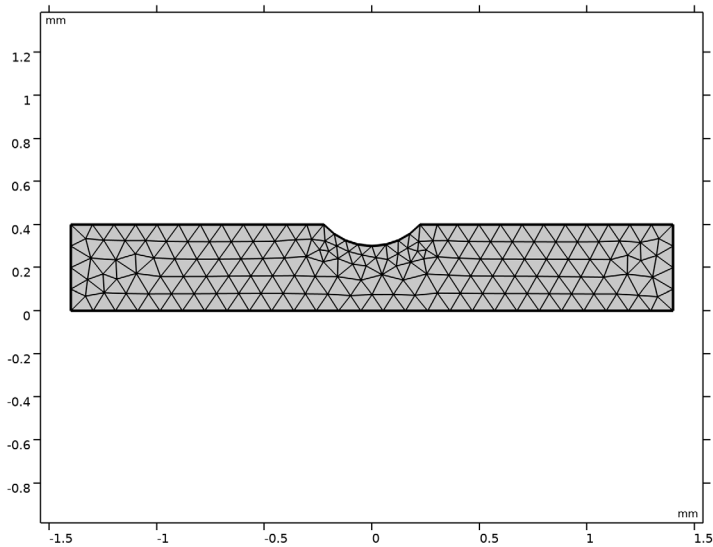


STUDY I

Step 1: Time Dependent

1 In the **Model Builder** window, under **Study I** click **Step 1: Time Dependent**.


2 In the **Settings** window for **Time Dependent**, locate the **Study Settings** section.

3 In the **Output times** text field, type range(0,10).

4 In the **Study** toolbar, click  **Compute**.

RESULTS

Electric Potential (ec)


1 Click the  **Zoom Extents** button in the **Graphics** toolbar.

The first default plot shows the potential field at the end of the simulation interval; compare with [Figure 2](#).

Electric Field (ec)


The second default plot shows the electric field as a combined surface and streamline plot:

1 In the **Model Builder** window, click **Electric Field (ec)**.

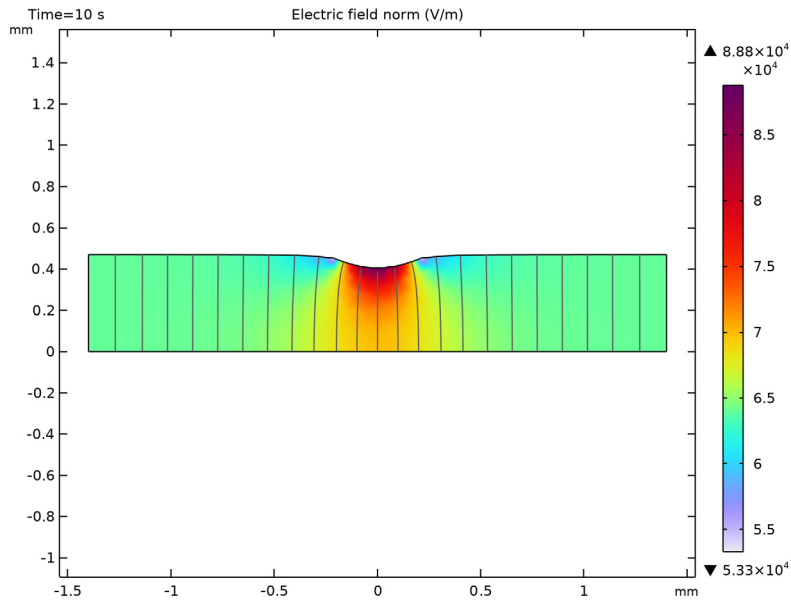

Current Density Norm

Next, plot the current distribution.

1 In the **Results** toolbar, click  **2D Plot Group**.


2 In the **Settings** window for **2D Plot Group**, type **Current Density Norm** in the **Label** text field.

Surface 1

1 Right-click **Current Density Norm** and choose **Surface**.

2 In the **Settings** window for **Surface**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (comp1) > Electric Currents > Currents and charge > ec.normJ - Current density norm - A/m²**.

3 In the **Current Density Norm** toolbar, click  **Plot**.

4 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Add a **Max/Min Point** plot to determine the maximum and minimum values of the current density norm.

Current Density Norm


In the **Current Density Norm** toolbar, click  **More Plots** and choose **Max/Min Point**.

Max/Min Point 1

1 In the **Settings** window for **Max/Min Point**, locate the **Expression** section.

2 In the **Expression** text field, type `ec.normJ`.


3 In the **Current Density Norm** toolbar, click  **Plot**.

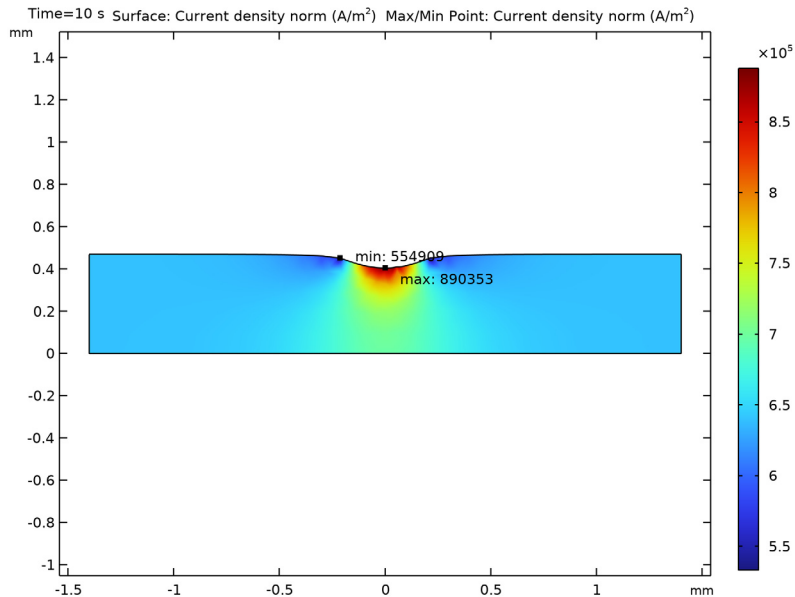



The maximum current density is thus roughly $9 \cdot 10^5$ A/m².

Depletion, y Direction

To see the magnitude of the depletion in the *y* direction more easily, plot the *y*-component of the mesh displacement and evaluate its maximum value.

- 1 In the **Results** toolbar, click  **2D Plot Group**.
- 2 In the **Settings** window for **2D Plot Group**, type Depletion, y Direction in the **Label** text field.

Surface 1

- 1 Right-click **Depletion, y Direction** and choose **Surface**.
- 2 In the **Settings** window for **Surface**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (comp1) > Definitions > Variables > dy - y-displacement - m**.
- 3 In the **Depletion, y Direction** toolbar, click  **Plot**.
- 4 Click the  **Zoom In** button in the **Graphics** toolbar.


Depletion, y Direction

In the **Depletion, y Direction** toolbar, click  **More Plots** and choose **Max/Min Point**.

Max/Min Point 1

- 1 In the **Settings** window for **Max/Min Point**, locate the **Expression** section.
- 2 In the **Expression** text field, type dy.
- 3 Locate the **Display** section. From the **Display** list, choose **Max**.

4 In the **Depletion, y Direction** toolbar, click  **Plot**.

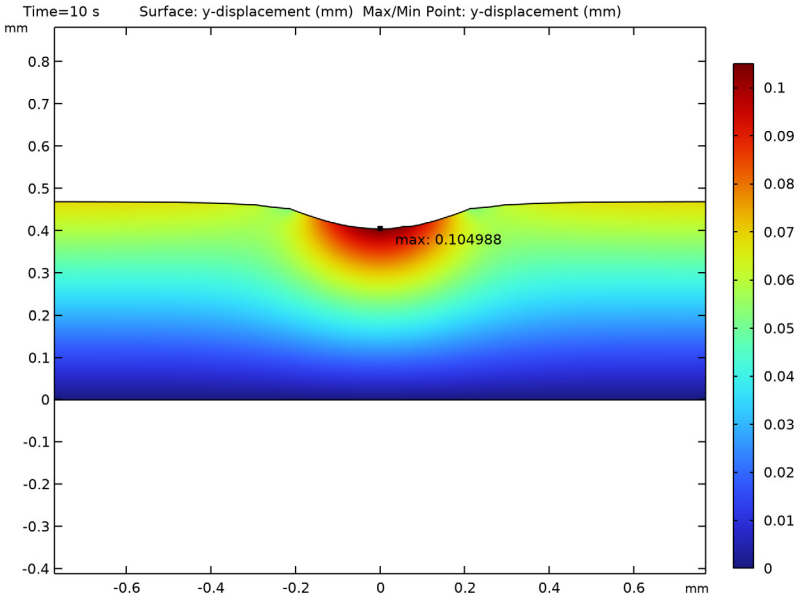

The maximum value for the *y*-displacement is approximately 0.1 mm, which agrees with the value calculated in [Equation 2](#).