



Model created in COMSOL Multiphysics 6.4

Inductor in an Amplifier Circuit

Introduction

This example studies a finite element model of an inductor inserted into an electrical amplifier circuit.

Modern electronic systems are very complex and depend heavily on computer aided design in the development and manufacturing process. Common tools for such calculations are based on the SPICE format originally developed at Berkeley University (Ref. 1). The SPICE format consists of a standardized set of models for describing electrical devices — especially semiconductor devices such as transistors, diodes, and thyristors. SPICE also includes a simple, easy-to-read text format for circuit netlists and model parameter specifications. Although the netlist format is essentially the same as it was from the beginning, the set of models and model parameters constantly changes, with new models being added according to the latest achievements in semiconductor device development. When the devices are scaled down, new effects appear that have to be properly modeled. The new models are the result of ongoing research in device modeling.

When an engineer is designing a new electronic component, like a capacitor or an inductor, the SPICE parameters for that device are not known. They are either extracted from finite element tools such as COMSOL Multiphysics or from measurements on a prototype. To speed up the design process it can be convenient to include the finite element model in the SPICE circuit simulation, calculating the device behavior in an actual circuit.

This application takes a simple amplifier circuit and exchanges one of its components with a finite element model of an inductor with a magnetic core. COMSOL Multiphysics calculates the transient behavior of the entire system. Importing a SPICE circuit netlist brings in the circuit elements along with their model parameters and location in the circuit. All elements can be edited in COMSOL Multiphysics, and any pair of nodes can connect to the finite element model.

Model Definition

The inductor model uses the **Magnetic Fields** interface solving for the magnetic potential \mathbf{A} :

$$\sigma \frac{\partial \mathbf{A}}{\partial t} + \nabla \times (\mu_0^{-1} \mu_r^{-1} \nabla \times \mathbf{A}) = \mathbf{J}^e$$

where μ_0 is the permeability of vacuum, μ_r the relative permeability, and σ the electric conductivity. Note that in 2D axisymmetric dimension when solving the out-of-plane vector potential (as in this model), the **Magnetic Fields** interface uses *The Covariant*

Formulation described in the *AC/DC Module User's Guide*, where the dependent variable is $\Psi = rA_\phi$, instead of A_ϕ .

Because the coil has a large number of turns it is not efficient to model the separate wires. A homogenized formulation where eddy currents within each wire are neglected is used for the coil cross section. A dedicated coil feature is used for this purpose.

CONNECTION TO A SPICE CIRCUIT

The electrical circuit is a standard amplifier circuit with one bipolar transistor, biasing resistors, input filter, and output filter; see [Figure 1](#).

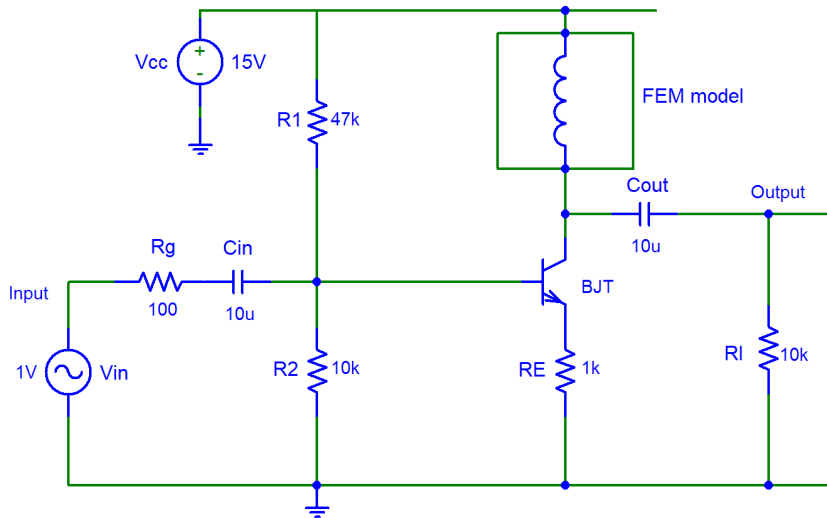


Figure 1: Circuit diagram.

The input is a sine signal of 1 V and 10 kHz. The following listing shows the SPICE netlist for this circuit:

```
* BJT Amplifier circuit
.OPTIONS TNOM=27
.TEMP 27
Vin 1 0 sin(0 1 10kHz)
Vcc 4 0 15
Rg 1 2 100
Cin 2 3 10u
R1 4 3 47k
R2 3 0 10k
RE 7 0 1k
Cout 5 6 10u
```

```

R1      6      0      10k
Q1      5      3      7      BJT
.MODEL BJT NPN(Is=15f Ise=15f Isc=0 Bf=260 Br=6.1
+ Ikf=.3 Xtb=1.5 Ne=1.3 Nc=2 Rc=1 Rb=10 Eg=1.11
+ Cjc=7.5p Mjc=.35 Vjc=.75 Fc=.5 Cje=20p Mje=0.4 Vje=0.75
+ Vaf=75 Xtf=3 Xti=3)
.END

```

A dedicated circuit device is then added in COMSOL Multiphysics to connect the circuit with the inductor model. The model parameters of the transistor do not correspond to a real device, but the numbers are nevertheless chosen to be realistic.

The import of the SPICE netlist does not fully support the SPICE format; especially for the semiconductor device models it only supports a limited set of parameters. Supplying unsupported parameters results in those parameters not being used in the circuit model. For example, transit time capacitance and temperature dependence are not supported for the transistor model.

Results and Discussion

A first version of this application lets you compute the magnetic flux density distribution from a 1 A current through the inductor, without the circuit connection taken into consideration.

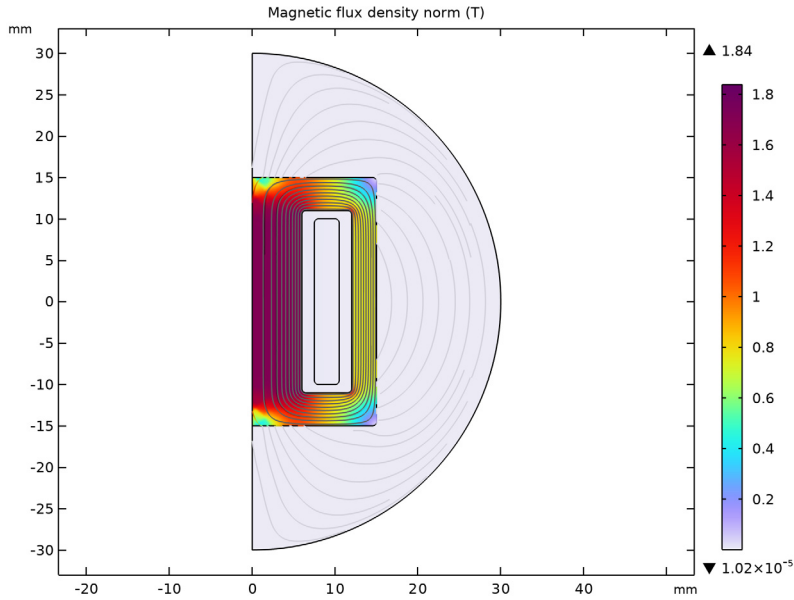


Figure 2: Magnetic flux density distribution as the coil is driven by a 1 A current source.

Biasing of an amplifier is often a complicated compromise, especially if you only use resistors. Adding an inductor as the collector impedance simplifies the biasing design, because the instantaneous voltage on the collector of the transistor can be higher than the supply voltage, which is not possible with resistors. Amplifiers using inductors can be quite narrow banded.

Before starting the transient simulation, proper initial conditions have to be calculated. For this application it is sufficient to ramp the supply voltage to 15 V with the nonlinear parametric solver. After the ramp, the DC bias conditions have been calculated properly, and you can use this solution as initial condition for the transient simulation.

Using a global variables plot, you can easily plot input signal, output signal, and inductor voltage in the same figure.

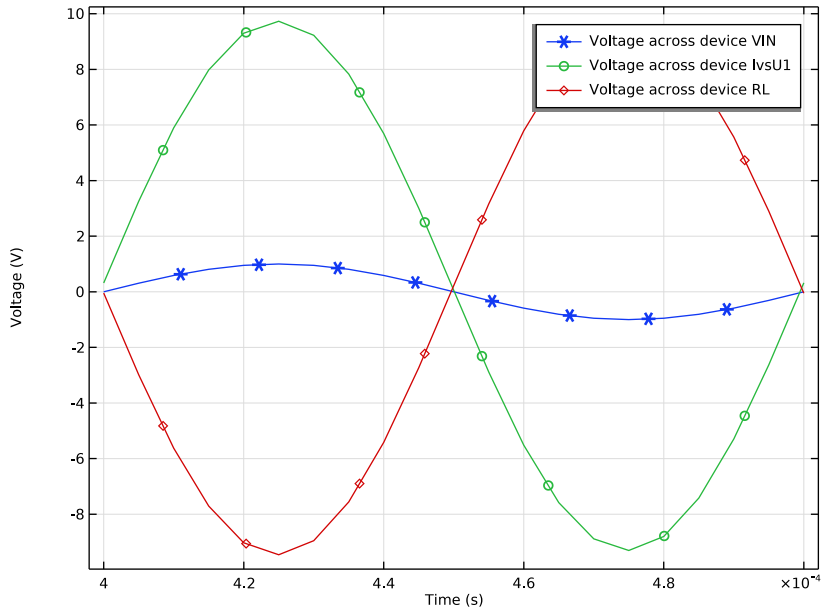


Figure 3: Input signal (*cir.VIN_v*), output signal (*cir.RL_v*), and inductor voltage (*cir.X1_v*) as functions of time.

The output signal is about 1.5 times the input signal in amplitude.

Reference


1. A. Vladimirescu et al., *SPICE Version 2G User's Guide*, University of California, Berkeley, 1981.

Application Library path: ACDC_Module/Electromagnetics_and_Circuits/
inductor_in_circuit




Modeling Instructions

From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.


MODEL WIZARD

- 1 In the **Model Wizard** window, click  **2D Axisymmetric**.
- 2 In the **Select Physics** tree, select **AC/DC** > **Electromagnetic Fields** > **Magnetic Fields (mf)**.
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies** > **Stationary**.
- 6 Click  **Done**.


GEOMETRY 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Geometry 1**.
- 2 In the **Settings** window for **Geometry**, locate the **Units** section.
- 3 From the **Length unit** list, choose **mm**.

Circle 1 (c1)

- 1 In the **Geometry** toolbar, click  **Circle**.
- 2 In the **Settings** window for **Circle**, locate the **Size and Shape** section.
- 3 In the **Radius** text field, type 30.
- 4 In the **Sector angle** text field, type 180.
- 5 Locate the **Rotation Angle** section. In the **Rotation** text field, type -90.
- 6 Right-click **Circle 1 (c1)** and choose **Build Selected**.

Rectangle 1 (r1)


- 1 In the **Geometry** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type 15.
- 4 In the **Height** text field, type 30.
- 5 Locate the **Position** section. In the **z** text field, type -15.
- 6 Right-click **Rectangle 1 (r1)** and choose **Build Selected**.

Rectangle 2 (r2)

- 1 In the **Geometry** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.

- 3 In the **Width** text field, type 3.
- 4 In the **Height** text field, type 20.
- 5 Locate the **Position** section. In the **r** text field, type 7.5.
- 6 In the **z** text field, type -10.
- 7 Right-click **Rectangle 2 (r2)** and choose **Build Selected**.

Rectangle 3 (r3)


- 1 In the **Geometry** toolbar, click  **Rectangle**.
- 2 In the **Settings** window for **Rectangle**, locate the **Size and Shape** section.
- 3 In the **Width** text field, type 6.
- 4 In the **Height** text field, type 22.
- 5 Locate the **Position** section. In the **r** text field, type 6.
- 6 In the **z** text field, type -11.
- 7 Right-click **Rectangle 3 (r3)** and choose **Build Selected**.


Fillet 1 (fil1)


- 1 In the **Geometry** toolbar, click  **Fillet**.

Next, select all ten points in the internal of the geometry as follows:

- 2 Click the **Select Box** button in the **Graphics** toolbar.
- 3 Using the mouse, enclose the internal vertices in a box to select them.

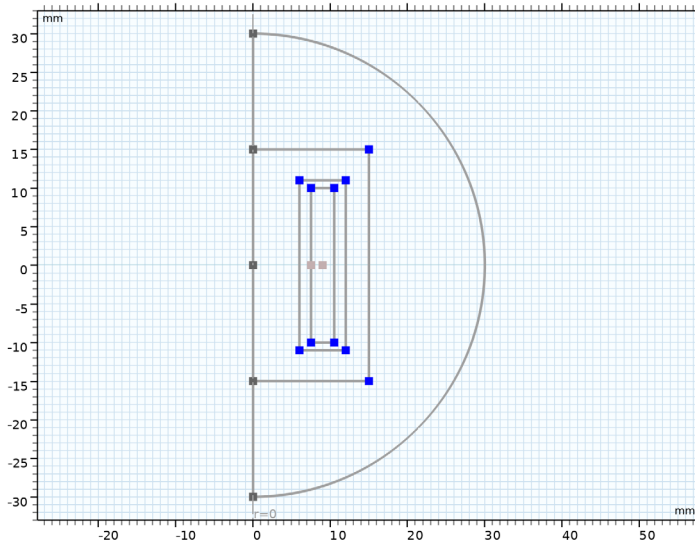

- 4 In the **Settings** window for **Fillet**, locate the **Radius** section.
- 5 In the **Radius** text field, type 0.5.
- 6 Click  **Build All Objects**.

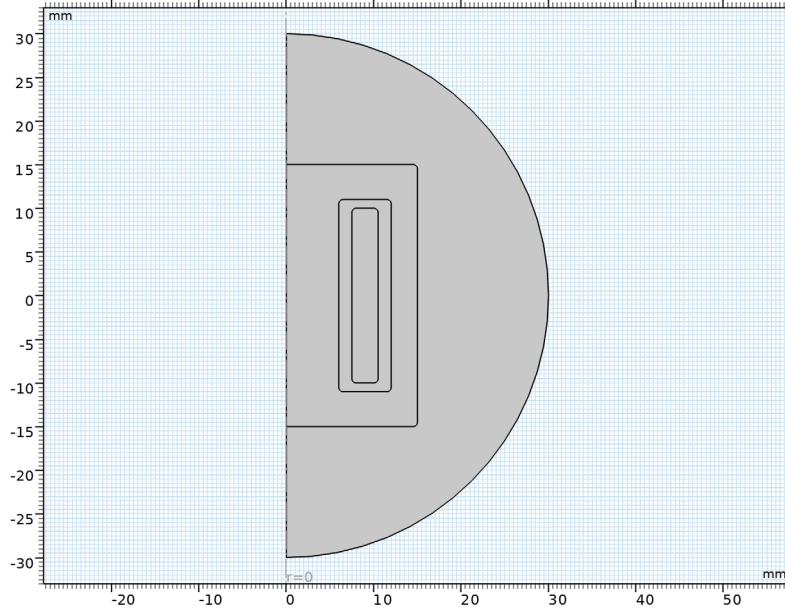



GLOBAL DEFINITIONS

Parameters I

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters I**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 In the table, enter the following settings:


Name	Expression	Value	Description
t	0[s]	0 s	Time for stationary solution
N	1e3	1000	Coil turns
d_coil	0.1[mm]	1E-4 m	Coil wire diameter
sigma_coil	5e7[S/m]	5E7 S/m	Wire conductivity
Vappl	15[V]	15 V	Supply voltage

ADD MATERIAL

- 1 In the **Materials** toolbar, click  **Add Material** to open the **Add Material** window.
- 2 Go to the **Add Material** window.
- 3 In the tree, select **Built-in > Copper**.
- 4 Click the **Add to Component** button in the window toolbar.
- 5 In the tree, select **Nonlinear Magnetic > Low Carbon Steel > Low Carbon Steel 1006**.
- 6 Click the **Add to Component** button in the window toolbar.
- 7 In the **Materials** toolbar, click  **Add Material** to close the **Add Material** window.

MATERIALS

Copper (mat1)

- 1 In the **Settings** window for **Material**, locate the **Geometric Entity Selection** section.
- 2 Click  **Clear Selection**.
- 3 Select Domain 4 only.

This sets the copper to be the material in the coil. Note that the behavior of the coil is determined by the applied current and the resulting voltage.

Low Carbon Steel 1006 (mat2)

- 1 In the **Model Builder** window, click **Low Carbon Steel 1006 (mat2)**.
- 2 Select Domain 2 only.

This leaves your model with material data for low carbon steel in the core. The **Free Space** physics feature covers the properties of the volume surrounding the inductor.

MAGNETIC FIELDS (MF)

First, give the solved-for magnetic potential an initial value with a nonzero gradient. This helps the nonlinear solver avoid an otherwise singular linearization before it takes the first step.

Initial Values 1

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Magnetic Fields (mf)** click **Initial Values 1**.
- 2 In the **Settings** window for **Initial Values**, locate the **Initial Values** section.


3 Specify the **A** vector as

0	r
1 [uWb/m ²]*r	phi
0	z

Here, the prefix u in uWb stands for micro (μ Wb).


Next, set up the coil.

Ampère's Law in Solids I

- 1 In the **Physics** toolbar, click  **Domains** and choose **Ampère's Law in Solids**.
- 2 Select Domain 2 only.
- 3 In the **Settings** window for **Ampère's Law in Solids**, locate the **Constitutive Relation B-H** section.
- 4 From the **Magnetization model** list, choose **B-H curve**.
- 5 Locate the **Constitutive Relation Jc-E** section. From the σ list, choose **User defined**. In the associated text field, type 1000.

Usually, a laminated core is used to decrease the eddy current loss. Here, set a user defined conductivity to simulate such an effect.

Domain Coil I

- 1 In the **Physics** toolbar, click  **Domains** and choose **Domain Coil**.
- 2 Select Domain 4 only.
- 3 In the **Settings** window for **Domain Coil**, locate the **Coil** section.
- 4 From the **Conductor model** list, choose **Homogenized multiturn**.
- 5 Locate the **Homogenized Conductor** section. In the σ text field, type sigma_coil.
- 6 Locate the **Coil** section. In the I_{coil} text field, type 0.1.
- 7 Locate the **Homogenized Conductor** section. In the N text field, type N.
- 8 From the **Coil wire cross-section area** list, choose **From diameter**.
- 9 In the d text field, type d_coil.

In the I_{coil} text field, change the default value to 0.1 [A].


MESH I

The steepest field gradients, and consequently the most important challenges to the convergence of this model, are expected to occur in the vicinity of the fillets. You can increase the accuracy and help the solver by using a high resolution of narrow regions.


Free Triangular I

In the **Mesh** toolbar, click  **Free Triangular**.

Size

- 1 In the **Model Builder** window, click **Size**.
- 2 In the **Settings** window for **Size**, click to expand the **Element Size Parameters** section.
- 3 In the **Resolution of narrow regions** text field, type 4.
- 4 Click  **Build All**.


STUDY I

In the **Study** toolbar, click  **Compute**.

RESULTS

Magnetic Flux Density (mf)

The default plot shows the resulting magnetic flux density distribution from the applied 0.1 A current.

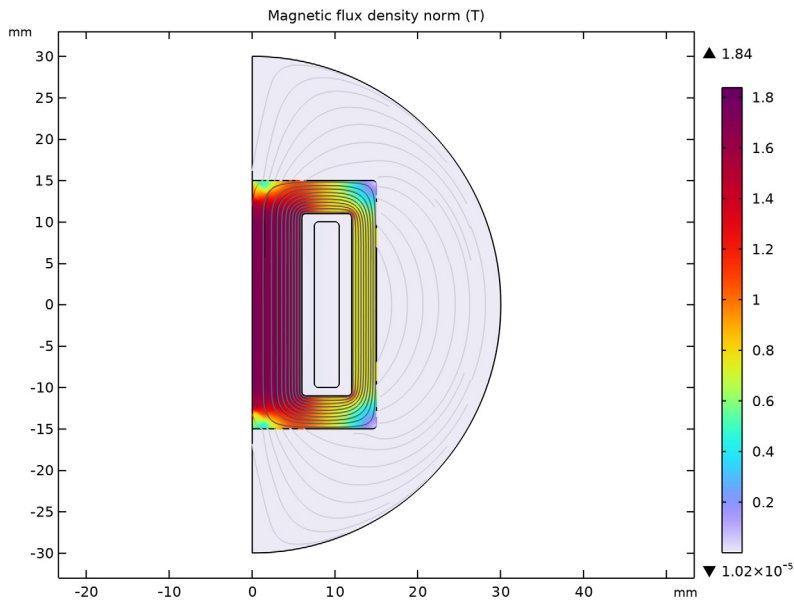

COMPONENT I (COMPI)

It is now time to add the circuit. Although you are eventually looking for transient results, the first solution step will use the stationary solver to ramp up the voltage from the voltage

generator. You will therefore select a stationary study in the Model Wizard. First, prepare for the import by making the coil circuit-driven.



MAGNETIC FIELDS (MF)

To be able to keep the first version of the application fully intact, create a new **Coil** node for the circuit version of the application.

Domain Coil 2

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Magnetic Fields (mf)** right-click **Domain Coil 1** and choose **Duplicate**.
- 2 In the **Settings** window for **Domain Coil**, locate the **Coil** section.
- 3 From the **Coil excitation** list, choose **Circuit (current)**.
- 4 In the **Coil name** text field, type 1.
- 5 Click **Add Electrical Circuit Connection**.
- 6 In the **Add Electrical Circuit Connection** dialog, click **OK**.

ADD STUDY

- 1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies > Stationary**.
- 4 Click the **Add Study** button in the window toolbar.
- 5 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.

ELECTRICAL CIRCUIT (CIR)

Voltage Source VIN (VIN)

- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Electrical Circuit (cir)** and choose **Import SPICE Netlist**.
- 2 Browse to the model's Application Libraries folder and double-click the file `amplifier.cir`.

The SPICE netlist is imported in the Circuit physics. In order to couple the amplifier with the inductor, an **External I vs. U** feature must be connected between nodes 4 and 5.

External I vs. U I (IvsUI)

- 1 In the **Model Builder** window, click **External I vs. U I (IvsUI)**.
- 2 In the **Settings** window for **External I vs. U**, locate the **Node Connections** section.

3 In the table, enter the following settings:

Label	Node names
p	4
n	5

Now prepare for the ramping of the voltage generator by changing the 15 V used in the voltage supply VCC to a parameter that the solver can sweep.

Voltage Source VCC (VCC)

- 1 In the **Model Builder** window, click **Voltage Source VCC (VCC)**.
- 2 In the **Settings** window for **Voltage Source**, locate the **Device Parameters** section.
- 3 In the v_{src} text field, type V_{app1} .

STUDY 1

Disable the new **Coil** node and the **Electrical Circuits** interface for **Study 1**. Conversely, you will disable the original node for the steps of **Study 2** shortly.


Step 1: Stationary

- 1 In the **Model Builder** window, under **Study 1** click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, locate the **Physics and Variables Selection** section.
- 3 Select the **Modify model configuration for study step** checkbox.
- 4 In the tree, select **Component 1 (comp1) > Magnetic Fields (mf) > Domain Coil 2**.
- 5 Right-click and choose **Disable**.
- 6 In the tree, select **Component 1 (comp1) > Electrical Circuit (cir)**.
- 7 Right-click and choose **Disable in Model**.

The new study already contains a node for the initial stationary solution.

STUDY 2

Step 2: Time Dependent

- 1 In the **Study** toolbar, click  **Time Dependent**.

To get accurate results, you need to tighten the tolerances.

- 2 In the **Settings** window for **Time Dependent**, locate the **Study Settings** section.
- 3 In the **Output times** text field, type range (0, 5e-6, 5e-4).
- 4 From the **Tolerance** list, choose **User controlled**.

- 5 In the **Relative tolerance** text field, type $1e-4$.
For the steps in this study, disable the original **Coil** node.
- 6 Locate the **Physics and Variables Selection** section. Select the **Modify model configuration for study step** checkbox.
- 7 In the tree, select **Component 1 (comp1) > Magnetic Fields (mf) > Domain Coil 1**.
- 8 Right-click and choose **Disable**.

Step 1: Stationary

- 1 In the **Model Builder** window, click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, click to expand the **Study Extensions** section.
- 3 Select the **Auxiliary sweep** checkbox.
- 4 Click **+ Add**.
- 5 In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
Vappl (Supply voltage)	range (1, 15)	V

Using continuation rather than a parametric sweep lets you begin with a parametric solution and then use the result for the final parameter as the initial value for the time-dependent solver. In contrast, adding a parametric sweep would mean performing a transient solution for each parameter value.

- 6 Locate the **Physics and Variables Selection** section. Select the **Modify model configuration for study step** checkbox.
- 7 In the tree, select **Component 1 (comp1) > Magnetic Fields (mf) > Domain Coil 1**.
- 8 Right-click and choose **Disable**.

Solution 2 (sol2)


In the **Study** toolbar, click  **Show Default Solver**.

Step 1: Stationary

- 1 In the **Model Builder** window, under **Study 2** click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, locate the **Study Settings** section.
- 3 From the **Tolerance** list, choose **User controlled**.
- 4 In the **Relative tolerance** text field, type $1e-6$.

Solution 2 (sol2)

This model requires a somewhat tighter tolerance in the stationary solver than the default on account of the strong magnetic nonlinearity in the core material. A relative tolerance of 1×10^{-6} gives a very well-converged result, which is important for maintaining stability in the final time-dependent solver step.

- 1 In the **Model Builder** window, expand the **Solution 2 (sol2)** node, then click **Time-Dependent Solver 1**.
- 2 In the **Settings** window for **Time-Dependent Solver**, click to expand the **Absolute Tolerance** section.
- 3 From the **Tolerance method** list, choose **Manual**.
- 4 In the **Absolute tolerance** text field, type $1e-6$.
- 5 In the **Study** toolbar, click  **Compute**.


RESULTS

Magnetic Flux Density (mf) 1

The new default plot shows the flux density distribution at $t = 5 \times 10^{-4}$ s.

Follow the instructions below to plot the input and output signals as well as the inductor voltage versus time.

ID Plot Group 5

- 1 In the **Results** toolbar, click  **ID Plot Group**.
- 2 In the **Settings** window for **ID Plot Group**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 2/Solution 2 (sol2)**.
- 4 From the **Time selection** list, choose **From list**.
- 5 In the **Time** list, click and Shift-click to select all times between $4e-4$ and $5e-4$.
- 6 Locate the **Plot Settings** section.
- 7 Select the **x-axis label** checkbox. In the associated text field, type **Time (s)**.
- 8 Select the **y-axis label** checkbox. In the associated text field, type **Voltage (V)**.

Global 1

- 1 Right-click **ID Plot Group 5** and choose **Global**.
- 2 In the **Settings** window for **Global**, locate the **y-Axis Data** section.

3 In the table, enter the following settings:

Expression	Unit	Description
cir.VIN.v	V	Voltage across device VIN
cir.IvsU1.v	V	Voltage across device IvsU1
cir.RL.v	V	Voltage across device RL

4 Click to expand the **Coloring and Style** section. Find the **Line markers** subsection. From the **Marker** list, choose **Cycle**.

5 From the **Positioning** list, choose **Interpolated**.

Voltages

1 In the **Model Builder** window, under **Results** click **ID Plot Group 5**.

2 In the **Settings** window for **ID Plot Group**, type Voltages in the **Label** text field.

The plot should now look like that in [Figure 3](#).