



Model created in COMSOL Multiphysics 6.4

# Flow Through a Pipe Elbow

## Introduction

---

In an engineering context, pipes and fittings are not normally the subject for turbulence modeling. There is a vast amount of tabulated data and correlations that can be used in simplified approaches such as those used in the Pipe Flow Module. But now more and more detailed studies are required, for example, to generate additional correlation data or to understand phenomena caused by the secondary flow pattern. One such example is found in [Ref. 1](#), which models the flow in a  $90^\circ$  pipe elbow in order to achieve a preliminary, before making simulations with particles, understanding of corrosion and erosion processes.

This example simulates the same pipe flow as that studied in [Ref. 1](#) using the  $k-\omega$  turbulence model. The result is compared to experimental correlations.

## Model Definition

---

The model geometry is shown in [Figure 1](#). It includes a  $90^\circ$  pipe elbow of constant diameter,  $D$ , equal to 35.5 mm, and coil radius,  $R_c$ , equal to 50 mm. The straight inlet and outlet pipe sections are 70 mm and 350 mm long, respectively. Only half the pipe is modeled because the  $xy$ -plane is a symmetry plane.

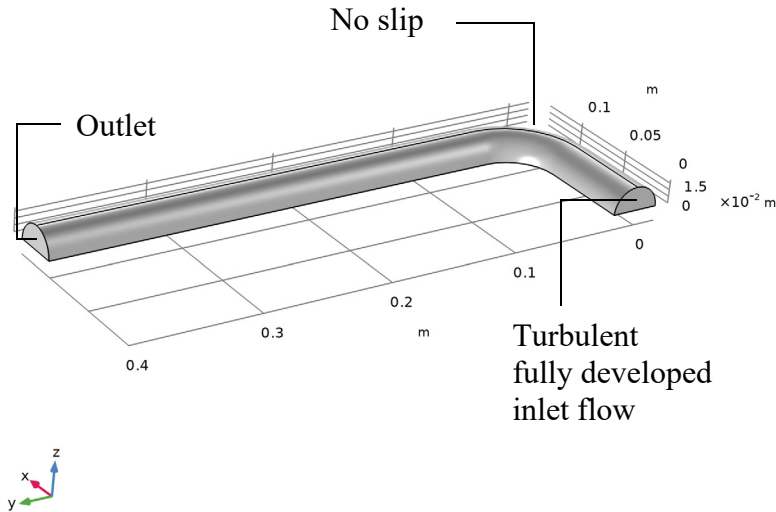


Figure 1: Pipe elbow geometry.

The flow conditions are typical to those that can be found in the piping system of a nuclear power plant. The working fluid is water at temperature  $T=90^{\circ}\text{C}$ , and the absolute outlet pressure is 20 bar. At this state, the density,  $\rho$ , is  $965.35\text{ kg/m}^3$  and the dynamic viscosity,  $\mu$ , is  $3.145 \times 10^{-4}\text{ Pa}\cdot\text{s}$ . The water is approximated as an incompressible fluid.

The flow at the inlet is a fully developed turbulent flow with an average inlet velocity of 5 m/s.

### *Modeling Considerations*

---

In [Ref. 1](#) the separation bubble after the bend is predicted and analyzed. However, it is known that the  $k\text{-}\epsilon$  model has a tendency to perform poorly for flows involving strong pressure gradients, separation, and strong streamline curvature ([Ref. 2](#)). Therefore, the  $k\text{-}\omega$  model is the preferred turbulence model, compared to the  $k\text{-}\epsilon$  model.


The mesh is constructed to approximately match that used [Ref. 1](#).

### *Results and Discussion*

---

The resulting streamline pattern is shown in [Figure 2](#). There is a separation zone after the bend which is consistent with the results in [Ref. 1](#). Further downstream, two counter-rotating vortices form, caused by the centripetal force ([Ref. 3](#)). Observe that only one of

the vortices is visible in [Figure 2](#) since the other is located on the other side of the symmetry plane.

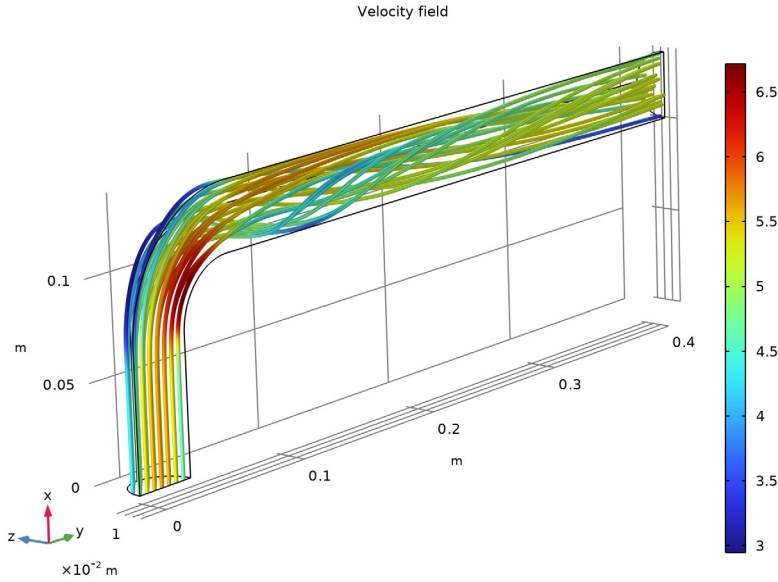

*Figure 2: Streamlines colored by the velocity magnitude.*

A quantitative assessment of the results is given by comparing the so-called diametrical pressure coefficient,  $c_k$ , to an engineering correlation as is done in [Ref. 1](#). The definition of  $c_k$  is

$$c_k = \frac{p_o - p_i}{\frac{1}{2}\rho U_{\text{avg}}^2} \quad (1)$$

where  $p_o$  and  $p_i$  are the pressures where the outer and inner radii of the bend intersect the symmetry plane respectively. The diametrical pressure coefficient is commonly measured at half the bend angle, in this case at  $45^\circ$ . [Figure 3](#) is a surface plot of the pressure in a plane at  $45^\circ$ .  $p_o$  and  $p_i$  are the maximum and minimum values of the pressure in [Figure 3](#)

respectively which gives  $p_o - p_i \approx 1.96 \times 10^4$  Pa. Since  $U_{\text{avg}}$  is 5 m/s, Equation 1 evaluates to 1.62.

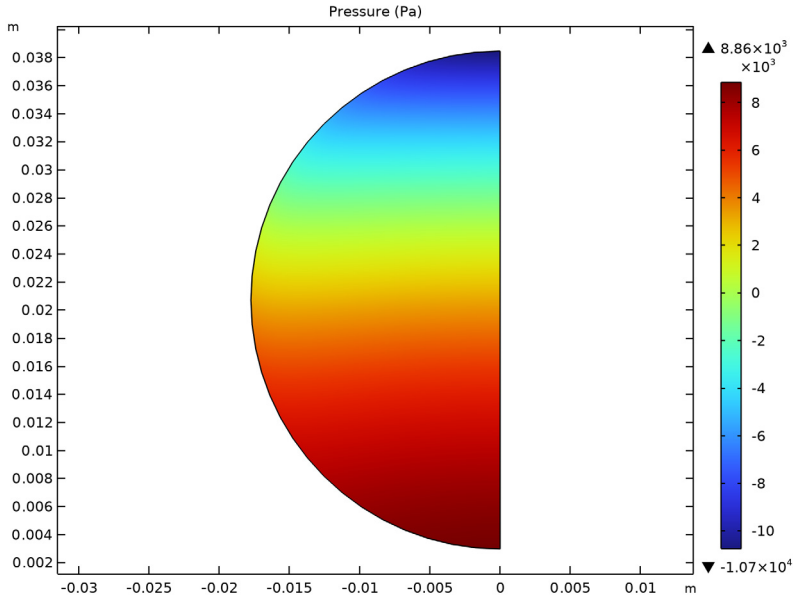


Figure 3: Pressure in a plane at  $45^\circ$ .

As indicated in Ref. 1, Equation 1 can be compared to the following correlation based on mild curvatures with  $R_c/D > 2$ :

$$c_k = \frac{2D}{R_c} \quad (2)$$

For the pipe model studied here Equation 2 evaluates to 1.42. The agreement with the value 1.62 computed above is reasonably good considering that our bend is rather sharp with  $R_c/D$  equal to 1.41.

A more common engineering measure is the friction factor,  $f$ , which is related to the head loss,  $h_L$ , via

$$h_L = 2f \frac{L}{D} \frac{U_{\text{avg}}^2}{g} \quad (3)$$

where  $L$  is the length of the pipe segment and  $g$  is the gravity constant. In the case of a bend,  $L$  is the distance along the centerline. The head loss is related to the pressure drop over the pipe segment,  $\Delta p$ , via

$$h_L = \frac{\Delta p}{g\rho} \quad (4)$$

The friction factor can hence be calculated as:

$$f = \frac{\Delta p}{2\rho U_{\text{avg}}^2} \frac{D}{L} \quad (5)$$

Equation 5 cannot be evaluated all the way from the start to the end of the bend since there is an exit effect (see Ref. 4 for more details). It is instead evaluated from the start of the bend,  $0^\circ$ , to half way through the bend, that is  $45^\circ$ . This gives  $L = \pi R_c/4$  and  $\Delta p$  evaluates to approximately 405 Pa, which results in a friction factor:

$$f = \frac{400}{\rho U_{\text{avg}}^2} \frac{2D}{\pi R_c} = \frac{400 \cdot 1.42}{\rho \cdot 25} \frac{1}{\pi} = 7.58 \cdot 10^{-3}$$

Ref. 4 gives the following correlation for the friction factor through a curved pipe

$$f = \frac{0.079}{\text{Re}^{0.25}} + \frac{0.0073}{\sqrt{D_c/D}} \quad (6)$$

where  $D_c = 2 \cdot R_c$  is the coil diameter. In this case, Equation 6 gives  $f_f = 7.26 \times 10^{-3}$ . The difference of 4% is well within the range of the accuracy of Equation 6, which is 15%.

## References

1. G.F. Homicz, "Computational Fluid Dynamic Simulations of Pipe Elbow Flow," *SAND REPORT*, SAND2004-3467, Sandia National Laboratories, 2004.
2. F. Menter, "Zonal Two Equation  $k$ - $\omega$  Turbulence Models for Aerodynamic Flows," *AIAA Paper #93-2906, 24th Fluid Dynamics Conference*, July 1993.
3. M.J. Pattison, "Secondary Flows," *Thermopedia*, DOI: 10.1615/AtoZ.s.secondary\_flows, [www.thermopedia.com/content/1113/](http://www.thermopedia.com/content/1113/)
4. R.H. Perry and D.W. Green, *Perry's Chemical Engineers' Handbook*, 7th ed., McGraw Hill, 1997.

---

**Application Library path:** CFD\_Module/Verification\_Examples/pipe\_elbow


---

### *Modeling Instructions*




---

From the **File** menu, choose **New**.

#### **NEW**

In the **New** window, click  **Model Wizard**.

#### **MODEL WIZARD**

- 1 In the **Model Wizard** window, click  **3D**.
- 2 In the **Select Physics** tree, select **Fluid Flow > Single-Phase Flow > Turbulent Flow > Turbulent Flow, k- $\omega$**  (spf).
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies > Stationary**.
- 6 Click  **Done**.

#### **GLOBAL DEFINITIONS**



##### *Parameters I*

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters I**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 In the table, enter the following settings:


<b>Name</b>	<b>Expression</b>	<b>Value</b>	<b>Description</b>
D	35.5 [mm]	0.0355 m	Pipe diameter
Lin	70 [mm]	0.07 m	Inlet length
Lout	350 [mm]	0.35 m	Outlet length
Rc	50 [mm]	0.05 m	Coil radius
rhof	965.35 [kg/m <sup>3</sup> ]	965.35 kg/m <sup>3</sup>	Density
muf	3.145e-4 [Pa*s]	3.145E-4 Pa*s	Dynamic viscosity
Uavg	5 [m/s]	5 m/s	Average velocity

## GEOMETRY I


*Work Plane 1 (wp1)*

- 1 In the **Geometry** toolbar, click  **Work Plane**.
- 2 In the **Settings** window for **Work Plane**, locate the **Plane Definition** section.
- 3 From the **Plane** list, choose **yz-plane**.
- 4 In the **x-coordinate** text field, type  $L/2$ .
- 5 Click  **Go to Plane Geometry**.




*Work Plane 1 (wp1) > Circle 1 (c1)*

- 1 In the **Work Plane** toolbar, click  **Circle**.
- 2 In the **Settings** window for **Circle**, locate the **Size and Shape** section.
- 3 In the **Radius** text field, type  $D/2$ .


*Work Plane 1 (wp1) > Square 1 (sq1)*

- 1 In the **Work Plane** toolbar, click  **Square**.
- 2 In the **Settings** window for **Square**, locate the **Size** section.
- 3 In the **Side length** text field, type  $D$ .
- 4 Locate the **Position** section. In the **xw** text field, type  $-D/2$ .
- 5 In the **yw** text field, type  $-D$ .

*Work Plane 1 (wp1) > Difference 1 (dif1)*



- 1 In the **Work Plane** toolbar, click  **Booleans and Partitions** and choose **Difference**.
- 2 Click the  **Zoom Extents** button in the **Graphics** toolbar.
- 3 Select the object **c1** only.
- 4 In the **Model Builder** window, click **Difference 1 (dif1)**.
- 5 In the **Settings** window for **Difference**, locate the **Difference** section.
- 6 Click to select the  **Activate Selection** toggle button for **Objects to subtract**.
- 7 Select the object **sq1** only.

*Work Plane 1 (wp1)*


- 1 In the **Model Builder** window, under **Component 1 (comp1) > Geometry 1** click **Work Plane 1 (wp1)**.
- 2 In the **Settings** window for **Work Plane**, click  **Build Selected**.

*Revolve 1 (rev1)*

- 1 In the **Geometry** toolbar, click  **Revolve**.

- 2 In the **Settings** window for **Revolve**, locate the **Revolution Angles** section.
- 3 Click the **Angles** button.
- 4 In the **End angle** text field, type 90.
- 5 Select the object **wp1** only.
- 6 Locate the **General** section. From the **Input object handling** list, choose **Keep**.
- 7 Locate the **Revolution Axis** section. Find the **Point on the revolution axis** subsection. In the **xw** text field, type Rc.
- 8 In the **yw** text field, type Lin.
- 9 Click  **Build Selected**.
- 10 Click the  **Zoom Extents** button in the **Graphics** toolbar.

*Extrude 1 (ext1)*

- 1 In the **Geometry** toolbar, click  **Extrude**.
- 2 In the **Settings** window for **Extrude**, locate the **Distances** section.
- 3 In the table, enter the following settings:

<b>Distances (m)</b>
Lin

- 4 Select the **Reverse direction** checkbox.

*Work Plane 1 (wp1)*

Right-click **Work Plane 1 (wp1)** and choose **Copy**.

*Work Plane 2 (wp2)*

- 1 In the **Model Builder** window, right-click **Geometry 1** and choose **Paste Work Plane**.
- 2 In the **Settings** window for **Work Plane**, locate the **Plane Definition** section.
- 3 From the **Plane** list, choose **xz-plane**.
- 4 In the **y-coordinate** text field, type Rc.
- 5 In the **Model Builder** window, expand the **Work Plane 2 (wp2)** node.

*Work Plane 2 (wp2) > Circle 1 (c1)*

- 1 In the **Model Builder** window, expand the **Component 1 (comp1) > Geometry 1 > Work Plane 2 (wp2) > Plane Geometry** node, then click **Circle 1 (c1)**.
- 2 In the **Settings** window for **Circle**, locate the **Position** section.
- 3 In the **xw** text field, type Lin+Rc.


*Work Plane 2 (wp2) > Square 1 (sq1)*

- 1 In the **Model Builder** window, click **Square 1 (sq1)**.
- 2 In the **Settings** window for **Square**, locate the **Position** section.
- 3 In the **xw** text field, type  $-D/2+Lin+Rc$ .




*Extrude 2 (ext2)*

- 1 In the **Model Builder** window, right-click **Geometry 1** and choose **Extrude**.
- 2 In the **Settings** window for **Extrude**, locate the **Distances** section.
- 3 Select the **Reverse direction** checkbox.
- 4 In the table, enter the following settings:

Distances (m)
Lout

- 5 In the **Geometry** toolbar, click  **Build All**.

*Mesh Control Faces 1 (mcf1)*

- 1 In the **Geometry** toolbar, click  **Virtual Operations** and choose **Mesh Control Faces**.
- 2 In the **Settings** window for **Mesh Control Faces**, locate the **Input** section.
- 3 Click the  **Paste Selection** button for **Faces to include**.
- 4 In the **Paste Selection** dialog, type 5 11 in the **Selection** text field.
- 5 Click **OK**.
- 6 In the **Geometry** toolbar, click  **Build All**.

## MATERIALS


*Water*

- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Materials** and choose **Blank Material**.
- 2 In the **Settings** window for **Material**, type Water in the **Label** text field.
- 3 Locate the **Material Contents** section. In the table, enter the following settings:


Property	Variable	Value	Unit	Property group
Density	rho	rhof	kg/m <sup>3</sup>	Basic
Dynamic viscosity	mu	muf	Pa·s	Basic

## TURBULENT FLOW, K- $\omega$ (SPF)

### *Inlet 1*

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Inlet**.
- 2 Select Boundary 1 only.
- 3 In the **Settings** window for **Inlet**, locate the **Boundary Condition** section.
- 4 From the list, choose **Fully developed flow**.
- 5 Locate the **Fully Developed Flow** section. In the  $U_{av}$  text field, type  $U_{avg}$ .

### *Outlet 1*


- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Outlet**.
- 2 In the **Settings** window for **Outlet**, locate the **Boundary Condition** section.
- 3 From the list, choose **Fully developed flow**.
- 4 Select Boundary 5 only.

### *Symmetry 1*

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Symmetry**.
- 2 Select Boundary 3 only.

## MESH 1

### *Boundary Layers 1*

- 1 In the **Mesh** toolbar, click  **Boundary Layers**.
- 2 In the **Settings** window for **Boundary Layers**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundary 1 only.

### *Boundary Layer Properties*


- 1 In the **Model Builder** window, click **Boundary Layer Properties**.
- 2 Select Edges 1 and 4 only.
- 3 In the **Settings** window for **Boundary Layer Properties**, locate the **Layers** section.
- 4 In the **Number of layers** text field, type 6.
- 5 In the **Thickness adjustment factor** text field, type 2.

### *Size*


- 1 In the **Model Builder** window, under **Component 1 (comp1) > Mesh 1** click **Size**.

- 2 In the **Settings** window for **Size**, locate the **Element Size** section.
- 3 Click the **Custom** button.
- 4 Locate the **Element Size Parameters** section. In the **Maximum element size** text field, type D/20.
- 5 In the **Minimum element size** text field, type  $8.03E-5$ .


#### *Swept 1*

- 1 In the **Mesh** toolbar, click  **Swept**.
- 2 In the **Settings** window for **Swept**, click to expand the **Control Entities** section.
- 3 From the **Smooth across removed control entities** list, choose **Off**.


#### *Distribution 1*

- 1 Right-click **Swept 1** and choose **Distribution**.
- 2 In the **Settings** window for **Distribution**, locate the **Domain Selection** section.
- 3 Click  **Clear Selection**.
- 4 Select Domain 1 only.
- 5 Locate the **Distribution** section. In the **Number of elements** text field, type 40.



#### *Distribution 2*

- 1 In the **Model Builder** window, right-click **Swept 1** and choose **Distribution**.
- 2 In the **Settings** window for **Distribution**, locate the **Domain Selection** section.
- 3 Click  **Clear Selection**.
- 4 Select Domain 2 only.
- 5 Locate the **Distribution** section. In the **Number of elements** text field, type 50.


#### *Distribution 3*

- 1 Right-click **Swept 1** and choose **Distribution**.
- 2 In the **Settings** window for **Distribution**, locate the **Domain Selection** section.
- 3 Click  **Clear Selection**.
- 4 Select Domain 3 only.
- 5 Locate the **Distribution** section. From the **Distribution type** list, choose **Predefined**.
- 6 In the **Number of elements** text field, type 70.
- 7 In the **Element ratio** text field, type 10.
- 8 From the **Growth rate** list, choose **Exponential**.

### *Free Triangular 1*

- 1 In the **Mesh** toolbar, click  **More Generators** and choose **Free Triangular**.
- 2 Drag and drop below **Size**.
- 3 Select Boundary 1 only.
- 4 In the **Settings** window for **Free Triangular**, click  **Build All**.

### **STUDY 1**

In the **Study** toolbar, click  **Compute**.

### **RESULTS**

Deactivate the automatic update of plots when working with large 3D models.


- 1 In the **Model Builder** window, click **Results**.
- 2 In the **Settings** window for **Results**, locate the **Update of Results** section.
- 3 Select the **Only plot when requested** checkbox.

Check that the **Wall Resolution** is sufficient.

### *Wall Resolution (spf)*

- 1 In the **Model Builder** window, under **Results** click **Wall Resolution (spf)**.
- 2 In the **Settings** window for **3D Plot Group**, locate the **Plot Settings** section.
- 3 From the **View** list, choose **New view**.

- 4 In the **Wall Resolution (spf)** toolbar, click  **Plot**.

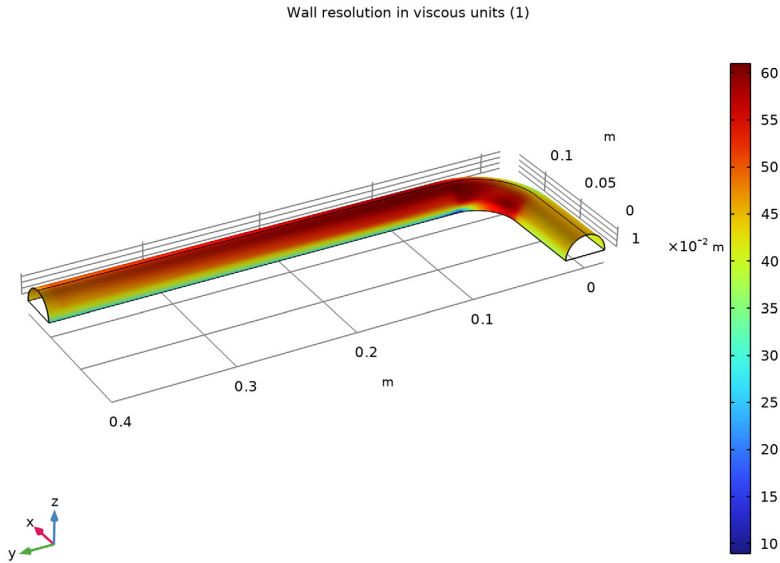


The wall lift-off is well below 100 viscous units everywhere and the flow can therefore be regarded as well-resolved at the walls.

Proceed to reproduce [Figure 2](#).

### Surface


- 1 In the **Model Builder** window, expand the **Results > Pressure (spf)** node.
- 2 Right-click **Surface** and choose **Disable**.

### Streamline 1


- 1 In the **Model Builder** window, right-click **Pressure (spf)** and choose **Streamline**.
- 2 In the **Settings** window for **Streamline**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Solution 1 (sol1)**.
- 4 Locate the **Streamline Positioning** section. From the **Positioning** list, choose **On selected entities**.
- 5 Locate the **Selection** section. Click  **Paste Selection**.
- 6 In the **Paste Selection** dialog, type 1 in the **Selection** text field.
- 7 Click **OK**.
- 8 In the **Settings** window for **Streamline**, locate the **Coloring and Style** section.

- 9 Find the **Line style** subsection. From the **Type** list, choose **Tube**.
- 10 Select the **Radius scale factor** checkbox. In the associated text field, type 0.001.

#### *Color Expression 1*


- 1 Right-click **Streamline 1** and choose **Color Expression**.
- 2 In the **Pressure (spf)** toolbar, click  **Plot**.

#### *Velocity Streamlines*

- 1 In the **Model Builder** window, under **Results** click **Pressure (spf)**.
- 2 In the **Settings** window for **3D Plot Group**, type Velocity Streamlines in the **Label** text field.
- 3 Locate the **Plot Settings** section. From the **View** list, choose **New view**.
- 4 In the **Velocity Streamlines** toolbar, click  **Plot**.

Execute the following steps to reproduce [Figure 3](#).


#### *Cut Plane 1*

- 1 In the **Results** toolbar, click  **Cut Plane**.
- 2 In the **Settings** window for **Cut Plane**, locate the **Plane Data** section.
- 3 From the **Plane type** list, choose **General**.
- 4 From the **Plane entry method** list, choose **Point and normal vector**.
- 5 Find the **Point** subsection. In the **x** text field, type Lin.
- 6 Find the **Normal vector** subsection. In the **x** text field, type 1.
- 7 In the **z** text field, type 0.

#### *Cut Plane 2*

- 1 Right-click **Cut Plane 1** and choose **Duplicate**.
- 2 In the **Settings** window for **Cut Plane**, locate the **Plane Data** section.
- 3 Find the **Point** subsection. In the **x** text field, type Lin+Rc.
- 4 Find the **Normal vector** subsection. In the **y** text field, type 1.

#### *Average 1*


- 1 In the **Results** toolbar, click  **More Datasets** and choose **Evaluation > Average**.
- 2 In the **Settings** window for **Average**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Cut Plane 1**.

#### *Average 2*


- 1 In the **Results** toolbar, click  **More Datasets** and choose **Evaluation > Average**.

- 2 In the **Settings** window for **Average**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Cut Plane 2**.

#### *Join 1*

- 1 In the **Results** toolbar, click  **More Datasets** and choose **Join**.
- 2 In the **Settings** window for **Join**, locate the **Data 1** section.
- 3 From the **Data** list, choose **Average 1**.
- 4 Locate the **Data 2** section. From the **Data** list, choose **Average 2**.

#### *Evaluation Group 1*

In the **Results** toolbar, click  **Evaluation Group**.


#### *Pressure Drop*

- 1 Right-click **Evaluation Group 1** and choose **Global Evaluation**.

The following steps provides the pressure loss  $\Delta p$  in [Equation 4](#).

- 2 In the **Settings** window for **Global Evaluation**, type Pressure Drop in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Join 1**.
- 4 Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
$p$	1	Pressure drop

- 5 In the **Evaluation Group 1** toolbar, click  **Evaluate**.

The pressure drop now is computed by subtracting the mean pressure evaluated at the cut plane just before the bend, from the mean pressure evaluated at the cut plane in the middle of the bend.

#### *Calculated Friction Factor*


- 1 In the **Model Builder** window, right-click **Evaluation Group 1** and choose **Global Evaluation**.
- 2 In the **Settings** window for **Global Evaluation**, type Calculated Friction Factor in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Join 1**.
- 4 Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
$(D / (0.25 * \pi * R_c)) * (p) / (2 * \rho_{\text{hof}} * U_{\text{avg}}^2)$	1	Friction factor


### *Correlation for the Friction Factor*

- 1 Right-click **Evaluation Group 1** and choose **Global Evaluation**.
- 2 In the **Settings** window for **Global Evaluation**, type Correlation for the Friction Factor in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Study 1/Solution 1 (sol1)**.
- 4 Locate the **Expressions** section. In the table, enter the following settings:



Expression	Unit	Description
$(0.079 / (\rho_{\text{hof}} * U_{\text{avg}} * D / \mu_{\text{f}})^{0.25}) + (0.0073 / \sqrt{2 * R_{\text{c}} / D})$	1	Correlation for the friction factor

- 5 In the **Evaluation Group 1** toolbar, click  **Evaluate**.

### *Cut-Plane Pressure Distribution*

- 1 In the **Results** toolbar, click  **2D Plot Group**.
- 2 In the **Settings** window for **2D Plot Group**, type Cut-Plane Pressure Distribution in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Cut Plane 2**.
- 4 Locate the **Color Legend** section. Select the **Show maximum and minimum values** checkbox.

### *Surface 1*

- 1 Right-click **Cut-Plane Pressure Distribution** and choose **Surface**.
- 2 In the **Settings** window for **Surface**, locate the **Expression** section.
- 3 In the **Expression** text field, type p.
- 4 In the **Cut-Plane Pressure Distribution** toolbar, click  **Plot**.
- 5 Click the  **Zoom Extents** button in the **Graphics** toolbar.