



Model created in COMSOL Multiphysics 6.4

Microresistor Beam

Introduction

This example illustrates the ability to couple thermal, electrical, and structural analyses in one model. This particular application moves a beam by passing a current through it; the current generates heat, and the temperature increase leads to displacement through thermal expansion. The model estimates how much current and increase in temperature are necessary to displace the beam.

Although the model involves a rather simple 3D geometry and straightforward physics, it provides a good example of multiphysics modeling.

Model Definition

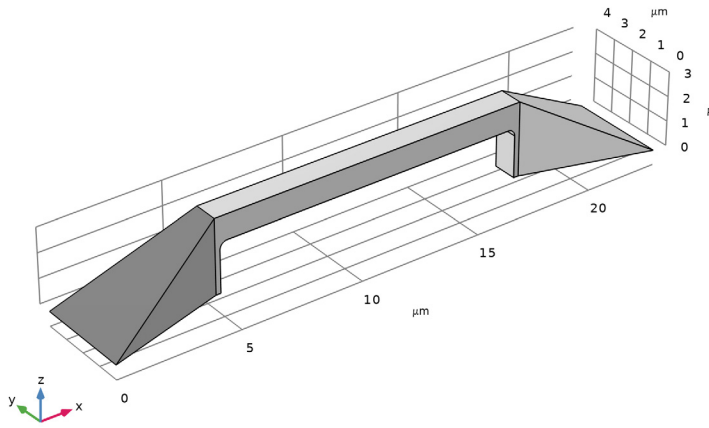


Figure 1: Microbeam geometry.

A copper microbeam has a length of $13\ \mu\text{m}$ with a height and width of $1\ \mu\text{m}$. Feet at both ends bond it rigidly to a substrate. An electric potential of $0.2\ \text{V}$ applied between the feet induces an electric current. Due to the material's resistivity, the current heats up the structure. Because the beam operates in the open, the generated heat dissipates into the air. The thermally induced stress loads the material and deforms the beam.

As a first approximation, you can assume that the electric conductivity is constant. However, a conductor's resistivity increases with temperature. In the case of copper, the

relationship between resistivity and temperature is approximately linear over a wide range of temperatures:

$$\rho = \rho_0(1 + \alpha(T - T_0)) \quad (1)$$

α is the temperature coefficient. You obtain the conductor's temperature dependency from the relationship that defines electric resistivity; conductivity is simply its reciprocal ($\sigma = 1/\rho$).

For the heat transfer equations, set the base boundaries facing the substrate to a constant temperature of 323 K. You model the convective air cooling in other boundaries using a heat flux boundary condition with a heat transfer coefficient, h , of 5 W/(m²·K) and an external temperature, T_{inf} , of 298 K. Standard constraints handle the bases' rigid connection to the substrate.

Results and Discussion

[Figure 2](#) shows the temperature field on the microbeam surface when solving the model using a temperature-dependent resistivity as in [Equation 1](#). Based on the color scale, the maximum temperature is about 710 K.

[Figure 3](#) shows the microbeam's deformation. The displacement for the temperature-dependent case is 48 nm compared to the maximum displacement for constant electric conductivity, which is 88 nm (the plot scales the deformation by a factor of around 20).

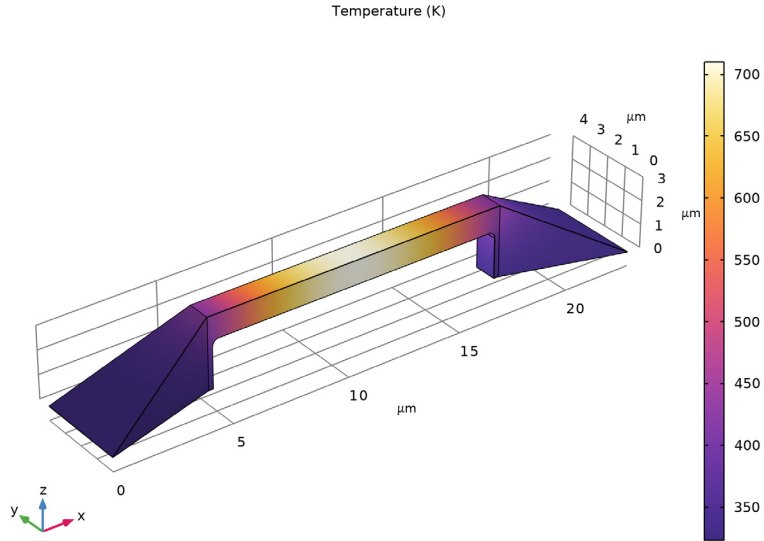


Figure 2: Surface temperature with temperature-dependent electric conductivity.

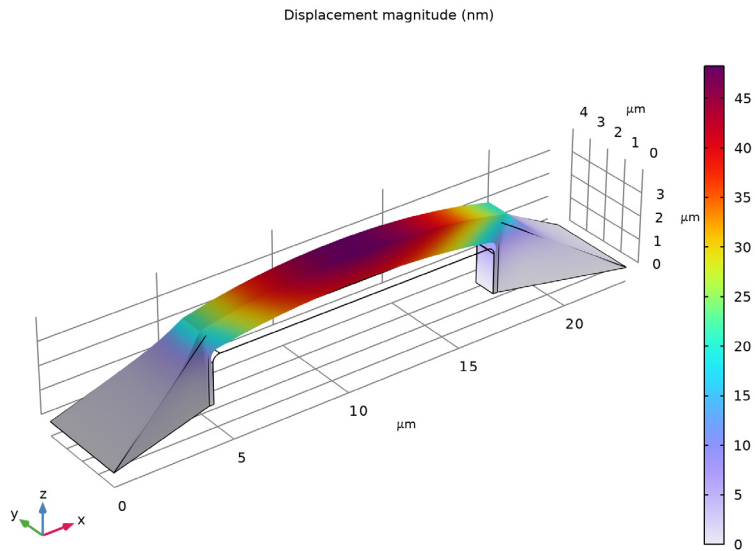


Figure 3: Microbeam deformation with temperature-dependent electric conductivity.

Notes About the COMSOL Implementation

In this example you create the 3D geometry by starting with two 2D work planes. The first one views the geometry from above, and the second does so from the side. You create cross sections on the work planes, which you then extrude into 3D. As the final step you create the resistor beam geometry as the intersection of the extruded objects. You can also skip the step-by-step instructions for the geometry creation and import the ready-made geometry directly from the Application Libraries.


By using the *Joule Heating and Thermal Expansion* predefined multiphysics interface you automatically add the equations for three physics including the necessary multiphysics couplings. In this case the physics equations describe the current and heat conduction and structural mechanics problems. The interface also provides suitable defaults for the solver.

Application Library path: MEMS_Module/Actuators/microresistor_beam




Modeling Instructions

From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.

MODEL WIZARD

- 1 In the **Model Wizard** window, click  **3D**.
- 2 In the **Select Physics** tree, select **Structural Mechanics** > **Thermal–Structure Interaction** > **Joule Heating and Thermal Expansion**.
- 3 Click **Add**.
- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies** > **Stationary**.
- 6 Click  **Done**.

GLOBAL DEFINITIONS

Parameters I

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters I**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.

3 In the table, enter the following settings:

Name	Expression	Value	Description
V0	0.2[V]	0.2 V	Applied voltage
T0	323[K]	323 K	Heat sink temperature
Text	298[K]	298 K	External temperature
k	5[W/(m ² *K)]	5 W/(m ² *K)	Heat transfer coefficient

GEOMETRY I

1 In the **Model Builder** window, under **Component 1 (comp1)** click **Geometry I**.

2 In the **Settings** window for **Geometry**, locate the **Units** section.

3 From the **Length unit** list, choose **µm**.

Work Plane 1 (wp1)

1 In the **Geometry** toolbar, click  **Work Plane**.

2 In the **Settings** window for **Work Plane**, click  **Go to Plane Geometry**.

Work Plane 1 (wp1) > Plane Geometry

In the **Model Builder** window, click **Plane Geometry**.

Work Plane 1 (wp1) > Polygon 1 (pol1)

1 In the **Work Plane** toolbar, click  **Polygon**.

2 In the **Settings** window for **Polygon**, locate the **Coordinates** section.

3 From the **Data source** list, choose **Vectors**.

4 In the **xw** text field, type 0 5 5 18 18 23 23 23 23 18 18 5 5 0 0 0.

5 In the **yw** text field, type 0 1.5 1.5 1.5 1.5 0 0 4 4 2.5 2.5 2.5 2.5 4 4 0.

Extrude 1 (ext1)


1 In the **Model Builder** window, under **Component 1 (comp1) > Geometry I** right-click **Work Plane 1 (wp1)** and choose **Extrude**.


2 In the **Settings** window for **Extrude**, locate the **Distances** section.

3 In the table, enter the following settings:


Distances (µm)
3

4 Click  **Build All Objects**.

5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

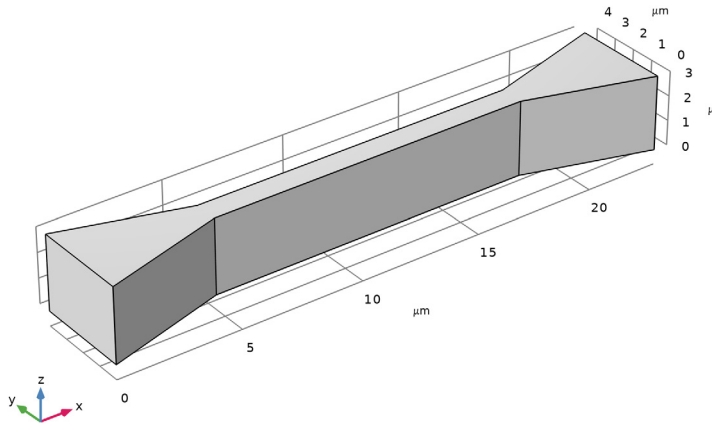


Work Plane 2 (wp2)

- 1 In the **Geometry** toolbar, click  **Work Plane**.
- 2 In the **Settings** window for **Work Plane**, locate the **Plane Definition** section.
- 3 From the **Plane type** list, choose **Face parallel**.


4 On the object **ext1**, select Boundary 6 only.

It might be easier to select the correct boundary by using the **Selection List** window. To open this window, in the **Home** toolbar click **Windows** and choose **Selection List**. (If you are running the cross-platform desktop, you find **Windows** in the main menu.)

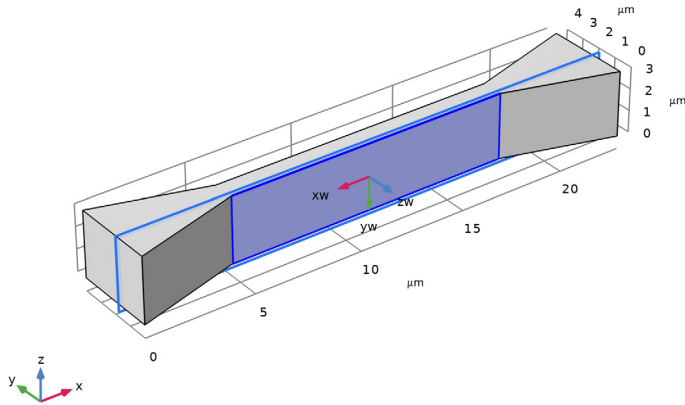

5 In the **Offset in normal direction** text field, type -1.5.

6 Select the **Reverse normal direction** checkbox.

7 Click  **Go to Plane Geometry**.

Work Plane 2 (wp2) > Plane Geometry

1 In the **Work Plane** toolbar, click  **Sketch** to toggle off sketch mode.

2 In the **Model Builder** window, click **Plane Geometry**.

3 In the **Settings** window for **Plane Geometry**, locate the **Visualization** section.

4 Find the **In-plane visualization of 3D geometry** subsection. Clear the **Intersection (green)** checkbox.


5 Clear the **Coincident entities (blue)** checkbox.

Work Plane 2 (wp2) > Polygon 1 (pol1)



1 In the **Work Plane** toolbar, click  **Polygon**.


2 In the **Settings** window for **Polygon**, locate the **Coordinates** section.

3 From the **Data source** list, choose **Vectors**.

- 4 In the **xw** text field, type -11.5 -6.3 -6.3 -6.3 -6.3 6.3 6.3 6.3 6.3 11.5 11.5 6.5 6.5 -6.5 -6.5 -11.5.
- 5 In the **yw** text field, type -1.5 -1.5 -1.5 0.5 0.5 0.5 0.5 -1.5 -1.5 -1.5 -1.5 1.5 1.5 1.5 1.5 -1.5.
- 6 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Work Plane 2 (wp2) > Fillet 1 (fil1)

- 1 In the **Work Plane** toolbar, click  **Fillet**.
- 2 On the object **poll**, select Points 4 and 6 only.
- 3 In the **Settings** window for **Fillet**, locate the **Radius** section.
- 4 In the **Radius** text field, type 0.3.
- 5 In the **Work Plane** toolbar, click  **Build All**.

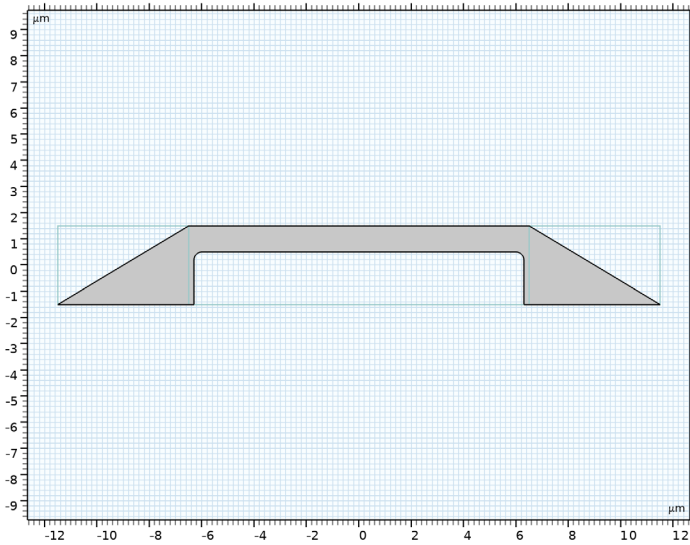


Extrude 2 (ext2)



- 1 In the **Model Builder** window, under **Component 1 (comp1) > Geometry 1** right-click **Work Plane 2 (wp2)** and choose **Extrude**.
- 2 In the **Settings** window for **Extrude**, locate the **Distances** section.
- 3 In the table, enter the following settings:

Distances (μm)
4

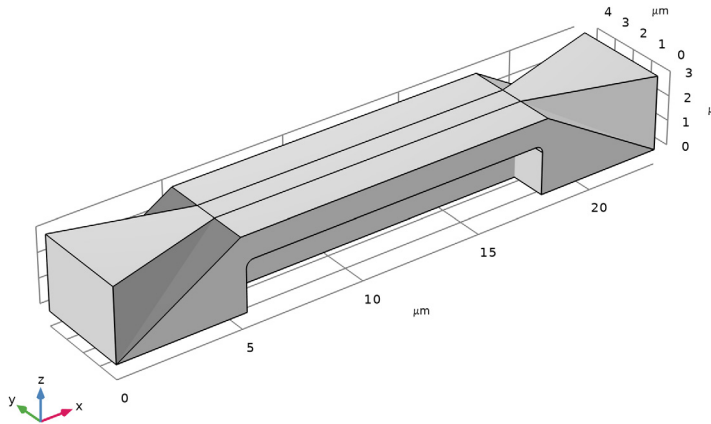
- 4 Click  **Build All Objects**.



Intersection 1 (int1)

- 1 In the **Geometry** toolbar, click  **Booleans and Partitions** and choose **Intersection**.
- 2 Click in the **Graphics** window and then press Ctrl+A to select both objects.
- 3 In the **Settings** window for **Intersection**, click  **Build All Objects**.

Form Union (fin)


- 1 In the **Model Builder** window, click **Form Union (fin)**.
- 2 In the **Settings** window for **Form Union/Assembly**, click  **Build Selected**.

The model geometry is now complete.

DEFINITIONS

Add a set of selections that you can use later when applying boundary conditions.

connector1


- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type connector1 in the **Label** text field.
- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundary 1 only.

connector2



- 1 In the **Definitions** toolbar, click  **Explicit**.

- 2 In the **Settings** window for **Explicit**, type connector2 in the **Label** text field.
- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundary 13 only.

connectors

- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type connectors in the **Label** text field.
- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundaries 1 and 13 only.

ADD MATERIAL


- 1 In the **Materials** toolbar, click  **Add Material** to open the **Add Material** window.
- 2 Go to the **Add Material** window.
- 3 In the tree, select **MEMS > Metals > Cu - Copper**.
- 4 Click the **Add to Component** button in the window toolbar.
- 5 In the **Materials** toolbar, click  **Add Material** to close the **Add Material** window.

MATERIALS

Cu - Copper (mat1)

- 1 In the **Settings** window for **Material**, locate the **Material Contents** section.
- 2 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Relative permittivity	epsilononr_iso ; epsilononrii = epsilononr_iso, epsilononrij = 0	1		Basic

- 3 Click to expand the **Material Properties** section. In the **Material properties** tree, select **Electromagnetic Models > Linearized Resistivity > Reference resistivity (rho0)**.
- 4 Click  **Add to Material**.

5 Locate the **Material Contents** section. In the table, enter the following settings:


Property	Variable	Value	Unit	Property group
Reference resistivity	rho0	1.72e-8 [ohm*m]	$\Omega\cdot\text{m}$	Linearized resistivity
Resistivity temperature coefficient	alpha	0.0039 [1/K]	1/K	Linearized resistivity
Reference temperature	Tref	293 [K]	K	Linearized resistivity

ELECTRIC CURRENTS (EC)


Current Conservation in Solids I

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Electric Currents (ec)** click **Current Conservation in Solids I**.
- 2 In the **Settings** window for **Current Conservation in Solids**, locate the **Constitutive Relation Jc-E** section.
- 3 From the **Conduction model** list, choose **Linearized resistivity**.
Before solving the bidirectionally coupled model with a temperature-dependent resistivity, use a constant resistivity for later comparison:
- 4 From the α list, choose **User defined**. Keep the default zero value for α .

Ground I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Ground**.
- 2 In the **Settings** window for **Ground**, locate the **Boundary Selection** section.
- 3 From the **Selection** list, choose **connector2**.


Electric Potential I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Electric Potential**.
- 2 In the **Settings** window for **Electric Potential**, locate the **Electric Potential** section.
- 3 In the V_0 text field, type V_0 .
- 4 Locate the **Boundary Selection** section. From the **Selection** list, choose **connector1**.

MULTIPHYSICS

Thermal Expansion I (te1)

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Multiphysics** click **Thermal Expansion I (te1)**.

- 2 In the **Settings** window for **Thermal Expansion**, locate the **Model Input** section.
- 3 Click  **Go to Source** for **Volume reference temperature**.

GLOBAL DEFINITIONS

Default Model Inputs


- 1 In the **Model Builder** window, under **Global Definitions** click **Default Model Inputs**.
- 2 In the **Settings** window for **Default Model Inputs**, locate the **Browse Model Inputs** section.
- 3 Find the **Expression for remaining selection** subsection. In the **Volume reference temperature** text field, type Text.

HEAT TRANSFER IN SOLIDS (HT)


Initial Values I

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Heat Transfer in Solids (ht)** click **Initial Values I**.
- 2 In the **Settings** window for **Initial Values**, locate the **Initial Values** section.
- 3 In the T text field, type T_0 .

Heat Flux I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Heat Flux**.
- 2 In the **Settings** window for **Heat Flux**, locate the **Boundary Selection** section.
- 3 From the **Selection** list, choose **All boundaries**.
Select all boundaries for simplicity; next you will add a node that overrides this boundary condition for the connectors.
- 4 Locate the **Heat Flux** section. From the **Flux type** list, choose **Convective heat flux**.
- 5 In the h text field, type k .
- 6 In the T_{ext} text field, type Text.


Temperature I

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Temperature**.
- 2 In the **Settings** window for **Temperature**, locate the **Temperature** section.
- 3 In the T_0 text field, type T_0 .
- 4 Locate the **Boundary Selection** section. From the **Selection** list, choose **connectors**.

SOLID MECHANICS (SOLID)

In the **Model Builder** window, under **Component 1 (comp1)** click **Solid Mechanics (solid)**.

Fixed Constraint 1

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Fixed Constraint**.
- 2 In the **Settings** window for **Fixed Constraint**, locate the **Boundary Selection** section.
- 3 From the **Selection** list, choose **connectors**.

MESH 1

Free Tetrahedral 1

- 1 In the **Mesh** toolbar, click  **Free Tetrahedral**.

Size

- 1 In the **Model Builder** window, click **Size**.
- 2 In the **Settings** window for **Size**, locate the **Element Size** section.
- 3 From the **Predefined** list, choose **Finer**.
- 4 In the **Model Builder** window, right-click **Mesh 1** and choose **Build All**.

STUDY 1

You can use the default solver settings for this model.

- 1 In the **Study** toolbar, click  **Compute**.

RESULTS

Displacement - Study 1

The first default plot presents a surface plot of the von Mises stress. Modify it to show the displacement magnitude.


- 1 In the **Settings** window for **3D Plot Group**, type Displacement - Study 1 in the **Label** text field.

Volume 1

- 1 In the **Model Builder** window, expand the **Displacement - Study 1** node, then click **Volume 1**.
- 2 In the **Settings** window for **Volume**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (comp1) > Solid Mechanics > Displacement > solid.disp - Displacement magnitude - m**.
- 3 Locate the **Expression** section. From the **Unit** list, choose **nm**.

4 In the **Displacement - Study 1** toolbar, click  **Plot**.


As the color legend shows, the maximum displacement is roughly 88 nm with a constant resistivity.

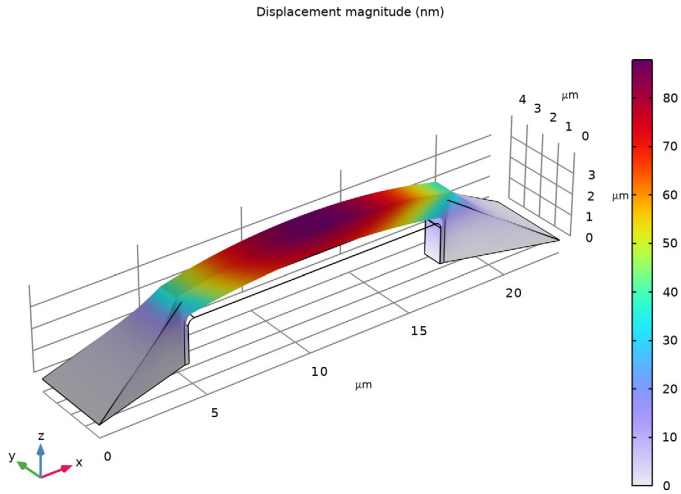

Temperature (ht)

The second default surface plot shows the temperature field. Note the maximum temperature of roughly 1048 K.

- 1 In the **Model Builder** window, under **Results** click **Temperature (ht)**.

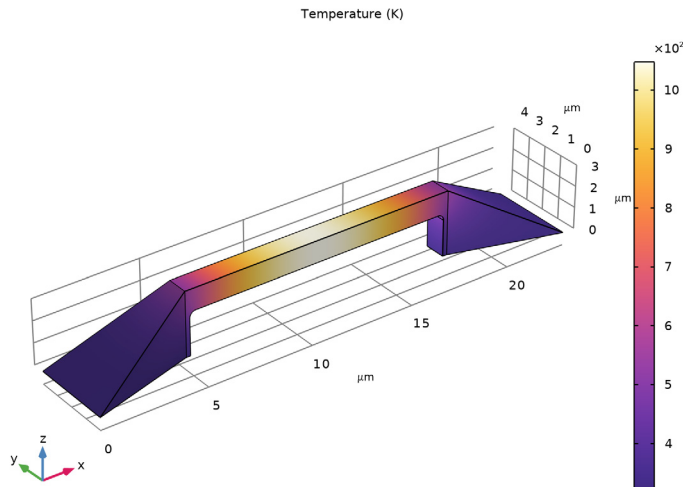



Now restore the temperature-dependence of the resistivity that you temporarily disabled and then add a new study and solve the model again.

ELECTRIC CURRENTS (EC)


Current Conservation in Solids I

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Electric Currents (ec)** click **Current Conservation in Solids I**.
- 2 In the **Settings** window for **Current Conservation in Solids**, locate the **Constitutive Relation Jc-E** section.
- 3 From the α list, choose **From material**.

ADD STUDY

- 1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies > Stationary**.
- 4 Click the **Add Study** button in the window toolbar.
- 5 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.

STUDY 2

In the **Study** toolbar, click  **Compute**.

RESULTS


Temperature (ht) I

As you can see from the plot, using the more realistic material model with a temperature-dependent resistivity has a significant effect on the solution. The maximum temperature is now almost 340 K lower.

Displacement - Study 2

- 1 In the **Model Builder** window, right-click **Stress (solid)** and choose **Rename**.
- 2 In the **Rename 3D Plot Group** dialog, type Displacement - Study 2 in the **New label** text field.
- 3 Click **OK**.

Volume I

- 1 In the **Model Builder** window, expand the **Displacement - Study 2** node, then click **Volume I**.
- 2 In the **Settings** window for **Volume**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (comp1) > Solid Mechanics > Displacement > solid.disp - Displacement magnitude - m**.
- 3 Locate the **Expression** section. From the **Unit** list, choose **nm**.
- 4 In the **Displacement - Study 2** toolbar, click  **Plot**.

Similarly, the maximum displacement has been reduced from 88 nm to around 50 nm.