



# Modeling of an Electric Generator in 3D

## Introduction

---

This application illustrates how to model an electric machine, such as a generator, motor, or drive, by exploiting its sector symmetry to reduce the size of the problem. The machine being studied is a simplified electric generator in 3D, based on the geometry used in the *Generator in 2D* application.


The application uses the **Rotating Machinery, Magnetic** interface. It is recommended to have a look at the model *Rotating Machinery 3D Tutorial* before proceeding with this application.

## Model Definition

---

The complete geometry is represented in [Figure 1](#). Parts of the stator have been removed to show the rotor. The core of the rotor and the stator consists of laminated ( $\sigma = 0 \text{ S/m}$ ), saturable iron. The teeth of the rotor are permanent magnets from available materials.

The generator rotates with a rotational velocity of 60 rpm, and the model is solved in the time domain from  $t = 0 \text{ s}$  to  $t = 0.25 \text{ s}$ , after which the rotor arrived to a configuration symmetrically equivalent to the starting one.

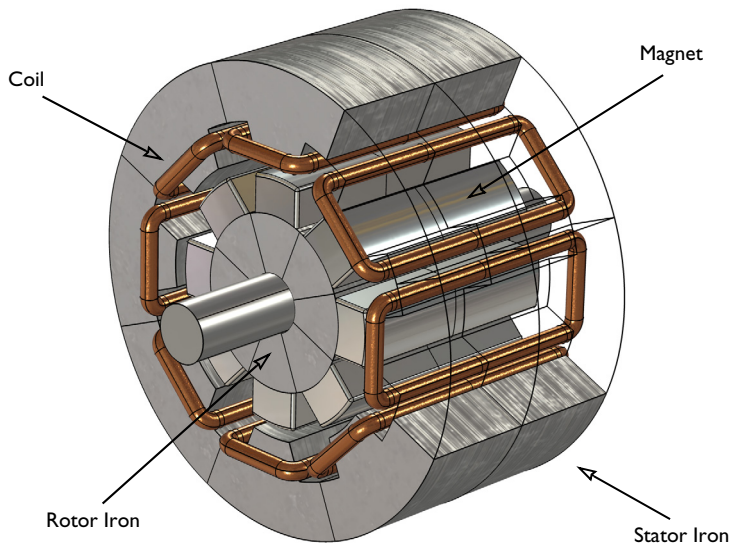

*Figure 1: Geometry of the generator.*

The geometry has two types of symmetry: the sector symmetry and a reflection symmetry with respect to the midplane orthogonal to the axis, so it can be reduced to the sector geometry shown in Figure 2. The figure indicates the appropriate conditions to use on the symmetry cut boundaries:

- **Periodic Boundary Conditions** must be used on the sides of the sector symmetry. The type of periodicity chosen is **Antiperiodicity**, since the inputs to the model (the remanent flux density in the permanent magnets) change sign in adjacent sectors.
- The **Sector Symmetry** pair condition is applied on the identity pair created by the geometry at the contact boundary between rotor and stator. The type of periodicity must match the type specified in the Periodic Boundary Condition features, that is, **Antiperiodicity**.
- The reflection symmetry forces the normal component of the magnetic field to be zero at the midplane. This condition is imposed by the default **Magnetic Insulation** feature.

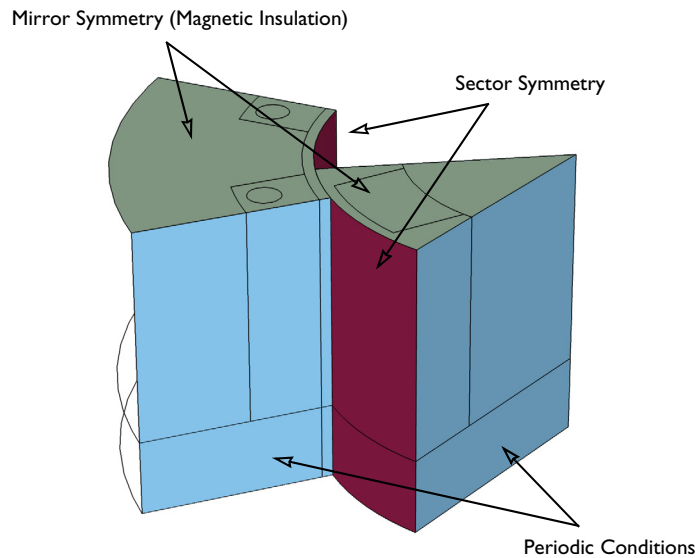


Figure 2: Boundary conditions used to take into account the model symmetry.

### MODELING THE COIL

The stator coil has a nonregular shape, that does not fall in the Linear or Circular category. The direction of the coil can be computed in a preprocessing **Coil Geometry Analysis** step.

The stator coil is affected by the symmetry cut as well. The modeled length of the coil is 1/16 of the actual length (due to the 8-fold sector symmetry and the mirror symmetry). To ensure that the lumped quantities such as the coil voltage or the current are computed correctly, specify appropriate **Symmetry factors** in the **Geometry Analysis** subnode under the **Coil** node.

#### THE MIXED FORMULATION

The application uses the Mixed formulation functionality of the Rotating Machinery, Magnetic interface. It solves the magnetic scalar potential  $V_m$  in nonconductive regions and for the magnetic vector potential **A**. The scalar formulation is solved by **Magnetic Flux Conservation** features, while the vector formulation is solved by **Ampère's Law** features. Advantages of using the scalar potential formulation in the air gap and nonconductive regions are:

- More accurate magnetic flux conservation by the pair coupling (Sector Symmetry). For this reason, it is important to use the scalar potential in the regions adjacent to a pair.
- Decreased number of degrees of freedom compared with the vector formulation.

The limitation of the scalar formulation is that it cannot be used in conductive domains or domains carrying currents, nor in regions that contain closed loop chaining a current (for example, it cannot be used in the air region surrounding the coil).

Care must be taken when using periodic condition in a sector-symmetric model, since the topological condition on the scalar potential regions must be fulfilled in the complete geometry as well.

#### DIRECT SOLVERS AND UNIQUENESS OF THE SOLUTION

The Rotating Machinery, Magnetic interface, by default, uses a direct solver for stationary and transient simulations. Direct solvers are typically better performing than iterative solvers at the cost of increased memory usage.


Direct solvers can only find a solution if it is unique, unlike iterative solvers. The vector potential formulation is subject to gauge freedom, meaning that the solution is unique up to a gauge transformation. To ensure a globally unique solution for the stationary study step, it is necessary to choose (fix) the gauge by using the **Gauge Fixing for A-Field** feature in all domains where the vector formulation is used. For the time-dependent study step, however, the Gauge fixing is not required if the conductivity of these domains is not zero in the numerical sense. More information about the electromagnetic gauge and gauge fixing can be found in the *AC/DC Module User's Guide*.

## LOSS CALCULATION

The resistive and iron losses are computed with the use of a Loss Calculation subfeature and a Time to Frequency Losses study. For the iron part of the generator, the Bertotti loss model is selected to compute the cycle averaged loss power density. A volume integration is then made to compute the total loss power of the generator. The generated voltage and the losses are compared with the 2D counterpart of this model, that is, *Generator in 2D*.

## Results and Discussion


A sector plot of magnetic flux density and the coil voltage is presented in [Figure 3](#). The solution is plotted in the spatial frame, in which the rotor moves.

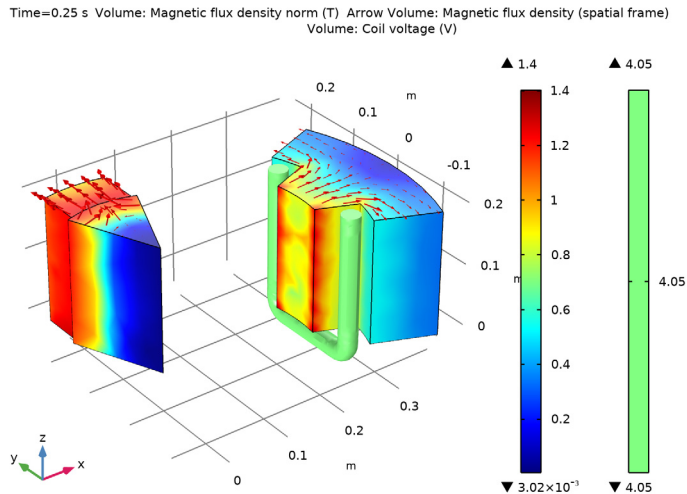

*Figure 3: Sector plot of the magnetic flux density. The global coil voltage is represented as a volume plot on the coil itself.*

To visualize the solution in the complete geometry, reconstruct it using **Sector 3D** and **Mirror** datasets. These specialized datasets create another solution by rotating and mirroring other datasets according to the specification.


To properly account for the antisymmetry, select the **Invert phase when rotating** check box in the **Sector 3D** dataset. This functionality changes the sign of the solution when creating adjacent sectors. The resulting plot is shown in [Figure 4](#).

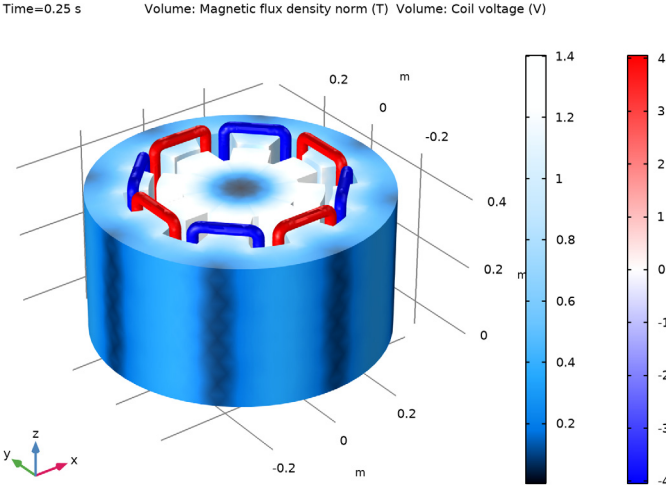

*Figure 4: Plot of the magnetic flux density and the global coil voltages in the complete, reconstructed geometry.*

Finally, [Figure 5](#) shows the induced coil voltage as a function of time. The voltage takes into account the number of wires in the multi-turn coil and the symmetry. The simulated

voltage is in good agreement with the result from the corresponding 2D model, see [Figure 3](#) in the application *Generator in 2D*.

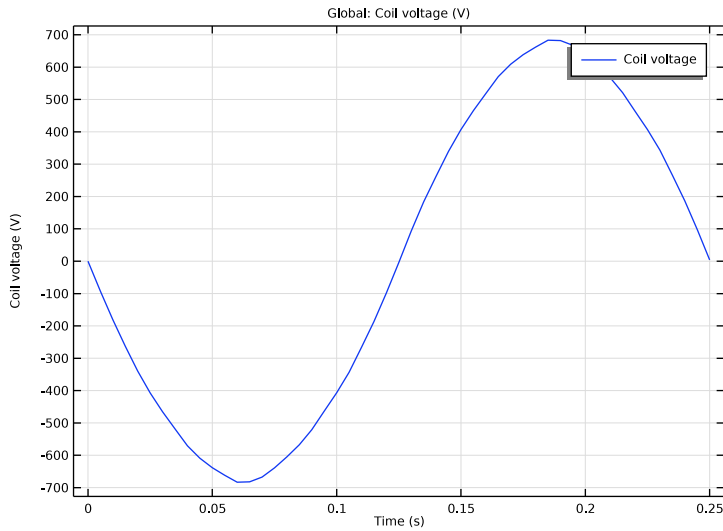

*Figure 5: Voltage induced in the complete coil as a function of time.*

---

**Application Library path:** ACDC\_Module/Motors\_and\_Actuators/  
sector\_generator\_3d


---

### *Modeling Instructions*


---


From the **File** menu, choose **New**.

#### **NEW**

In the **New** window, click  **Model Wizard**.

#### **MODEL WIZARD**

- 1 In the **Model Wizard** window, click  **3D**.
- 2 In the **Select Physics** tree, select **AC/DC>Electromagnetics and Mechanics>Rotating Machinery, Magnetic (rmm)**.
- 3 Click **Add**.

- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **Preset Studies for Selected Physics Interfaces> Coil Geometry Analysis**.
- 6 Click  **Done**.

### GLOBAL DEFINITIONS

Define Model Parameters: global, constant expressions that can be used anywhere in the application.




#### Parameters I

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters I**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 In the table, enter the following settings:

Name	Expression	Value	Description
d_wire	3[mm]	0.003 m	Diameter of wire in the winding
N	100	100	Number of turns in the winding
rpm	60[rpm]	1 l/s	Angular velocity of the rotor

### GEOMETRY I

Insert the geometry sequence from a separate file using the **Insert Sequence** functionality. This functionality copies all the subnodes of the Geometry node in the chosen file to the current model.

- 1 In the **Geometry** toolbar, click  **Insert Sequence**.
- 2 Browse to the model's Application Libraries folder and double-click the file `sector_generator_3d_geom_sequence.mph`.
- 3 In the **Geometry** toolbar, click  **Build All**.
- 4 Click the  **Zoom Extents** button in the **Graphics** toolbar.

The geometry represents a sector of the complete generator, further halved along the  $xy$ -symmetry plane. The geometry is composed of two objects, one for the rotor and one for the stator. They have been constructed from the individual components using two **Union** operations. The geometry is finalized by using **Form Assembly**, which detects the touching boundaries and creates an **Identity Pair** connecting them.




## DEFINITIONS

Proceed to the definition of **Selection** nodes: named collection of geometric entities (such as domains or boundaries) that can be reused when applying equations, boundary conditions, and other features. New selections can also be obtained by applying more advanced operations on other Selections, such as taking the complement or the adjacent entities. Using Selections simplifies the workflow, especially in models with complex geometries. **Explicit** selections are named selections in which the entities (domains, in this case) are selected explicitly.

*Cylindrical System 2 (sys2)*

In the **Definitions** toolbar, click  **Coordinate Systems** and choose **Cylindrical System**.


*Explicit 1*

In the **Definitions** toolbar, click  **Explicit**.


*Cylindrical System 2 (sys2)*

The cylindrical coordinate system you just added will be used to define the field of the permanent magnets.


*Stator Coil*


- 1 In the **Model Builder** window, under **Component 1 (comp1)>Definitions>Selections** click **Explicit 1**.
- 2 In the **Settings** window for **Explicit**, type Stator Coil in the **Label** text field.
- 3 Click the  **Wireframe Rendering** button in the **Graphics** toolbar.

4 Select Domains 11–17 only(the domains belonging to the coil).

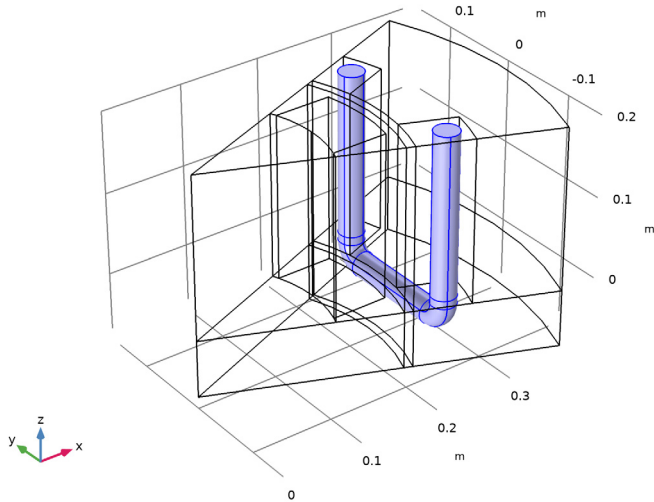


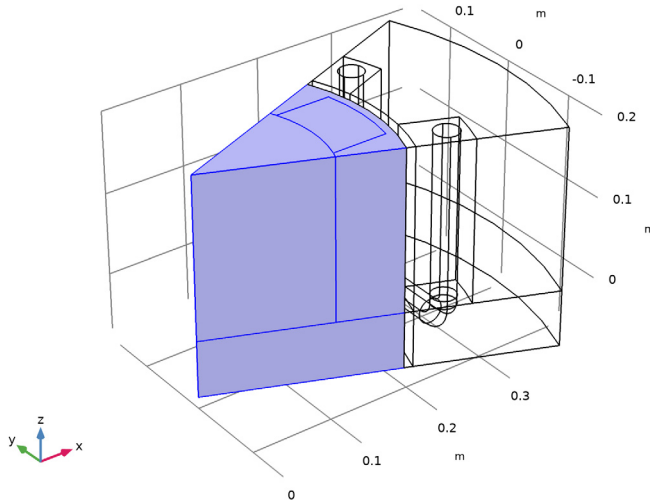
### Permanent Magnet

- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type Permanent Magnet in the **Label** text field.
- 3 Select Domain 4 only(the magnet domain ).

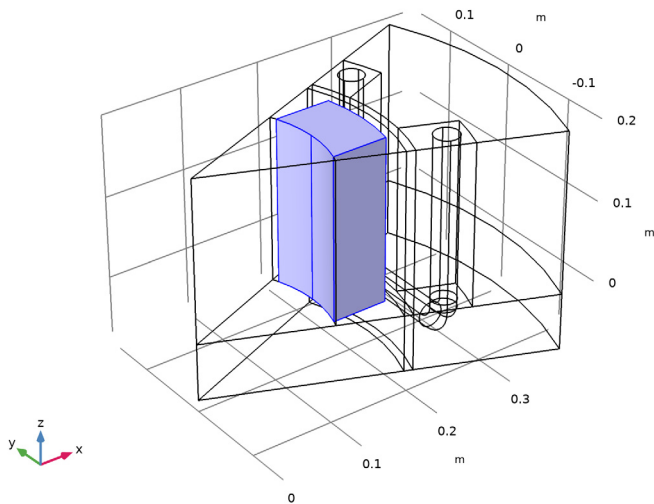

### Rotating Domains



- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type Rotating Domains in the **Label** text field.
- 3 Select Domains 1–4 only(all the domains in the rotor).




### DEFINITIONS

Create a selection for the stationary domains by taking the complement of the rotor selection.


### Stationary Domains

- 1 In the **Definitions** toolbar, click  **Complement**.
- 2 In the **Settings** window for **Complement**, type Stationary Domains in the **Label** text field.
- 3 Locate the **Input Entities** section. Under **Selections to invert**, click  **Add**.
- 4 In the **Add** dialog box, select **Rotating Domains** in the **Selections to invert** list.
- 5 Click **OK**.


### Periodic Condition: Rotor

- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type Periodic Condition: Rotor in the **Label** text field.


- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundaries 1, 2, 4, 5, 9, and 13 only.

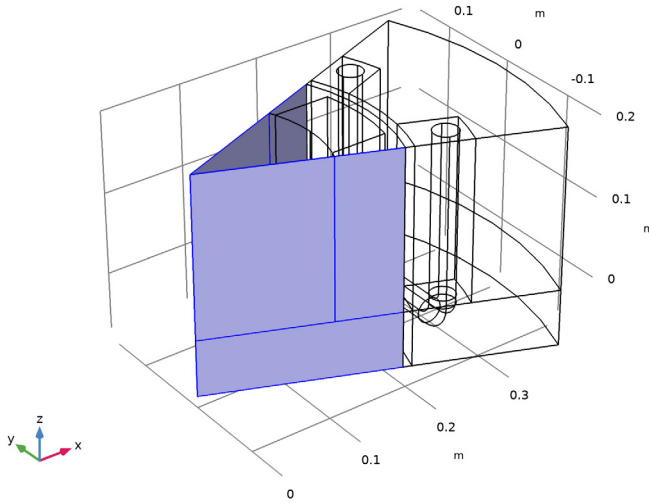


*Periodic Condition: Stator, Scalar Potential*

- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type Periodic Condition: Stator, Scalar Potential in the **Label** text field.
- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.


4 Select Boundaries 24, 27, 30, and 31 only.

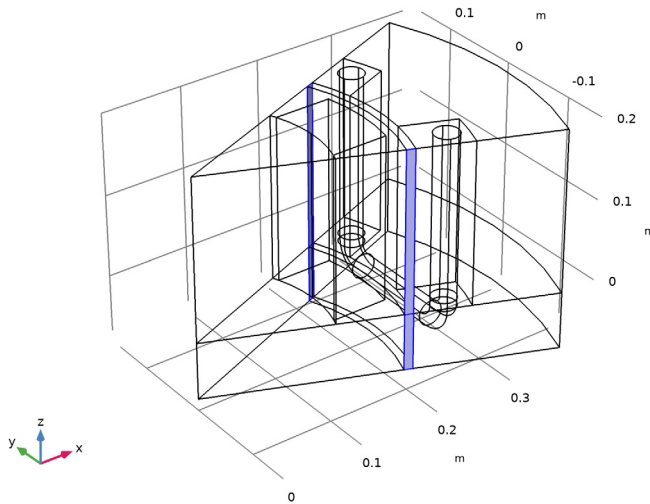


*Periodic Condition: Stator, Vector Potential*

- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type Periodic Condition: Stator, Vector Potential in the **Label** text field.
- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.


4 Select Boundaries 33, 36, 39, 41, 86, and 88 only.

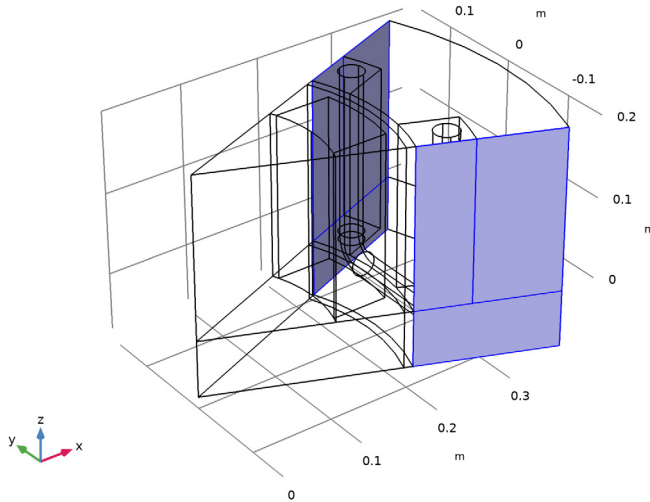

#### Destination

- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type Destination in the **Label** text field.
- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundaries 20 and 21 only.

#### Source

- 1 In the **Definitions** toolbar, click  **Explicit**.
- 2 In the **Settings** window for **Explicit**, type Source in the **Label** text field.
- 3 Locate the **Input Entities** section. From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundaries 23 and 26 only.





#### Identity Boundary Pair 1 (ap1)

Finally, ensure that the **Destination** side of the identity pair is on the moving domain. This gives a better performance during the solution.

Check the **Source Boundaries** and the **Destination Boundaries** and make sure that the moving domains are in the destination side. The boundaries are numbered progressively with increasing x-coordinate, so the boundaries on the rotor side have lower numbers. Click the **Swap Source and Destination** button to swap the boundary assignment and put the boundaries with the lower numbers in the destination side.

## ADD MATERIAL


Proceed with the definition of the materials.

- 1 In the **Home** toolbar, click  **Add Material** to open the **Add Material** window.
- 2 Go to the **Add Material** window.
- 3 In the tree, select **Built-in>Air**.
- 4 Click  **Add to Component I (comp1)**.
- 5 In the tree, select **AC/DC>Soft Iron (Without Losses)**.
- 6 Click  **Add to Component I (comp1)**.
- 7 In the tree, select **AC/DC>Hard Magnetic Materials>Sintered NdFeB Grades (Chinese Standard)>N50 (Sintered NdFeB)**.
- 8 Click **Add to Component** in the window toolbar.
- 9 In the **Home** toolbar, click  **Add Material** to close the **Add Material** window.

## MATERIALS


*Soft Iron (Without Losses) (mat2)*

- 1 In the **Model Builder** window, under **Component I (comp1)>Materials** click **Soft Iron (Without Losses) (mat2)**.
- 2 Select Domains 2 and 10 only.

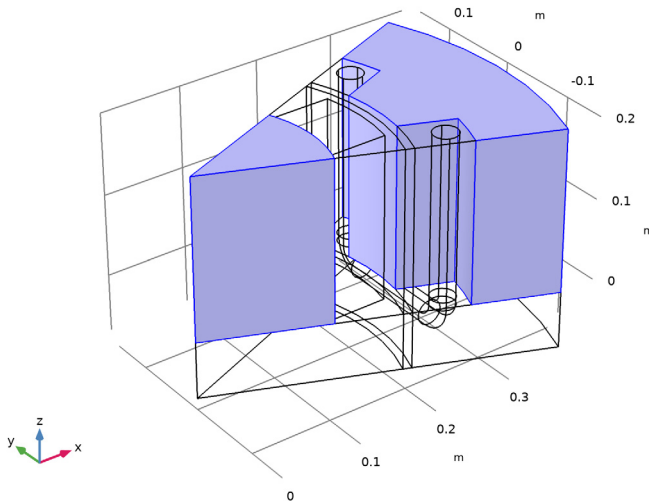

*N50 (Sintered NdFeB) (mat3)*

- 1 In the **Model Builder** window, click **N50 (Sintered NdFeB) (mat3)**.
- 2 In the **Settings** window for **Material**, locate the **Geometric Entity Selection** section.
- 3 From the **Selection** list, choose **Permanent Magnet**.

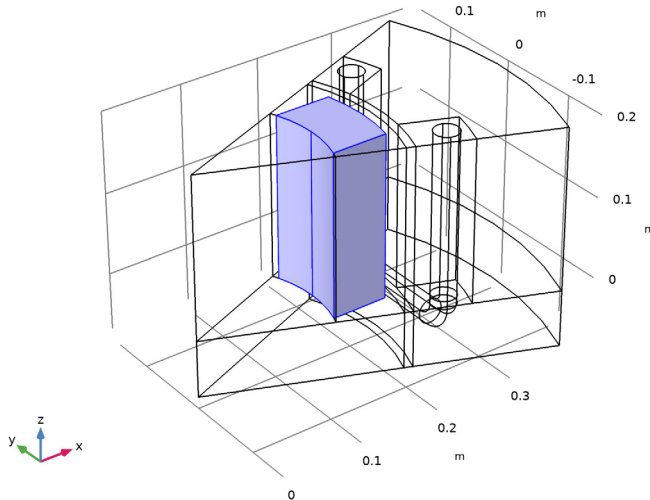

## **ROTATING MACHINERY, MAGNETIC (RMM)**


Move on to the setup of the physics interface.

*Magnetic Flux Conservation: Air Gap*


- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Rotating Machinery, Magnetic (rmm)** and choose **Magnetic Flux Conservation**.
- 2 In the **Settings** window for **Magnetic Flux Conservation**, type Magnetic Flux Conservation: Air Gap in the **Label** text field.




**3** Select Domains 1, 3, 5, and 6 only.

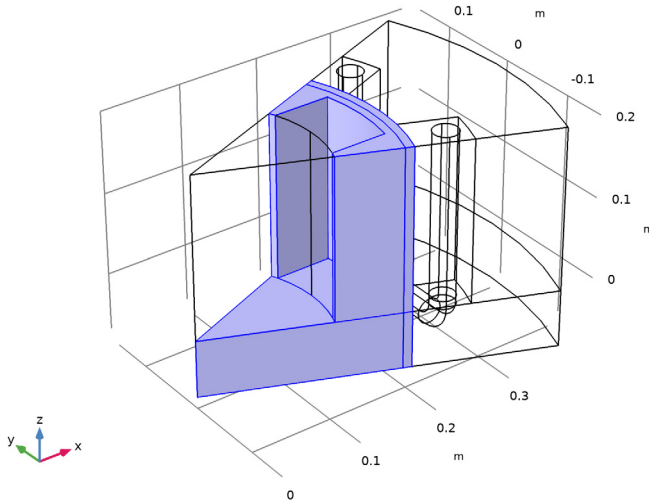

*Magnetic Flux Conservation: Rotor Iron*

- 1** In the **Physics** toolbar, click  **Domains** and choose **Magnetic Flux Conservation**.
- 2** In the **Settings** window for **Magnetic Flux Conservation**, type Magnetic Flux Conservation: Rotor Iron in the **Label** text field.

3 Select Domain 2 only.

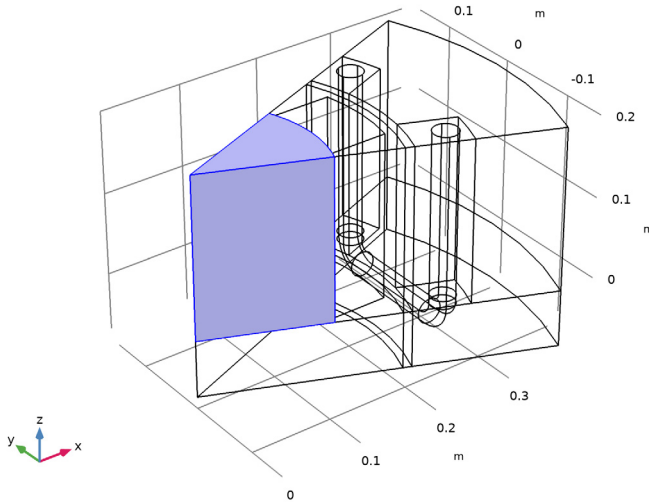

4 Locate the **Constitutive Relation B-H** section. From the **Magnetization model** list, choose **B-H curve**.

*Loss Calculation 1*

1 In the **Physics** toolbar, click  **Attributes** and choose **Loss Calculation**.

Set loss model to **Bertotti**.

2 In the **Settings** window for **Loss Calculation**, locate the **Loss Model** section.


3 From the **Loss model** list, choose **Bertotti**.

*Ampère's Law: Stator Iron*

1 In the **Physics** toolbar, click  **Domains** and choose **Ampère's Law**.


2 In the **Settings** window for **Ampère's Law**, type Ampère's Law: Stator Iron in the **Label** text field.

3 Select Domain 10 only.

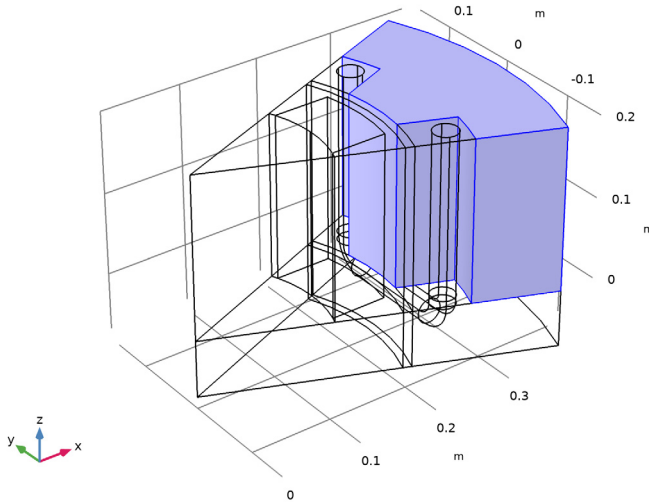


4 Locate the **Constitutive Relation B-H** section. From the **Magnetization model** list, choose **B-H curve**.

#### *Loss Calculation 1*

- 1 In the **Physics** toolbar, click  **Attributes** and choose **Loss Calculation**.
- 2 In the **Settings** window for **Loss Calculation**, locate the **Loss Model** section.
- 3 From the **Loss model** list, choose **Bertotti**.


#### *Magnet*

- 1 In the **Physics** toolbar, click  **Domains** and choose **Ampère's Law**.
- 2 In the **Settings** window for **Ampère's Law**, type Magnet in the **Label** text field.
- 3 Select Domain 4 only.
- 4 Locate the **Coordinate System Selection** section. From the **Coordinate system** list, choose **Cylindrical System 2 (sys2)**.
- 5 Locate the **Constitutive Relation B-H** section. From the **Magnetization model** list, choose **Remanent flux density**.

#### *Loss Calculation 1*

In the **Physics** toolbar, click  **Attributes** and choose **Loss Calculation**.

### Coil 1


- 1 In the **Physics** toolbar, click  **Domains** and choose **Coil**.
- 2 Select Domain 13 only.
- 3 In the **Settings** window for **Coil**, locate the **Domain Selection** section.
- 4 From the **Selection** list, choose **Stator Coil**.
- 5 Locate the **Coil** section. From the **Conductor model** list, choose **Homogenized multiturn**.
- 6 From the **Coil type** list, choose **Numeric**.  
This setting requires to solve a **Coil Geometry Analysis** preprocessing step.
- 7 In the  $I_{\text{coil}}$  text field, type 0[A].
- 8 Locate the **Homogenized Multiturn Conductor** section. In the  $N$  text field, type N.
- 9 In the  $a_{\text{coil}}$  text field, type d\_wire.

### Geometry Analysis 1

- 1 In the **Model Builder** window, click **Geometry Analysis 1**.
- 2 In the **Settings** window for **Geometry Analysis**, locate the **Coil Geometry** section.
- 3 Find the **Symmetry specification** subsection. In the  $F_L$  text field, type 16.

### Input 1

- 1 In the **Model Builder** window, expand the **Geometry Analysis 1** node, then click **Input 1**.
- 2 Select Boundary 57 only(one of the two boundaries at the symmetry cut).

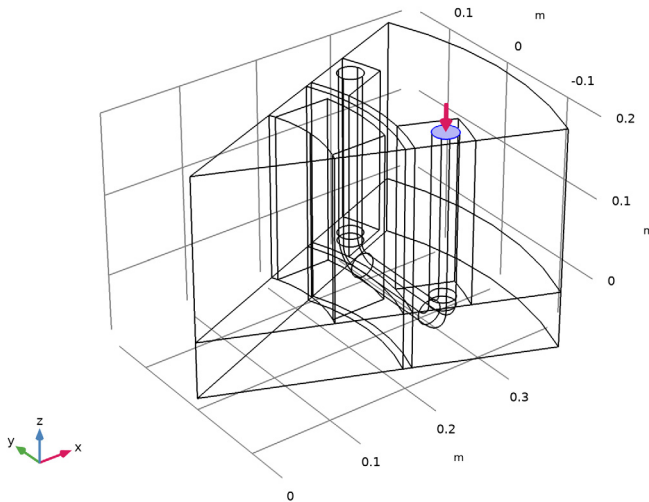


### Geometry Analysis I

The coil domain is only 1/16 of the total length of the coil (due to symmetry). Use the functionality in the **Geometry Analysis** subfeature to apply the appropriate corrections to the lumped quantities, such as the induced voltage.

In the **Model Builder** window, click **Geometry Analysis I**.



### Output I

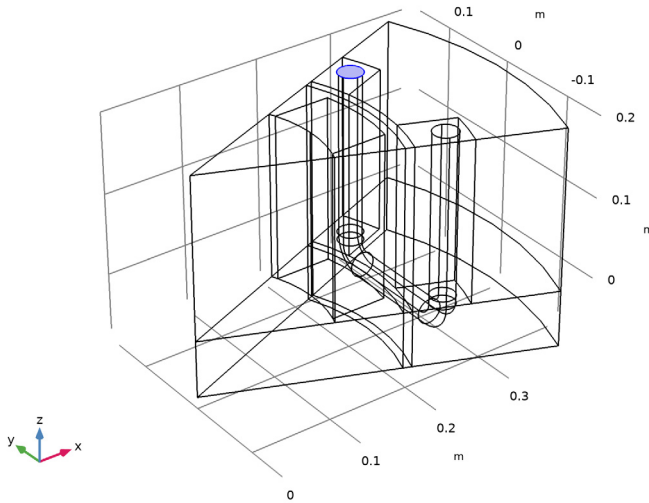- 1 In the **Physics** toolbar, click  **Attributes** and choose **Output**.
- 2 Select Boundary 70 only (the other boundary at the symmetry cut).





### Gauge Fixing for A-field I

The default solver for the 3D Rotating Machinery, Magnetic interface is the direct solver, which gives better performance in time-dependent studies and with the mixed formulation. A direct solver requires that the solution is unique, so it is necessary to apply the **Gauge Fixing** feature. The Stationary form of Gauge Fixing is enforced so to be able to support regions with zero conductivity.

- 1 In the **Physics** toolbar, click  **Domains** and choose **Gauge Fixing for A-field**.
- 2 Click the  **Show More Options** button in the **Model Builder** toolbar.
- 3 In the **Show More Options** dialog box, in the tree, select the check box for the node **Physics>Advanced Physics Options**.
- 4 Click **OK**.


### *Sector Symmetry 1*

The Sector Symmetry feature sets up the appropriate rotational-periodic coupling at the identity pair.


- 1 In the **Physics** toolbar, click  **Pairs** and choose **Sector Symmetry**.
- 2 In the **Settings** window for **Sector Symmetry**, locate the **Pair Selection** section.
- 3 Under **Pairs**, click  **Add**.
- 4 In the **Add** dialog box, select **Identity Boundary Pair I (ap I)** in the **Pairs** list.
- 5 Click **OK**.
- 6 In the **Settings** window for **Sector Symmetry**, locate the **Sector Settings** section.
- 7 In the  $n_{\text{sect}}$  text field, type 8.
- 8 From the **Type of periodicity** list, choose **Antiperiodicity**.
- 9 Click to expand the **Constraint Settings** section. Select the **Use weak constraints** check box.

### *Periodic Condition 1*


Apply periodic conditions on the periodic boundaries.

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Periodic Condition**.
- 2 In the **Settings** window for **Periodic Condition**, locate the **Boundary Selection** section.
- 3 From the **Selection** list, choose **Periodic Condition: Rotor**.
- 4 Locate the **Periodic Condition** section. From the **Type of periodicity** list, choose **Antiperiodicity**.

### *Periodic Condition 2*


- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Periodic Condition**.
- 2 In the **Settings** window for **Periodic Condition**, locate the **Boundary Selection** section.
- 3 From the **Selection** list, choose **Periodic Condition: Stator, Scalar Potential**.
- 4 Locate the **Periodic Condition** section. From the **Type of periodicity** list, choose **Antiperiodicity**.

### *Periodic Condition 3*

- 1 In the **Physics** toolbar, click  **Boundaries** and choose **Periodic Condition**.
- 2 In the **Settings** window for **Periodic Condition**, locate the **Boundary Selection** section.
- 3 From the **Selection** list, choose **Periodic Condition: Stator, Vector Potential**.
- 4 Locate the **Periodic Condition** section. From the **Type of periodicity** list, choose **Antiperiodicity**.

## DEFINITIONS

### *Rotating Domain 1*

- 1 In the **Definitions** toolbar, click  **Moving Mesh** and choose **Rotating Domain**.
- 2 In the **Settings** window for **Rotating Domain**, locate the **Domain Selection** section.
- 3 From the **Selection** list, choose **Rotating Domains**.
- 4 Locate the **Rotation** section. From the **Rotation type** list, choose **Specified rotational velocity**.
- 5 From the **Rotational velocity expression** list, choose **Constant revolutions per time**.
- 6 In the  $f$  text field, type rpm.

## ROTATING MACHINERY, MAGNETIC (RMM)

- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Rotating Machinery, Magnetic (rmm)**.
- 2 In the **Settings** window for **Rotating Machinery, Magnetic**, click to expand the **Discretization** section.
- 3 From the **Magnetic vector potential** list, choose **Linear**.
- 4 From the **Magnetic scalar potential** list, choose **Linear**.

Set the electrical conductivity of air and soft iron to a finite small value (1[S/m]) to improve the numerical stability.

## MATERIALS

### *Air (mat1)*

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Materials** click **Air (mat1)**.
- 2 In the **Settings** window for **Material**, locate the **Material Contents** section.
- 3 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Electrical conductivity	sigma_iso ; sigma_ii = sigma_iso, sigma_ij = 0	1 [S/m]	S/m	Basic

### *Soft Iron (Without Losses) (mat2)*


- 1 In the **Model Builder** window, click **Soft Iron (Without Losses) (mat2)**.
- 2 In the **Settings** window for **Material**, locate the **Material Contents** section.

3 In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Electrical conductivity	sigma_iso ; sigma_ii = sigma_iso, sigma_ij = 0	1 [S/m]	S/m	Basic

### MESH 1

Set up the mesh for the problem; physics controlled mesh will automatically generate a mesh that is conformal on the two side of the symmetry. This is a strong requirement for all faces where the fields are described by vector potential A.

- 1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Mesh 1** and choose **Build All**.
- 2 Click the  **Go to Default View** button in the **Graphics** toolbar.



### STUDY 1

Complete the definition of the study. After the **Coil Geometry Analysis** step added earlier, add a **Stationary** step (to compute the initial values for the transient step) and the main **Time Dependent** step.

#### Stationary

In the **Study** toolbar, click  **Study Steps** and choose **Stationary>Stationary**.

#### Time Dependent

- 1 In the **Study** toolbar, click  **Study Steps** and choose **Time Dependent>Time Dependent**.
- 2 In the **Settings** window for **Time Dependent**, locate the **Study Settings** section.
- 3 In the **Output times** text field, type range (0, 0.005, 0.25).  
For time-dependent study with finite conductivity in all domains, it is not necessary to use the gauge fixing. Next, it is disabled to make the model cheaper to solve.
- 4 Locate the **Physics and Variables Selection** section. Select the **Modify model configuration for study step** check box.
- 5 In the **Physics and variables selection** tree, select **Component 1 (comp1)>Rotating Machinery, Magnetic (rmm), Controls spatial frame>Gauge Fixing for A-field 1**.
- 6 Click  **Disable**.



### *Solution 1 (sol1)*

**1** In the **Study** toolbar, click  **Show Default Solver**.

Use a stricter tolerance for the stationary step to compute more accurate initial values. This improves the performance of the time dependent solver. Then operate on the setting of the transient solver so to enforce a tighter convergence at each step.

**2** In the **Model Builder** window, expand the **Solution 1 (sol1)** node, then click **Stationary Solver 2**.

**3** In the **Settings** window for **Stationary Solver**, locate the **General** section.

**4** In the **Relative tolerance** text field, type  $1e-6$ .

**5** In the **Model Builder** window, click **Dependent Variables 3**.

**6** In the **Settings** window for **Dependent Variables**, locate the **Scaling** section.

**7** From the **Method** list, choose **None**.

**8** In the **Model Builder** window, expand the **Study 1>Solver Configurations>Solution 1 (sol1)>Time-Dependent Solver 1** node, then click **Direct**.

**9** In the **Settings** window for **Direct**, locate the **General** section.

**10** From the **Solver** list, choose **PARDISO**.

**11** In the **Model Builder** window, click **Fully Coupled 1**.

**12** In the **Settings** window for **Fully Coupled**, click to expand the **Method and Termination** section.

**13** From the **Jacobian update** list, choose **On every iteration**.

**14** In the **Maximum number of iterations** text field, type 25.

**15** In the **Study** toolbar, click  **Compute**.

## **RESULTS**

### *Study 1/Solution 1 (sol1)*

After the solution is computed, create a sector plot of the magnetic flux density.

### *Study 1/Solution 1 (Iron)*


**1** In the **Model Builder** window, expand the **Results>Datasets** node.

**2** Right-click **Results>Datasets>Study 1/Solution 1 (sol1)** and choose **Duplicate**.

**3** In the **Settings** window for **Solution**, type Study 1/Solution 1 (Iron) in the **Label** text field.

Visualize the solution in the Spatial frame (the fixed "laboratory" frame), in which the rotor is moving.


### *Selection*

- 1 In the **Results** toolbar, click  **Attributes** and choose **Selection**.
- 2 In the **Settings** window for **Selection**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Domain**.
- 4 Select Domains 2, 4, and 10 only.

### *Study 1/Solution 1 (Coil)*

- 1 Right-click **Study 1/Solution 1 (sol1)** and choose **Duplicate**.
- 2 In the **Settings** window for **Solution**, type Study 1/Solution 1 (Coil) in the **Label** text field.

### *Selection*

- 1 In the **Results** toolbar, click  **Attributes** and choose **Selection**.
- 2 In the **Settings** window for **Selection**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Domain**.
- 4 From the **Selection** list, choose **Stator Coil**.

### *Sector Plot*

- 1 In the **Model Builder** window, under **Results** click **Magnetic Flux Density Norm (rmm)**.
- 2 In the **Settings** window for **3D Plot Group**, type Sector Plot in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Study 1/Solution 1 (Iron) (sol1)**.

### *Multislice 1*

- 1 In the **Model Builder** window, expand the **Sector Plot** node.
- 2 Right-click **Multislice 1** and choose **Delete**.

### *Streamline Surface 1*

In the **Model Builder** window, right-click **Streamline Surface 1** and choose **Delete**.

### *Streamline Surface 2*

In the **Model Builder** window, right-click **Streamline Surface 2** and choose **Delete**.

### *Streamline Surface 3*

In the **Model Builder** window, right-click **Streamline Surface 3** and choose **Delete**.

### *Volume 1*



In the **Model Builder** window, right-click **Sector Plot** and choose **Volume**.

### *Arrow Volume 1*


- 1 Right-click **Sector Plot** and choose **Arrow Volume**.

- 2 In the **Settings** window for **Arrow Volume**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component I (comp1)> Rotating Machinery, Magnetic (Magnetic Fields)>Magnetic>rmm.Bx,...,rmm.Bz - Magnetic flux density (spatial frame)**.
- 3 Locate the **Arrow Positioning** section. Find the **x grid points** subsection. In the **Points** text field, type 20.
- 4 Find the **y grid points** subsection. In the **Points** text field, type 20.
- 5 Find the **z grid points** subsection. From the **Entry method** list, choose **Coordinates**.
- 6 In the **Coordinates** text field, type 0.2.

### Volume 2


- 1 Right-click **Sector Plot** and choose **Volume**.
- 2 In the **Settings** window for **Volume**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component I (comp1)> Rotating Machinery, Magnetic (Magnetic Fields)>Coil parameters>rmm.VCoil\_I - Coil voltage - V**.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Study 1/Solution 1 (Coil) (sol1)**.
- 4 In the **Sector Plot** toolbar, click  **Plot**.
- 5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Time=0.25 s Volume: Magnetic flux density norm (T) Arrow Volume: Magnetic flux density (spatial frame)  
Volume: Coil voltage (V)

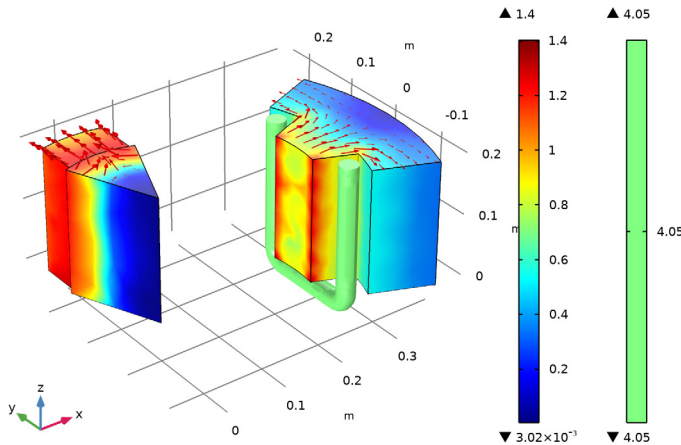


### *Sector Plot*


Reconstruct the complete geometry using **Mirror** and **Sector 3D** datasets.

- 1 In the **Model Builder** window, click **Sector Plot**.
- 2 In the **Settings** window for **3D Plot Group**, locate the **Data** section.
- 3 From the **Time (s)** list, choose **0.08**.
- 4 In the **Sector Plot** toolbar, click  **Plot**.


### *Sector 3D 1*

- 1 In the **Results** toolbar, click  **More Datasets** and choose **Sector 3D**.
- 2 In the **Settings** window for **Sector 3D**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Solution 1 (Iron) (sol1)**.
- 4 Locate the **Symmetry** section. In the **Number of sectors** text field, type 8.
- 5 Click to expand the **Advanced** section. Select the **Invert phase when rotating** check box.


### *Complete Geometry, Iron*

- 1 In the **Results** toolbar, click  **More Datasets** and choose **Mirror 3D**.
- 2 In the **Settings** window for **Mirror 3D**, type Complete Geometry, Iron in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Sector 3D 1**.
- 4 Locate the **Plane Data** section. From the **Plane** list, choose **xy-planes**.
- 5 In the **z-coordinate** text field, type 0.2.

### *Sector 3D 2*


- 1 In the **Results** toolbar, click  **More Datasets** and choose **Sector 3D**.
- 2 In the **Settings** window for **Sector 3D**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Study 1/Solution 1 (Coil) (sol1)**.
- 4 Locate the **Symmetry** section. In the **Number of sectors** text field, type 8.
- 5 Locate the **Advanced** section. Select the **Invert phase when rotating** check box.

### *Complete Geometry, Coil*

- 1 In the **Results** toolbar, click  **More Datasets** and choose **Mirror 3D**.
- 2 In the **Settings** window for **Mirror 3D**, type Complete Geometry, Coil in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Sector 3D 2**.
- 4 Locate the **Plane Data** section. From the **Plane** list, choose **xy-planes**.

5 In the **z-coordinate** text field, type 0.2.

#### *Complete Geometry*

- 1 In the **Results** toolbar, click  **3D Plot Group**.
- 2 In the **Settings** window for **3D Plot Group**, type Complete Geometry in the **Label** text field.


#### *Volume 1*


- 1 Right-click **Complete Geometry** and choose **Volume**.
- 2 In the **Settings** window for **Volume**, locate the **Data** section.
- 3 From the **Dataset** list, choose **Complete Geometry, Iron**.
- 4 From the **Solution parameters** list, choose **From parent**.
- 5 Locate the **Coloring and Style** section. From the **Color table** list, choose **JupiterAuroraBorealis**.

#### *Volume 2*

- 1 In the **Model Builder** window, right-click **Complete Geometry** and choose **Volume**.
- 2 In the **Settings** window for **Volume**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (compl)> Rotating Machinery, Magnetic (Magnetic Fields)>Coil parameters>rmm.VCoil\_1 - Coil voltage - V**.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Complete Geometry, Coil**.
- 4 From the **Solution parameters** list, choose **From parent**.
- 5 Locate the **Coloring and Style** section. From the **Color table** list, choose **WaveLight**.


#### *Complete Geometry*

- 1 In the **Model Builder** window, click **Complete Geometry**.
- 2 In the **Complete Geometry** toolbar, click  **Plot**.


3 Click the  **Zoom Extents** button in the **Graphics** toolbar.

Time=0.25 s

Volume: Magnetic flux density norm (T) Volume: Coil voltage (V)

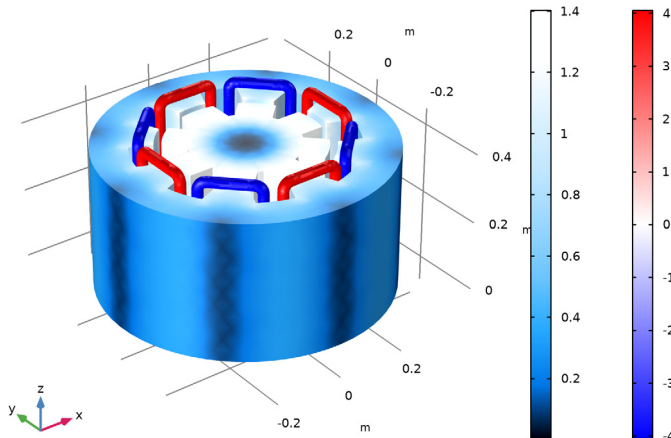


#### *Induced Coil Voltage*

- 1 In the **Home** toolbar, click  **Add Plot Group** and choose **ID Plot Group**.
- 2 In the **Settings** window for **ID Plot Group**, type **Induced Coil Voltage** in the **Label** text field.

#### *Global I*



- 1 Right-click **Induced Coil Voltage** and choose **Global**.
- 2 In the **Settings** window for **Global**, click **Replace Expression** in the upper-right corner of the **y-Axis Data** section. From the menu, choose **Component I (comp I)> Rotating Machinery, Magnetic (Magnetic Fields)>Coil parameters>rmm.VCoil\_I - Coil voltage - V**.

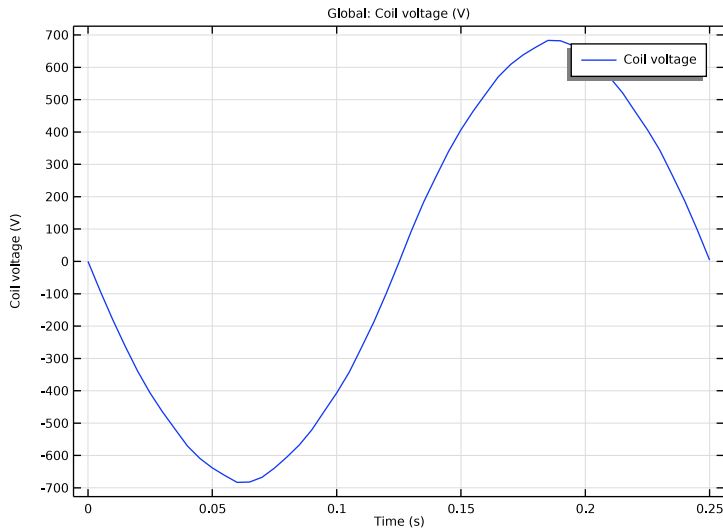3 In the **Induced Coil Voltage** toolbar, click  **Plot**.




Next, add the **Time to Frequency Losses** study to compute the loss.

#### ADD STUDY

- 1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **Preset Studies for Selected Physics Interfaces>Time to Frequency Losses**.
- 4 Click **Add Study** in the window toolbar.
- 5 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.


#### STUDY 2

*Step 1: Time to Frequency Losses*

- 1 In the **Settings** window for **Time to Frequency Losses**, locate the **Study Settings** section.
- 2 From the **Input study** list, choose **Study 1, Time Dependent**.
- 3 In the **Electrical period** text field, type 0.25.
- 4 In the **Home** toolbar, click  **Compute**.

## RESULTS

### *Volume Integration I*

- 1 In the **Results** toolbar, click  **More Derived Values** and choose **Integration> Volume Integration**.
- 2 Select Domains 2, 4, and 10 only.
- 3 In the **Settings** window for **Volume Integration**, locate the **Data** section.
- 4 From the **Dataset** list, choose **Study 2/Solution 4 (sol4)**.
- 5 Locate the **Expressions** section. In the table, enter the following settings:


Expression	Unit	Description
$rmm.Qh*16$	W	Loss power

- 6 Click  **Evaluate**.

The computed loss power is close to the value computed from the 2D model.

### *Animation I*

Finally, visualize the rotation of the generator by animating the solution.

- 1 In the **Results** toolbar, click  **Animation** and choose **Player**.
- 2 In the **Settings** window for **Animation**, locate the **Scene** section.
- 3 From the **Subject** list, choose **Complete Geometry**.
- 4 Locate the **Playing** section. From the **Repeat** list, choose **Forever**.
- 5 In the **Graphics** toolbar, use the **Play** and **Stop** buttons to control the animation.