



Channel Beam

Introduction

In the following example you build and solve a simple 3D beam model using the 3D Beam interface. This example calculates the deformation, section forces, and stresses in a cantilever beam, and compares the results with analytical solutions. The first few natural frequencies are also computed. The purpose of the example is twofold: It is a verification of the functionality of the beam element in COMSOL Multiphysics, and it explains in detail how to give input data and interpret results for a nontrivial cross section.

This example also illustrates how to use the **Beam Cross Section** interface to compute the beam section properties and evaluate the stress distribution within the beam cross section.

Model Definition

The physical geometry is displayed in [Figure 1](#). The finite element idealization consists of a single line.

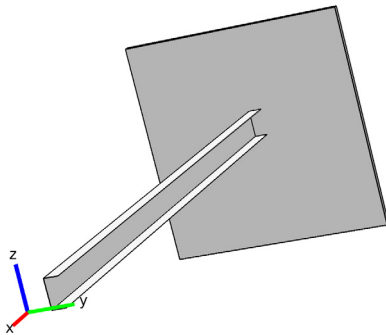


Figure 1: The physical geometry.

The cross section with its local coordinate system is shown in [Figure 2](#). The height of the cross section is 50 mm and the width is 25 mm. The thickness of the flanges is 6 mm, while the web has a thickness of 5 mm. Note that the global y direction corresponds to the local negative z direction, and the global z direction corresponds to the local y direction. In the

following, uppercase subscripts are used for the global directions and lowercase subscripts for the local directions.

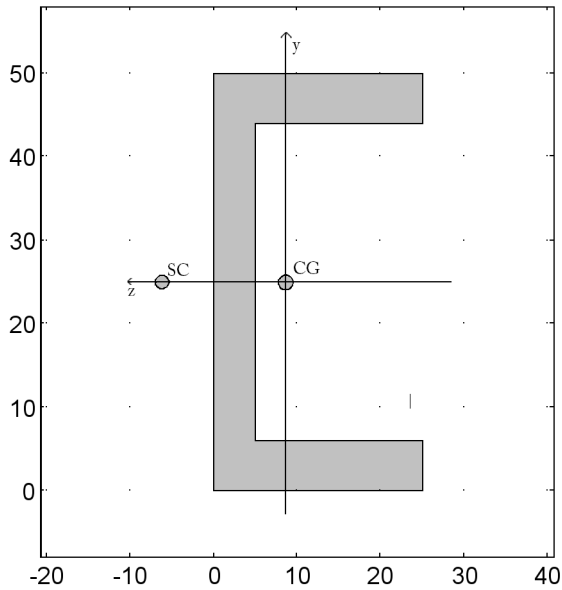


Figure 2: The beam cross section with local direction indicated.

For a detailed analysis, a case where the corners between the flange and the web are rounded are also studied. A 4 mm radius fillet is used at the external corner and a 2 mm radius fillet at the internal corner. This geometry is considered using the **Beam Cross Section** interface.

GEOMETRY

- Beam length, $L = 1$ m
- Cross-section area $A = 4.90 \cdot 10^{-4} \text{ m}^2$ (from the cross section library)
- Area moment of inertia in stiff direction, $I_{zz} = 1.69 \cdot 10^{-7} \text{ m}^4$
- Area moment of inertia in weak direction, $I_{yy} = 2.77 \cdot 10^{-8} \text{ m}^4$
- Torsional constant, $J = 5.18 \cdot 10^{-9} \text{ m}^4$
- Position of the shear center (SC) with respect to the area center of gravity (CG),
 $e_z = 0.0148$ m
- Torsional section modulus $W_t = 8.64 \cdot 10^{-7} \text{ m}^3$
- Ratio between maximum and average shear stress for shear in y direction, $\mu_y = 2.44$

- Ratio between maximum and average shear stress for shear in z direction, $\mu_z=2.38$
- Locations for axial stress evaluation are positioned at the outermost corners of the profile at the points
 - $(y_1, z_1)=(-0.025, -0.0164)$
 - $(y_2, z_2)=(0.025, -0.0164)$
 - $(y_3, z_3)=(0.025, 0.0086),$
 - $(y_4, z_4)=(-0.025, 0.0086)$
 measured in the local coordinate system. The indices of the coordinates are point identifiers.

The values above are based on the idealized geometry with sharp corners. In a separate study you compute the section properties including fillets, using the **Beam Cross Section** interface.

MATERIAL

- Young's modulus, $E = 210$ GPa
- Poisson's ratio, $\nu = 0.25$
- Mass density, $\rho = 7800$ kg/m³

CONSTRAINTS

One end of the beam is fixed.

LOADS

In the first load case, the beam is subjected to three forces and one twisting moment at the tip. The values are:

- Axial force $F_X = 10$ kN
- Transverse forces $F_Y = 50$ N and $F_Z = 100$ N
- Twisting moment $M_X = -10$ Nm

In the second load case, the beam is subjected to a gravity load in the negative Z direction.

The third case is an eigenfrequency analysis.

Results and Discussion

The analytical solutions for a slender cantilever beam with loads at the tip are summarized below. The displacements are

$$\delta_X = \delta_x = \frac{F_x L}{EA} = \frac{F_X L}{EA} = \frac{10000 \text{ N} \cdot 1 \text{ m}}{2 \cdot 10^{11} \text{ Pa} \cdot 4.90 \cdot 10^{-4} \text{ m}^2} = 1.02 \cdot 10^{-4} \text{ m}$$

$$\delta_Z = \delta_y = \frac{F_y L^3}{3EI_{zz}} = \frac{F_Z L^3}{3EI_{zz}} = \frac{100 \text{ N} \cdot (1 \text{ m})^3}{3 \cdot 2 \cdot 10^{11} \text{ Pa} \cdot 1.69 \cdot 10^{-7} \text{ m}^4} = 9.86 \cdot 10^{-4} \text{ m}$$

$$\delta_Y = -\delta_z = \frac{-F_z L^3}{3EI_{yy}} = \frac{F_Y L^3}{3EI_{yy}} = \frac{50 \text{ N} \cdot (1 \text{ m})^3}{3 \cdot 2 \cdot 10^{11} \text{ Pa} \cdot 2.77 \cdot 10^{-8} \text{ m}^4} = 3.01 \cdot 10^{-3} \text{ m}$$

$$\theta_X = \theta_x = \frac{M_x L}{GJ} = \frac{M_X L}{GJ} = \frac{-10 \text{ Nm} \cdot 1 \text{ m}}{\frac{2 \cdot 10^{11} \text{ Pa}}{2(1+0.25)} \cdot 5.18 \cdot 10^{-9} \text{ m}^4} = -2.41 \cdot 10^{-2} \text{ rad}$$

The stresses from the axial force, shear force, and torsion are constant along the beam, while the bending moment and bending stresses, are largest at the fixed end. The axial stresses at the fixed end caused by the different loads are computed as

$$\sigma_{x, F_x} = \frac{F_x}{A} = \frac{F_X}{A} = \frac{10000 \text{ N}}{4.90 \cdot 10^{-4} \text{ m}^2} = 2.04 \cdot 10^7 \text{ Pa}$$

$$\sigma_{x, M_z} = \frac{-M_z y}{I_{zz}} = \frac{-F_y L y}{I_{zz}} = \frac{-F_Z L y}{I_{zz}} = \frac{-100 \text{ N} \cdot 1 \text{ m}}{1.69 \cdot 10^{-7} \text{ m}^4} \cdot y = -5.92 \cdot 10^8 \frac{\text{Pa}}{\text{m}} \cdot y \quad (1)$$

$$\sigma_{x, M_y} = \frac{M_y z}{I_{yy}} = \frac{-F_z L z}{I_{yy}} = \frac{F_Y L z}{I_{yy}} = \frac{50 \text{ N} \cdot 1 \text{ m}}{2.77 \cdot 10^{-8} \text{ m}^4} \cdot z = 1.81 \cdot 10^9 \frac{\text{Pa}}{\text{m}} \cdot z \quad (2)$$

In [Table 1](#) the stresses in the stress evaluation points are summarized after insertion of the local coordinates y and z in [Equation 1](#) and [Equation 2](#).

TABLE 1: AXIAL STRESSES IN MPA AT EVALUATION POINTS.

| Point | Stress from $F_x (=F_X)$ | Stress from $F_y (=F_Z)$ | Stress from $F_z (=F_Y)$ | Total bending stress | Total axial stress |
|-------|--------------------------|--------------------------|--------------------------|----------------------|--------------------|
| 1 | 20.4 | 14.8 | -29.7 | -14.9 | 5.5 |
| 2 | 20.4 | -14.8 | -29.7 | -44.5 | -24.1 |
| 3 | 20.4 | -14.8 | 15.6 | 0.8 | 21.2 |
| 4 | 20.4 | 14.8 | 15.6 | 30.4 | 50.8 |

Due to the shear forces and twisting moment there are also shear stresses in the section. In general, the shear stresses have a complex distribution, which depends strongly on the geometry of the actual cross section. The peak values of the shear stress contributions from shear forces are

$$\begin{aligned}\tau_{sy, \max} &= \mu_y \tau_{sy, \text{mean}} = \mu_y \frac{F_y}{A} = \mu_y \frac{F_z}{A} = \\ &2.44 \cdot \frac{100 \text{ N}}{4.90 \cdot 10^{-4} \text{ m}^2} = 2.44 \cdot 2.04 \cdot 10^5 \text{ Pa} = 4.98 \cdot 10^5 \text{ Pa} \\ \tau_{sz, \max} &= \mu_z \tau_{sz, \text{mean}} = \mu_z \frac{F_z}{A} = \mu_z \frac{-F_y}{A} = \\ &2.38 \cdot \frac{-50 \text{ N}}{4.90 \cdot 10^{-4} \text{ m}^2} = -2.38 \cdot 1.02 \cdot 10^5 \text{ Pa} = -2.43 \cdot 10^5 \text{ Pa}\end{aligned}$$

The peak value of the shear stress created by torsion is

$$\tau_{t, \max} = \frac{|M_x|}{W_t} = \frac{|M_X|}{W_t} = \frac{10 \text{ Nm}}{8.64 \cdot 10^{-7} \text{ m}^3} = 11.6 \cdot 10^6 \text{ Pa}$$

Since the general cross-section data used for the analysis cannot predict the exact locations of the peak stresses from each type of action, a conservative scheme for combining the stresses is used in COMSOL Multiphysics. If the computed results exceeds allowable values somewhere in a beam structure, this may be due to this conservatism. You must then check the details, using information about the exact type of cross section and combination of loadings. This can be done using the **Beam Cross Section** interface.

The conservative maximum shear stresses are created by adding the maximum shear stress from torsion to the maximum shear stresses from shear force:

$$\begin{aligned}\tau_{xz, \max} &= |\tau_{sz, \max}| + \tau_{t, \max} = 11.8 \cdot 10^6 \text{ Pa} \\ \tau_{xy, \max} &= |\tau_{sy, \max}| + \tau_{t, \max} = 12.1 \cdot 10^6 \text{ Pa}\end{aligned}$$

A conservative equivalent stress is then computed as

$$\sigma_{\text{mises}} = \sqrt{\sigma_{\max}^2 + 3\tau_{xy, \max}^2 + 3\tau_{xz, \max}^2} = 58.6 \cdot 10^6 \text{ Pa}$$

The maximum normal stress, σ_{\max} , is taken as the highest absolute value in the any of the stress evaluation points (the rightmost column in [Table 1](#)).

The COMSOL results for the first load case give 58.6 MPa von Mises stress at the constrained end of the beam which is in total agreement with the analytical solution. Actually, the results would have been the same with any mesh density, because the formulation of the beam elements in COMSOL contains the exact solutions to beam problems with only point loads.

In the second load case there is an evenly distributed gravity load. Since the resultant of a gravity load acts through the mass center of the beam, it does not just cause pure bending but also a twist of the beam. The reason is that in order to cause pure bending, a transverse force must act through the shear center of the section. In COMSOL Multiphysics this effect is automatically accounted for when you apply an edge load. An additional edge moment is created, using the e_z (or, depending on load direction, e_y) cross section property. The analytical solution to the tip deflections in the self-weight problem is

$$\begin{aligned}\delta_z = -\delta_y &= \frac{-q_y L^4}{8EI_{zz}} = \frac{q_z L^4}{8EI_{zz}} = \frac{-\rho g A L^4}{8EI_{zz}} = \\ &= \frac{-8000 \frac{\text{kg}}{\text{m}^3} \cdot 9.81 \frac{\text{m}}{\text{s}^2} \cdot 4.90 \cdot 10^{-4} \text{ m}^2 \cdot (1 \text{ m})^4}{8 \cdot 2 \cdot 10^{11} \text{ Pa} \cdot 1.69 \cdot 10^{-7} \text{ m}^4} = -1.42 \cdot 10^{-4} \text{ m} \\ \theta_x &= \frac{m_x L^2}{2GJ} = \frac{q_y e_z L^2}{2GJ} = \frac{\rho g A e_z L^2}{2GJ} = \\ &= \frac{-8000 \frac{\text{kg}}{\text{m}^3} \cdot 9.81 \frac{\text{m}}{\text{s}^2} \cdot 4.90 \cdot 10^{-4} \text{ m}^2 \cdot 0.0148 \text{ m} \cdot (1 \text{ m})^2}{2 \cdot \frac{2 \cdot 10^{11} \text{ Pa}}{2(1+0.25)} \cdot 5.18 \cdot 10^{-9} \text{ m}^4} = -6.87 \cdot 10^{-2} \text{ rad}\end{aligned}$$

Also for this case, the COMSOL Multiphysics solution captures the analytical solution exactly. Note, however, that in this case the resolution of the stresses is mesh dependent.

When using a shear center offset as in this example, you must bear in mind that the beam theory assumes that torsional moments and shear forces are applied at the shear center, while axial forces and bending moments are referred to the center of gravity. Thus, when point loads are applied it may be necessary to account for this offset.

The mode shapes and the natural frequencies of the beam are of three types: tension, torsion, and bending. The analytical expressions for the natural frequencies of the different types are:

$$f_{n, \text{ tension}} = \frac{2n+1}{4L} \sqrt{\frac{E}{\rho}} \quad (3)$$

$$f_{n, \text{ torsion}} = \frac{2n+1}{4L} \sqrt{\frac{GJ}{\rho(I_{yy} + I_{zz})}} \quad (4)$$

$$f_{n, \text{ bending}} = \frac{k_n}{2\pi} \sqrt{\frac{EI}{\rho AL^4}} \quad (5)$$

$$\cos(\sqrt{k_n}) \cosh(\sqrt{k_n}) = -1$$

$$\Rightarrow k_n = 3.516, 22.03, 61.70, 120.9, 200.0, \dots$$

In [Table 2](#) the computed results are compared with the results from [Equation 3](#), [Equation 4](#), and [Equation 5](#). The agreement is generally very good. The largest difference occurs in Mode 12. This is the fifth order torsional mode, for which the mesh is not sufficient for a high accuracy resolution.

TABLE 2: COMPARISON BETWEEN ANALYTICAL AND COMPUTED NATURAL FREQUENCIES.

| Mode number | Mode type | Analytical frequency (Hz) | COMSOL result (Hz) |
|-------------|------------------|---------------------------|--------------------|
| 1 | First y bending | 21.02 | 21.04 |
| 2 | First z bending | 51.96 | 51.96 |
| 3 | First torsion | 128.3 | 128.4 |
| 4 | Second y bending | 131.7 | 131.8 |
| 5 | Second z bending | 325.5 | 325.7 |
| 6 | Third y bending | 368.8 | 369.2 |
| 7 | Second torsion | 384.9 | 388.4 |

TABLE 2: COMPARISON BETWEEN ANALYTICAL AND COMPUTED NATURAL FREQUENCIES.

| Mode number | Mode type | Analytical frequency (Hz) | COMSOL result (Hz) |
|-------------|------------------|---------------------------|--------------------|
| 8 | Third torsion | 641.5 | 658.1 |
| 9 | Fourth y bending | 722.8 | 724.1 |
| 10 | Fourth torsion | 898.1 | 943.7 |
| 11 | Third z bending | 911.8 | 912.0 |
| 12 | Fifth torsion | 1155 | 1251 |
| 13 | Fifth y bending | 1196 | 1199 |
| 14 | First axial | 1250 | 1251 |

When the computed section forces at the constrained end of the beam are fed into the **Beam Cross Section** interface, [Figure 3](#) below shows the von Mises stress distribution within the cross section. One can notice that the maximum stress value is about 66 MPa which is slightly higher than the value computed in the beam interface (58 MPa). The stress computed with analytical cross section data is slightly underestimated. The reason is that the geometric representation used includes the fillets. If exactly the same cross section data are used, the stresses computed by the Beam interface are always conservative.

In [Figure 4](#) to [Figure 6](#) examples are shown of how the stress distributions from the individual section forces are displayed in the **Beam Cross Section** interface.

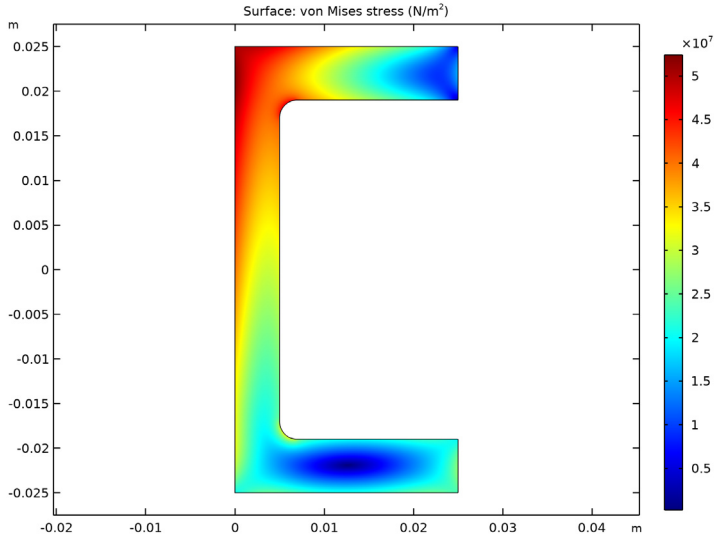


Figure 3: von Mises stress distribution at the fixed end ($x = 0$).

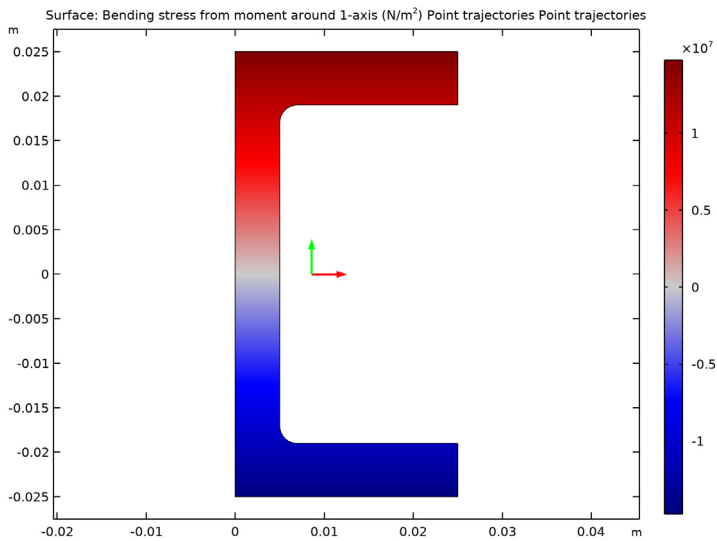


Figure 4: Plot of stresses from a bending moment. The center of gravity is highlighted.

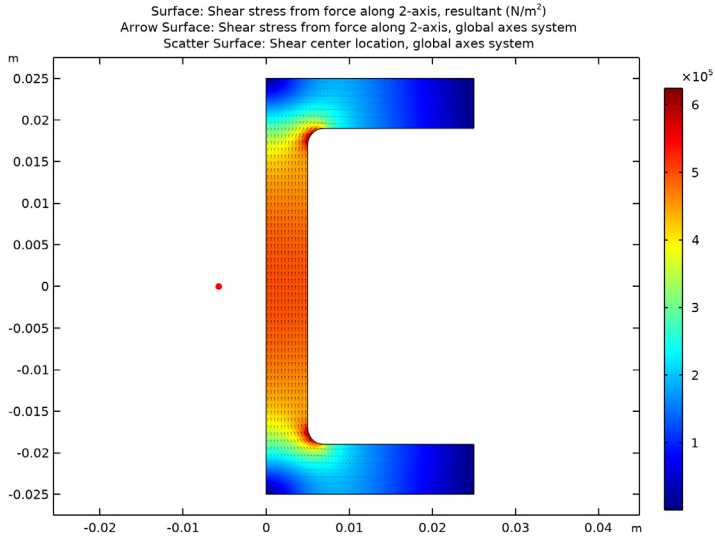


Figure 5: Plot of stresses from shear force. The shear center is highlighted.

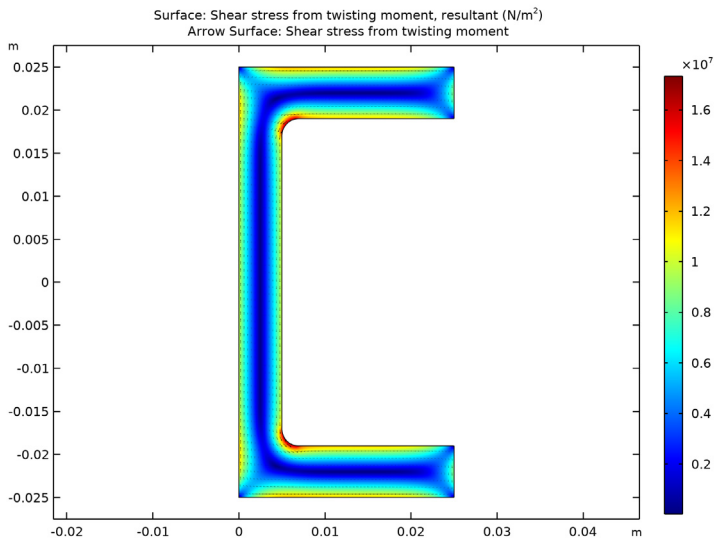


Figure 6: Plot of shear stresses from torsion.

Table 3 lists the beam cross section data computed using the **Beam Cross Section** interface and a geometry with fillets. There are significant differences in the maximum shear stress factor and torsional section modulus values. The stress concentration around the round corner explains these differences.

TABLE 3: COMPUTED BEAM CROSS SECTION DATA.

| Parameter | Value |
|--|---------------------------|
| Area | 4.8485e-4 m ² |
| First moment of inertia | 1.6556e-7 m ⁴ |
| Distance to shear center in the first principal direction | 0.014611 m |
| Second moment of inertia | 2.7252e-8 m ⁴ |
| Distance to shear center in the second principal direction | -9.5565e-9 m |
| Torsional constant | 4.79754e-9 m ⁴ |
| Torsional section modulus | 5.6922e-7 m ³ |
| Max shear stress factor in the second principal direction | 3.0504 |
| Max shear stress factor in the first principal direction | 3.6711 |


If these cross section data are used in the Beam interface, the maximum von Mises stress is 73 MPa, which is slightly above the real value.

Application Library path: Structural_Mechanics_Module/
Verification_Examples/channel_beam



Modeling Instructions

From the **File** menu, choose **New**.

NEW

In the **New** window, click  **Model Wizard**.

MODEL WIZARD

- 1 In the **Model Wizard** window, click  **3D**.
- 2 In the **Select Physics** tree, select **Structural Mechanics>Beam (beam)**.
- 3 Click **Add**.
- 4 Click  **Study**.

5 In the **Select Study** tree, select **General Studies>Stationary**.

6 Click  **Done**.

GLOBAL DEFINITIONS

Parameters 1

1 In the **Model Builder** window, under **Global Definitions** click **Parameters 1**.

2 In the **Settings** window for **Parameters**, locate the **Parameters** section.

3 In the table, enter the following settings:

| Name | Expression | Value | Description |
|------|--------------|------------------------|-----------------------|
| h1 | 25[mm] | 0.025 m | Flange width |
| h2 | 50[mm] | 0.05 m | Section height |
| t1 | 5[mm] | 0.005 m | Web thickness |
| t2 | 6[mm] | 0.006 m | Flange thickness |
| L | 1[m] | 1 m | Beam length |
| Eb | 2e11[Pa] | 2E11 Pa | Young's modulus |
| nub | 0.25 | 0.25 | Poisson's ratio |
| rhob | 8000[kg/m^3] | 8000 kg/m ³ | Density |
| FX | 10e3[N] | 10000 N | Force in X direction |
| FY | 50[N] | 50 N | Force in Y direction |
| FZ | 100[N] | 100 N | Force in Z direction |
| MX | -10[N*m] | -10 N·m | Moment in X direction |

Load Group 1

1 In the **Model Builder** window, right-click **Global Definitions** and choose **Load and Constraint Groups>Load Group**.

2 In the **Settings** window for **Load Group**, type edge in the **Parameter name** text field.

Load Group 2

1 In the **Model Builder** window, right-click **Load and Constraint Groups** and choose **Load Group**.

2 In the **Settings** window for **Load Group**, type point in the **Parameter name** text field.

GEOMETRY 1

Polygon 1 (poll)

1 In the **Geometry** toolbar, click  **More Primitives** and choose **Polygon**.

2 In the **Settings** window for **Polygon**, locate the **Coordinates** section.

3 In the table, enter the following settings:

| x (m) | y (m) | z (m) |
|-------|-------|-------|
| 0 | 0 | 0 |
| 1 | 0 | 0 |

4 Click  **Build All Objects**.

MATERIALS

Material 1 (mat1)

1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Materials** and choose **Blank Material**.

2 In the **Settings** window for **Material**, locate the **Material Contents** section.

3 In the table, enter the following settings:

| Property | Variable | Value | Unit | Property group |
|-----------------|----------|-------|-------------------|----------------|
| Young's modulus | E | Eb | Pa | Basic |
| Poisson's ratio | nu | nub | l | Basic |
| Density | rho | rhob | kg/m ³ | Basic |

DEFINITIONS

Define the cross section parameters to compute the analytical values of the displacement and section forces of the beam.

Variables 1

1 In the **Model Builder** window, under **Component 1 (comp1)** right-click **Definitions** and choose **Variables**.

2 In the **Settings** window for **Variables**, locate the **Variables** section.


3 In the table, enter the following settings:

| Name | Expression | Unit | Description |
|------|-------------------------------|----------------|-------------------------------------|
| Gb | $Eb / (2 * (1 + \text{nub}))$ | Pa | Shear Modulus |
| A | $4.9e-4 [m^2]$ | m ² | Cross section area |
| Iyy | $2.77e-8 [m^4]$ | m ⁴ | Area moment of inertia, y component |
| Izz | $1.69e-7 [m^4]$ | m ⁴ | Area moment of inertia, z component |

| Name | Expression | Unit | Description |
|-------|--------------|------|--|
| Jbeam | 5.18e-9[m^4] | m^4 | Torsion constant |
| Wt | 8.64e-7[m^3] | m^3 | Torsion section modulus |
| ey | 0[m] | m | Shear center relative to centroid, y-coordinate |
| ez | 0.0148[m] | m | Shear center relative to centroid, z-coordinate |
| muy | 2.44 | | Max shear stress factor in local y direction |
| muz | 2.38 | | Maximum shear stress factor in local z direction |
| y1 | -0.025[m] | m | Evaluation point 1, local y-coordinate |
| z1 | -0.0164[m] | m | Evaluation point 1, local z-coordinate |
| y2 | 0.025[m] | m | Evaluation point 2, local y-coordinate |
| z2 | -0.0164[m] | m | Evaluation point 2, local z-coordinate |
| y3 | 0.025[m] | m | Evaluation point 3, local y-coordinate |
| z3 | 0.0086[m] | m | Evaluation point 3, local z-coordinate |
| y4 | -0.025[m] | m | Evaluation point 4, local y-coordinate |
| z4 | 0.0086[m] | m | Evaluation point 4, local z-coordinate |

Define an analytic function to evaluate the bending stress at different locations of the cross section.

sigmabx

- 1 In the **Home** toolbar, click  **Functions** and choose **Global>Analytic**.
- 2 In the **Settings** window for **Analytic**, type sigmabx in the **Function name** text field.
- 3 Locate the **Definition** section. In the **Expression** text field, type $-FZ*L*y/comp1.Izz + FY*L*z/comp1.Iyy$.
- 4 In the **Arguments** text field, type y, z.

5 Locate the **Plot Parameters** section. In the table, enter the following settings:

| Argument | Lower limit | Upper limit |
|----------|-------------|-------------|
| y | $-h2/2$ | $h2/2$ |
| z | $-h1/2$ | $h1/2$ |

6 Locate the **Units** section. In the **Arguments** text field, type m , m .

7 In the **Function** text field, type N/m^2 .

8 Right-click **Analytic 1 (an1)** and choose **Rename**.

9 In the **Rename Analytic** dialog box, type σ_{max} in the **New label** text field.

10 Click **OK**.

Define the variables for analytical values of the displacements, rotations and stresses.

Variables 2

1 In the **Model Builder** window, right-click **Definitions** and choose **Variables**.

2 In the **Settings** window for **Variables**, locate the **Variables** section.

3 In the table, enter the following settings:

| Name | Expression | Unit | Description |
|-----------|---|---------|-------------------------------------|
| deltaX | $FX \cdot L / (Eb \cdot A)$ | m | X displacement |
| deltaY | $FY \cdot L^3 / (3 \cdot Eb \cdot Iyy)$ | m | Y displacement |
| deltaZ | $FZ \cdot L^3 / (3 \cdot Eb \cdot Izz)$ | m | Z displacement |
| thetaX | $MX \cdot L / (Gb \cdot Jbeam)$ | | Twist |
| sigmax_Fx | FX / A | N/m^2 | Stress due to axial load |
| tausy_max | $\mu_{xy} \cdot FZ / A$ | N/m^2 | Maximum shear stress due y force |
| tausz_max | $-\mu_{xz} \cdot FY / A$ | N/m^2 | Maximum shear stress due to z force |
| taut_max | $abs(MX) / Wt$ | N/m^2 | Shear stress due to torsion |
| tauxz_max | $abs(tausz_max) + taut_max$ | N/m^2 | Maximum shear stress, z component |

| Name | Expression | Unit | Description |
|-----------|---|------------------|--|
| tauxy_max | abs(tausy_max)+taut_max | N/m ² | Maximum shear stress, y component |
| sigx1 | sigmax_Fx+sigmabx(y1,z1) | N/m ² | Normal stress at point 1 |
| sigx2 | sigmax_Fx+sigmabx(y2,z2) | N/m ² | Normal stress at point 2 |
| sigx3 | sigmax_Fx+sigmabx(y3,z3) | N/m ² | Normal stress at point 3 |
| sigx4 | sigmax_Fx+sigmabx(y4,z4) | N/m ² | Normal stress at point 4 |
| sigx_max | max(max(max(sigx1,sigx2), sigx3),sigx4) | N/m ² | Maximum normal stress in cross section |
| sig_mises | sqrt(sigx_max^2+3*tauxy_max^2+ 3*tauxz_max^2) | N/m ² | Maximum von Mises stress |
| deltaZ_g | -rhob*g_const*A*L^4/(8*Eb*Izz) | m | Z displacement due to gravity load |
| thetaX_g | rhob*g_const*A*ez*L^2/(2*Gb*Jbeam) | | Twist due to gravity load |

BEAM (BEAM)

Cross-Section Data 1

- 1 In the **Model Builder** window, under **Component 1 (comp1)>Beam (beam)** click **Cross-Section Data 1**.
- 2 In the **Settings** window for **Cross-Section Data**, locate the **Cross-Section Definition** section.
- 3 From the list, choose **Common sections**.
- 4 From the **Section type** list, choose **U-profile**.
- 5 In the h_y text field, type h2.
- 6 In the h_z text field, type h1.
- 7 In the t_y text field, type t2.
- 8 In the t_z text field, type t1.

Section Orientation 1

- 1 In the **Model Builder** window, click **Section Orientation 1**.

- 2 In the **Settings** window for **Section Orientation**, locate the **Section Orientation** section.
- 3 From the **Orientation method** list, choose **Orientation vector**.
- 4 Specify the V vector as

| | |
|---|---|
| 0 | X |
| 0 | Y |
| 1 | Z |


Gravity 1

- 1 In the **Physics** toolbar, click  **Edges** and choose **Gravity**.
- 2 Select Edge 1 only.
- 3 In the **Physics** toolbar, click  **Load Group** and choose **Load Group 1**.

Fixed Constraint 1

- 1 In the **Physics** toolbar, click  **Points** and choose **Fixed Constraint**.
- 2 Select Point 1 only.

Point Load 1

- 1 In the **Physics** toolbar, click  **Points** and choose **Point Load**.
- 2 Select Point 2 only.
- 3 In the **Settings** window for **Point Load**, locate the **Force** section.
- 4 Specify the F_P vector as

| | |
|----|---|
| FX | x |
| FY | y |
| FZ | z |

- 5 Locate the **Moment** section. Specify the M_P vector as

| | |
|----|---|
| MX | x |
| 0 | y |
| 0 | z |

- 6 In the **Physics** toolbar, click  **Load Group** and choose **Load Group 2**.

STUDY 1

Step 1: Stationary

- 1 In the **Model Builder** window, under **Study 1** click **Step 1: Stationary**.

- 2 In the **Settings** window for **Stationary**, click to expand the **Study Extensions** section.
- 3 Select the **Define load cases** check box.
- 4 Click **+** **Add** twice to add two rows to the load case table.
- 5 In the table, enter the following settings:


| Load case | edge | Weight | point | Weight |
|------------|------|--------|-------|--------|
| Point load | | 1.0 | √ | 1.0 |
| Edge load | √ | 1.0 | | 1.0 |

- 6 In the **Model Builder** window, right-click **Study 1** and choose **Rename**.
- 7 In the **Rename Study** dialog box, type Stationary Study: Beam in the **New label** text field.
- 8 Click **OK**.
- 9 In the **Home** toolbar, click **= Compute**.

RESULTS


Stress (beam)

The first default plot shows the von Mises stress distribution for the second load case. You can switch to the first load case to evaluate von Mises stress distribution caused by the point load.

- 1 In the **Settings** window for **3D Plot Group**, locate the **Data** section.
- 2 From the **Load case** list, choose **Point load**.
- 3 In the **Stress (beam)** toolbar, click  **Plot**.

The following steps illustrate how to evaluate the displacement and stress values in specific tables.

Case 1: Displacement/Rotation

- 1 In the **Results** toolbar, click  **Point Evaluation**.
- 2 In the **Settings** window for **Point Evaluation**, type Case1: Displacement/Rotation in the **Label** text field.
- 3 Locate the **Data** section. From the **Parameter selection (Load case)** list, choose **First**.
- 4 Select Point 2 only.
- 5 Click **Replace Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Displacement>Displacement field - m>u - Displacement field, x component**.

- 6 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>deltaX - X displacement - m**.
- 7 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Displacement>Displacement field - m>v - Displacement field, y component**.
- 8 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>deltaY - Y displacement - m**.
- 9 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Displacement>Displacement field - m>w - Displacement field, z component**.
- 10 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>deltaZ - Z displacement - m**.
- 11 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Displacement>Rotation field - rad>thx - Rotation field, X component**.
- 12 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>thetaX - Twist**.
- 13 Locate the **Expressions** section. In the table, enter the following settings:

| Expression | Unit | Description |
|------------|------|--------------------|
| u | m | delta_x computed |
| deltaX | m | delta_x analytical |
| v | m | delta_y computed |
| deltaY | m | delta_y analytical |
| w | m | delta_z computed |
| deltaZ | m | delta_z analytical |
| thx | rad | theta_x computed |
| thetaX | 1 | theta_x analytical |

- 14 Click  **Evaluate**.

Case 1: Displacement/Rotation

- 1 In the **Model Builder** window, expand the **Results>Tables** node, then click **Table 1**.
- 2 In the **Settings** window for **Table**, type Case1: Displacement/Rotation in the **Label** text field.

Case2: Displacement/Rotation

- 1 In the **Results** toolbar, click ^{8.85}_{e-12} **Point Evaluation**.
- 2 In the **Settings** window for **Point Evaluation**, type Case2: Displacement/Rotation in the **Label** text field.
- 3 Select Point 2 only.
- 4 Locate the **Data** section. From the **Parameter selection (Load case)** list, choose **Last**.
- 5 Click **Replace Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Displacement>Displacement field - m>w - Displacement field, z component**.
- 6 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>deltaZ_g - Z displacement due to gravity load - m**.
- 7 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Displacement>Rotation field - rad>thx - Rotation field, X component**.
- 8 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>thetaX_g - Twist due to gravity load**.
- 9 Locate the **Expressions** section. In the table, enter the following settings:

| Expression | Unit | Description |
|------------|------|--------------------|
| w | m | delta_z computed |
| deltaZ_g | m | delta_z analytical |
| thx | rad | theta_x computed |
| thetaX_g | 1 | theta_x analytical |

- 10 Click **Evaluate**.

Case2: Displacement/Rotation

- 1 In the **Model Builder** window, under **Results>Tables** click **Table 2**.
- 2 In the **Settings** window for **Table**, type Case2: Displacement/Rotation in the **Label** text field.

Axial Stress from Fx

- 1 In the **Results** toolbar, click ^{8.85}_{e-12} **Point Evaluation**.
- 2 Select Point 2 only.
- 3 In the **Settings** window for **Point Evaluation**, locate the **Data** section.

- 4 From the **Parameter selection (Load case)** list, choose **First**.
- 5 In the **Label** text field, type Axial Stress from Fx.
- 6 Click **Replace Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at first evaluation point>beam.s1 - Normal stress at first evaluation point - N/m²**.
- 7 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at second evaluation point>beam.s2 - Normal stress at second evaluation point - N/m²**.
- 8 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at third evaluation point>beam.s3 - Normal stress at third evaluation point - N/m²**.
- 9 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at fourth evaluation point>beam.s4 - Normal stress at fourth evaluation point - N/m²**.
- 10 Locate the **Expressions** section. In the table, enter the following settings:


| Expression | Unit | Description |
|------------|------|--------------|
| beam.s1 | MPa | first point |
| beam.s2 | MPa | second point |
| beam.s3 | MPa | third point |
| beam.s4 | MPa | fourth point |

- 11 Click  **Evaluate**.

Normal Stress from Fx

- 1 In the **Model Builder** window, under **Results>Tables** click **Table 3**.
- 2 In the **Settings** window for **Table**, type Normal Stress from Fx in the **Label** text field.

Total Bending Stress

- 1 In the **Results** toolbar, click  **Point Evaluation**.
- 2 In the **Settings** window for **Point Evaluation**, type Total Bending Stress in the **Label** text field.
- 3 Locate the **Data** section. From the **Parameter selection (Load case)** list, choose **First**.

- 4 Select Point 1 only.
- 5 Click **Replace Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at first evaluation point>beam.sb1 - Bending stress at first evaluation point - N/m²**.
- 6 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Functions>sigmabx(y, z) - sigmabx**.
- 7 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at second evaluation point>beam.sb2 - Bending stress at second evaluation point - N/m²**.
- 8 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Functions>sigmabx(y, z) - sigmabx**.
- 9 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at third evaluation point>beam.sb3 - Bending stress at third evaluation point - N/m²**.
- 10 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Functions>sigmabx(y, z) - sigmabx**.
- 11 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>Stress variables at fourth evaluation point>beam.sb4 - Bending stress at fourth evaluation point - N/m²**.
- 12 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Functions>sigmabx(y, z) - sigmabx**.
- 13 Locate the **Expressions** section. In the table, enter the following settings:


| Expression | Unit | Description |
|-----------------|------|--------------------------|
| beam.sb1 | MPa | first point, computed |
| sigmabx(y1, z1) | MPa | first point, analytical |
| beam.sb2 | MPa | second point, computed |
| sigmabx(y2, z2) | MPa | second point, analytical |
| beam.sb3 | MPa | third point, computed |
| sigmabx(y3, z3) | MPa | third point, analytical |
| beam.sb4 | MPa | fourth point, computed |
| sigmabx(y4, z4) | MPa | fourth point, analytical |

14 Click  Evaluate.

Total Bending Stress

- 1 In the **Model Builder** window, under **Results>Tables** click **Table 4**.
- 2 In the **Settings** window for **Table**, type Total Bending Stress in the **Label** text field.

Shear Stress

- 1 In the **Results** toolbar, click  **Point Evaluation**.
- 2 In the **Settings** window for **Point Evaluation**, type Shear Stress in the **Label** text field.
- 3 Locate the **Data** section. From the **Parameter selection (Load case)** list, choose **First**.
- 4 Select Point 1 only.
- 5 Click **Replace Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>beam.tsymax - Max shear stress from shear force, y direction - N/m²**.
- 6 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>tausy_max - Maximum shear stress due y force - N/m²**.
- 7 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>beam.tszmax - Max shear stress from shear force, z direction - N/m²**.
- 8 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>tausz_max - Maximum shear stress due to z force - N/m²**.
- 9 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>beam.ttmax - Max torsional shear stress - N/m²**.
- 10 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>taut_max - Shear stress due to torsion - N/m²**.
- 11 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>beam.txymax - Max shear stress, y direction - N/m²**.
- 12 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>tauxy_max - Maximum shear stress, y component - N/m²**.

13 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>beam.tzxmax - Max shear stress, z direction - N/m²**.

14 Click **Add Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Definitions>Variables>tauxz_max - Maximum shear stress, z component - N/m²**.

15 Locate the **Expressions** section. In the table, enter the following settings:

| Expression | Unit | Description |
|--------------|------|---|
| beam.tsymax | MPa | Max shear stress from shear force, y direction (Computed) |
| tausy_max | MPa | Max shear stress from shear force, y direction (Analytical) |
| beam.tszmax | MPa | Max shear stress from shear force, z direction (Computed) |
| tausz_max | MPa | Max shear stress from shear force, z direction (Analytical) |
| beam.ttmax | MPa | Max torsional shear stress (Computed) |
| taut_max | MPa | Max torsional shear stress (Analytical) |
| beam.txy_max | MPa | Max shear stress, y direction (Computed) |
| tauxy_max | MPa | Max shear stress, y direction (Analytical) |
| beam.txz_max | MPa | Max shear stress, z direction (Computed) |
| tauxz_max | MPa | Max shear stress, z direction (Analytical) |

16 Click  **Evaluate**.

Perform an eigenfrequency analysis.

Shear Stress

1 In the **Model Builder** window, under **Results>Tables** click **Table 5**.

2 In the **Settings** window for **Table**, type Shear Stress in the **Label** text field.

ADD STUDY

1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.

2 Go to the **Add Study** window.

3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies>Eigenfrequency**.

4 Click **Add Study** in the window toolbar.


5 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.

EIGENFREQUENCY STUDY: BEAM

- 1 In the **Model Builder** window, right-click **Study 2** and choose **Rename**.
- 2 In the **Rename Study** dialog box, type Eigenfrequency Study: Beam in the **New label** text field.
- 3 Click **OK**.


Step 1: Eigenfrequency

Before computing the study, increase the desired number of eigenfrequencies.

- 1 In the **Model Builder** window, under **Eigenfrequency Study: Beam** click **Step 1: Eigenfrequency**.
- 2 In the **Settings** window for **Eigenfrequency**, locate the **Study Settings** section.
- 3 Select the **Desired number of eigenfrequencies** check box.
- 4 In the associated text field, type 20.
- 5 In the **Home** toolbar, click  **Compute**.

RESULTS


Mode Shape (beam)

- 1 In the **Settings** window for **3D Plot Group**, locate the **Data** section.
- 2 From the **Eigenfrequency (Hz)** list, choose **51.956**.
- 3 In the **Mode Shape (beam)** toolbar, click  **Plot**.


The following steps illustrate how to use the **Beam Cross Section** interface to compute beam physical properties and evaluate stresses within a cross section.

Cut Point 3D 1

Start by evaluating the section forces at the fixed end of the beam. These values are needed to get an accurate stress distribution within the beam cross section. To make it possible to change this location we start by creating a **Cut Point**.

- 1 In the **Results** toolbar, click  **Cut Point 3D**.
- 2 In the **Settings** window for **Cut Point 3D**, locate the **Point Data** section.
- 3 In the **X** text field, type 0.
- 4 In the **Y** text field, type 0.
- 5 In the **Z** text field, type 0.

Section Forces

- 1 In the **Results** toolbar, click  **Point Evaluation**.

- 2 In the **Settings** window for **Point Evaluation**, type **Section Forces** in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Cut Point 3D I**.
- 4 Locate the **Expressions** section. In the table, enter the following settings:

| Expression | Unit | Description |
|------------|------|-------------|
| beam.Nx1 | N | N |
| beam.Mz1 | N*m | M1 |
| beam.Ty1 | N | T2 |
| beam.My1 | N*m | M2 |
| beam.Tz1 | N | T1 |
| beam.Mx1 | N*m | Mt |

- 5 Click  **Evaluate**.



Section Forces

- 1 In the **Model Builder** window, under **Results>Tables** click **Table 6**.
- 2 In the **Settings** window for **Table**, type **Section Forces** in the **Label** text field.


ADD COMPONENT

In the **Model Builder** window, right-click the root node and choose **Add Component>2D**.

ADD PHYSICS

- 1 In the **Home** toolbar, click  **Add Physics** to open the **Add Physics** window.
- 2 Go to the **Add Physics** window.
- 3 In the tree, select **Structural Mechanics>Beam Cross Section (bcs)**.
- 4 Find the **Physics interfaces in study** subsection. In the table, clear the **Solve** check boxes for **Stationary Study: Beam** and **Eigenfrequency Study: Beam**.
- 5 Click **Add to Component 2** in the window toolbar.
- 6 In the **Home** toolbar, click  **Add Physics** to close the **Add Physics** window.

ADD STUDY

- 1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies>Stationary**.
- 4 Find the **Physics interfaces in study** subsection. In the table, clear the **Solve** check box for **Beam (beam)**.
- 5 Click **Add Study** in the window toolbar.

6 In the **Model Builder** window, click the root node.

7 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.

COMPONENT 2 (COMP2)

In the **Model Builder** window, collapse the **Component 2 (comp2)** node.

STATIONARY STUDY: BEAM CROSS SECTION

1 In the **Model Builder** window, right-click **Study 3** and choose **Rename**.

2 In the **Rename Study** dialog box, type Stationary Study: Beam Cross Section in the **New label** text field.

3 Click **OK**.

Use the predefined Generic C-beam geometry part to draw the beam section geometry.

GEOMETRY 2

In the **Model Builder** window, under **Component 2 (comp2)** click **Geometry 2**.

PART LIBRARIES

1 In the **Home** toolbar, click  **Windows** and choose **Part Libraries**.

2 In the **Part Libraries** window, select **Structural Mechanics Module>Beams>Generic>C_beam_generic** in the tree.

3 Click  **Add to Geometry**.

GEOMETRY 2

Generic C-beam 1 (p1)

1 In the **Model Builder** window, under **Component 2 (comp2)>Geometry 2** click **Generic C-beam 1 (p1)**.



2 In the **Settings** window for **Part Instance**, locate the **Input Parameters** section.

3 In the table, enter the following settings:

| Name | Expression | Value | Description |
|------|------------|---------|-------------------|
| d | h2 | 0.05 m | Beam height |
| b | h1 | 0.025 m | Flange width |
| tw | t1 | 0.005 m | Web thickness |
| tf | t2 | 0.006 m | Flange thickness |
| rl | 2[mm] | 0.002 m | Web fillet radius |

| Name | Expression | Value | Description |
|-------|------------|-------|--------------------------------------|
| r2 | 0 | 0 mm | Flange fillet radius |
| slope | 0 | 0 | Flange slope [%] |
| u | 0 | 0 mm | Flange thickness evaluation location |


Form Union (fin)

- 1 In the **Model Builder** window, click **Form Union (fin)**.
- 2 In the **Settings** window for **Form Union/Assembly**, click  **Build Selected**.
- 3 Click the  **Zoom Extents** button in the **Graphics** toolbar.

BEAM CROSS SECTION (BCS)

Input the section force data evaluated previously from the **Beam** into **Beam Cross Section**. To automate this process of transferring the section forces at any arbitrary location, create a model method first.

NEW METHOD

- 1 In the **Developer** toolbar, click  **New Method**.
- 2 In the **New Method** dialog box, type EvaluateSectionForces in the **Name** text field.
- 3 Click **OK**.

APPLICATION BUILDER

EvaluateSectionForces

- 1 In the **Application Builder** window, under **Methods** click **EvaluateSectionForces**.
- 2 Copy the following code into the **EvaluateSectionForces** window:


```
double Len = model.param().evaluate("L");
String xPos = xp;
try {
    double xP = Double.valueOf(xp);
    if (xP < 0) {
        alert("Evaluation point out of range. Using the root of the beam for
evaluation.", "Evaluation point out of range warning");
        xPos = "0"
    }
    if (xP > Len) {
        alert("Evaluation point out of range. Using the tip of the beam for
evaluation.", "Evaluation point out of range warning");
        xPos = "L";
    }
} catch (Exception e) {
}
}
```

```

with(model.result().dataset("cpt1"));
  set("pointx", xPos);
endwith();

double[][] SecForce = model.result().numerical("pev6").getReal();
with(model.component("comp2").physics("bcs").prop("UserInput"));
  set("N", Double.toString(SecForce[0][0]));
  set("M1", Double.toString(SecForce[1][0]));
  set("T2", Double.toString(SecForce[2][0]));
  set("M2", Double.toString(SecForce[3][0]));
  set("T1", Double.toString(SecForce[4][0]));
  set("Mt", Double.toString(SecForce[5][0]));
endwith();

```


- 3 In the **Settings** window for **Method**, locate the **Inputs and Output** section.
- 4 Find the **Inputs** subsection. Click  **Add**.
- 5 In the table, enter the following settings:

| Name | Type | Default | Description | Unit |
|------|--------|---------|-------------|------|
| xp | String | 0 | | |

METHODS


In the **Home** toolbar, click  **Model Builder** to switch to the main desktop.

GLOBAL DEFINITIONS

Click  **Method Call** and choose **EvaluateSectionForces**.

EvaluateSectionForces I

Run the method **EvaluateSectionForces** to transfer the cross section forces in **Beam Cross Section** interface.

1 Click  **Run Method Call** and choose **EvaluateSectionForces I**.

STATIONARY STUDY: BEAM CROSS SECTION

Click  **Compute**.

RESULTS

Bending Moment M1 (bcs)

Evaluate the beam physical properties required for the **Beam** interface.

Section Properties

In the **Model Builder** window, right-click **Section Properties** and choose **Evaluate>New Table**.


Section Properties

- 1 In the **Model Builder** window, under **Results>Tables** click **Table 7**.
- 2 In the **Settings** window for **Table**, type Section Properties in the **Label** text field.

BEAM (BEAM)

In the **Model Builder** window, under **Component 1 (comp1)** click **Beam (beam)**.

Cross-Section Data 2

- 1 In the **Physics** toolbar, click  **Edges** and choose **Cross-Section Data**.
- 2 Select Edge 1 only.
- 3 In the **Settings** window for **Cross-Section Data**, locate the **Basic Section Properties** section.
- 4 In the A text field, type comp2.bcs.A.
- 5 In the I_{zz} text field, type comp2.bcs.I1.
- 6 In the e_z text field, type comp2.bcs.ei1.
- 7 In the I_{yy} text field, type comp2.bcs.I2.
- 8 In the e_y text field, type comp2.bcs.ei2.
- 9 In the J text field, type comp2.bcs.J.
- 10 Click to expand the **Stress Evaluation Properties** section. In the h_y text field, type comp2.bcs.h2.
- 11 In the h_z text field, type comp2.bcs.h1.
- 12 In the w_t text field, type comp2.bcs.Wt.
- 13 In the μ_y text field, type comp2.bcs.mu2.
- 14 In the μ_z text field, type comp2.bcs.mu1.


Section Orientation 1

- 1 In the **Model Builder** window, expand the **Cross-Section Data 2** node, then click **Section Orientation 1**.
- 2 In the **Settings** window for **Section Orientation**, locate the **Section Orientation** section.
- 3 Specify the P vector as

| | |
|---|---|
| 0 | X |
| 0 | Y |
| 1 | Z |

ADD STUDY

- 1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.


- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies>Stationary**.
- 4 Find the **Physics interfaces in study** subsection. In the table, clear the **Solve** check box for **Beam Cross Section (bcs)**.
- 5 Click **Add Study** in the window toolbar.
- 6 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.

STATIONARY STUDY: BEAM (INPUTS FROM BEAM CROSS SECTION)

- 1 In the **Model Builder** window, click **Study 4**.
- 2 In the **Settings** window for **Study**, locate the **Study Settings** section.
- 3 Clear the **Generate default plots** check box.
- 4 Right-click **Study 4** and choose **Rename**.
- 5 In the **Rename Study** dialog box, type Stationary Study: Beam (Inputs from Beam Cross Section) in the **New label** text field.
- 6 Click **OK**.

Step 1: Stationary

Some cross section properties are now defined using a dependent variable from the Beam Cross Section Interface. An example is the torsional section modulus defined as `comp2.bcs.Wt`. Follow the steps below to get access to these variables in this study.

- 1 In the **Settings** window for **Stationary**, click to expand the **Values of Dependent Variables** section.
- 2 Find the **Values of variables not solved for** subsection. From the **Settings** list, choose **User controlled**.
- 3 From the **Method** list, choose **Solution**.
- 4 From the **Study** list, choose **Stationary Study: Beam Cross Section, Stationary**.
- 5 Locate the **Study Extensions** section. Select the **Define load cases** check box.
- 6 Click  **Add**.
- 7 In the table, enter the following settings:


| Load case | edge | Weight | point | Weight |
|------------|------|--------|-------|--------|
| Point Load | | 1.0 | √ | 1.0 |

- 8 In the **Home** toolbar, click  **Compute**.



Compare the von Mises stress for the two cross sections.

RESULTS

von Mises Stress

- 1 In the **Results** toolbar, click  **Point Evaluation**.
- 2 In the **Settings** window for **Point Evaluation**, type von Mises Stress in the **Label** text field.
- 3 Locate the **Data** section. From the **Parameter selection (Load case)** list, choose **First**.
- 4 Select Point 1 only.
- 5 Click **Replace Expression** in the upper-right corner of the **Expressions** section. From the menu, choose **Component 1 (comp1)>Beam>Stress>beam.mises - von Mises stress - N/m²**.
- 6 Locate the **Expressions** section. In the table, enter the following settings:

| Expression | Unit | Description |
|------------|------|------------------|
| beam.mises | MPa | von Mises stress |


- 7 Click  **Evaluate**.
- 8 Locate the **Data** section. From the **Dataset** list, choose **Stationary Study: Beam (Inputs from Beam Cross Section)/Solution 4 (5) (sol4)**.
- 9 Click  **Evaluate**.

von Mises Stress

- 1 In the **Model Builder** window, under **Results>Tables** click **Table 8**.
 - 2 In the **Settings** window for **Table**, type von Mises Stress in the **Label** text field.
- Finally modify **Study 1** and **Study 2** so that you can re-compute the solution later.


STATIONARY STUDY: BEAM

Step 1: Stationary

- 1 In the **Model Builder** window, under **Stationary Study: Beam** click **Step 1: Stationary**.
- 2 In the **Settings** window for **Stationary**, locate the **Physics and Variables Selection** section.
- 3 Select the **Modify model configuration for study step** check box.
- 4 In the **Physics and variables selection** tree, select **Component 1 (comp1)>Beam (beam)>Cross-Section Data 2**.
- 5 Click  **Disable**.

EIGENFREQUENCY STUDY: BEAM

Step 1: Eigenfrequency

- 1** In the **Model Builder** window, under **Eigenfrequency Study: Beam** click **Step 1: Eigenfrequency**.
- 2** In the **Settings** window for **Eigenfrequency**, locate the **Physics and Variables Selection** section.
- 3** Select the **Modify model configuration for study step** check box.
- 4** In the **Physics and variables selection** tree, select **Component 1 (comp1)>Beam (beam)>Cross-Section Data 2**.
- 5** Click  **Disable**.