

Pharmaceutical Tableting Process

Introduction

Powder compaction is a widely adopted manufacturing process in the ceramic, automotive, and pharmaceutical industries due to its high flexibility, high material utilization, and better control over quality.

The Capped Drucker–Prager (DPC) model is popular for modeling the compaction processes of pharmaceutical powders since it is relatively easy to characterize the material parameters from experimental data.

The model is inspired by the example presented in Ref. 1, where microcrystalline cellulose (MCC) powder is compacted, and the constitutive material properties are obtained from experiments. Friction between the metal powder and the compaction tools is taken into account.

The material properties are considered density dependent, and since the formulation of the DPC model presented in Ref. 1 differs from the one in COMSOL Multiphysics, a material property mapping is applied before using these parameters directly.

Model Definition

The geometry of the workpiece (pharmaceutical powder), punches, and die are shown in Figure 1. The actual compaction process needs two punches: a fixed bottom punch and a moving top punch. Because the bottom punch and die are fixed and rigid, they are not explicitly modeled. The top punch is modeled with a moving rigid material. Due to axial symmetry, the size of the model can be reduced.

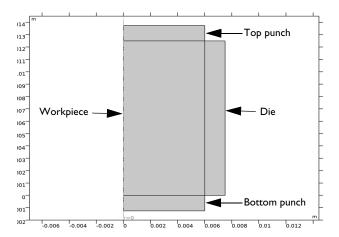


Figure 1: Geometry of the workpiece (pharmaceutical powder), punches, and die.

MATERIAL PROPERTY MAPPING

A series of experiments to calibrate elastic and plastic material properties were performed for several specimens (Ref. 1) so that the samples were compacted to different final densities. During the compaction process, the powder density changes, affecting the material properties. Therefore, all material properties are expressed in terms of the relative density of the powder.

Young's modulus and Poisson's ratio are given as functions of the relative density in Ref. 1. But since the variation of Poisson's ratio with respect to changes in relative density is small, a constant Poisson's ratio of 0.16 is used instead.

The DPC model formulation presented in Ref. 1 is different than the one in COMSOL Multiphysics. Hence, a material property mapping is needed before directly using these parameters in COMSOL Multiphysics.

Capped Drucker-Prager

In Ref. 1, the Drucker-Prager yield function $F_{\rm c}$ and the plastic potential $Q_{\rm c}$ are defined as

$$F_c = Q_c = q - p \tan \beta - d$$

where $q = \sqrt{3J_2}$ is the von Mises equivalent stress, $p = I_1/3$ is the hydrostatic pressure, β is the angle of internal friction, and d is the cohesion. Here, I_1 is the first stress invariant and J_2 is the second deviatoric stress invariant.

The elliptic cap function $F_{
m cap}$ and plastic potential $Q_{
m cap}$ are

$$F_{cap} = Q_{cap} = \sqrt{\left(\left(\frac{p-p_a}{p_b-p_a}\right)^2 + \left(\frac{q}{fq_a}\right)^2\right)} - 1$$

where $q_a = d + p_a \tan \beta$, and $f = l + \alpha - \alpha/\cos \beta$. The eccentricity of the ellipse, \overline{R} , is given by

$$\overline{R} = \frac{p_b - p_a}{q_a}$$

The Drucker-Prager cone is connected with the elliptic cap using a transition surface that serves as a smooth transition between the cone and cap surfaces. By using a transition surface, it is possible to control the variables p_a , p_b , and R independently.

The hardening law is given by

$$p_h = Ae^{B\varepsilon_{pvol}}$$

where ε_{pvol} is the volumetric plastic strain, and A and B are the material parameters calibrated from experimental data.

The relation between the current relative density $R_{\rm D}$ and the volumetric plastic strain is given by

$$R_D = R_{D0}e^{\varepsilon_{pvol}}$$

where $R_{
m D0}$ is the initial relative density.

Formulation in COMSOL Multiphysics

The formulation of the DPC model implemented in COMSOL Multiphysics is related to the material parameters used in Ref. 1.

The Drucker–Prager yield function $F_{
m c}$ and the plastic potential $Q_{
m c}$ are

$$F_c = Q_c = \sqrt{J_2} + \alpha I_1 - k$$

where α and k are the Drucker-Prager parameters. The relation between the Drucker-Prager parameters and the parameters given in Ref. 1 is

$$\alpha = \frac{\tan \beta}{3\sqrt{3}}$$
 and $k = \frac{d}{\sqrt{3}}$

The elliptic cap function $F_{\rm cap}$ and plastic potential $Q_{\rm cap}$ are then

$$F_{\text{cap}} = Q_{\text{cap}} = \left(\frac{I_1 - I_a}{I_b - I_a}\right)^2 + \left(\frac{\sqrt{J_2}}{J_a}\right)^2 - 1$$

where J_a is the ordinate in the $\sqrt{J_2}$ axis at $I_1 = I_a$, and the eccentricity of the ellipse, R, is related to the eccentricity given in Ref. 1 by

$$R = \frac{I_a - I_b}{J_a} = 3\sqrt{3}\overline{R}$$

In COMSOL Multiphysics, no transition zone is required between the Drucker-Prager cone and the elliptic cap, since there is a unique and smooth transition between the two surfaces. Hence, the variables I_a and J_a are determined from the values of the parameters α , k, R, and $I_{\rm b}$.

The hardening law is given by

$$p_b = p_{b0} - K_{\text{iso}} \log \left(1 + \frac{\varepsilon_{p\text{vol}}}{\varepsilon_{p\text{vol, max}}} \right)$$

$$I_b = -3p_b$$

where p_{b0} is the initial location of the cap, K_{iso} is the isotropic hardening modulus, and $\varepsilon_{p\text{vol,max}}$ is the maximum volumetric plastic strain.

It is clear that the hardening law given in Ref. 1 and in COMSOL are different. The parameters p_{b0} , K_{iso} , and $\varepsilon_{pvol,max}$ are chosen so that they match the results given in Ref. 1. The initial location of the cap, p_{b0} , is defined as zero since loose powder undergoes negligible initial elastic loading.

For the *small plastic strains* model, the relation between the current relative density $R_{\rm D}$ and the volumetric plastic strain is given by

$$R_D = R_{D0} e^{\varepsilon_{pvol}}$$

For the large plastic strains model, the relation between the current relative density $R_{
m D}$ and the volumetric plastic strain is given by

$$R_{D} = R_{D0} J_{p}^{-1}$$

where $J_{\rm p}$ is the plastic volume ratio. In this example, large strain plasticity is used.

The size of the die is the same as given in Ref. 1, which is 12.5 mm in height and 12 mm in diameter. The true density of the powder is taken as 1590 kg/m³ (Ref. 1), while the loose bulk density is taken as 360 kg/m³ in order to get a similar hardening and final relative density range as given in Ref. 1. These values give an initial relative density of 0.2264.

The penalty contact method with Coulomb friction (coefficient of friction equal to 0.1) is used to model the contact interaction between the powder and the die, as well as between the powder and punches (Ref. 1). Nonlocal plasticity is used to achieve mesh objectivity.

BOUNDARY CONDITIONS

The applied boundary conditions are:

- The die and bottom punch are fixed.
- The vertical displacement of the top punch is controlled by a parameter called para.

Results

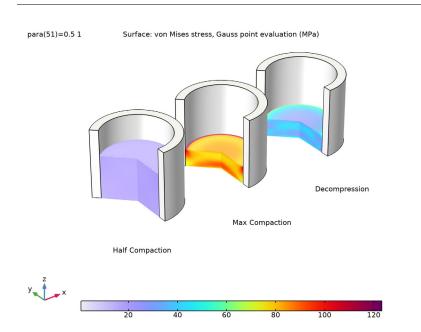


Figure 2: von Mises stress at different stages of compaction and decompression.

Figure 2 shows the von Mises stress at the middle of the compaction process, at the end of the compaction process, and after decompression. The stress is at its maximum on the top periphery, and at its minimum on the bottom periphery for all stages of compaction. The higher and lower stress rings are visible at the top and bottom surfaces of the compacted mold, which is consistent with the experimental observations; see Ref. 1. The stress relaxes once the top punch is moved upward from the mold (decompression stage).

Figure 3 shows the volumetric plastic strain at the end of compaction for the pharmaceutical powder mold. There is a large variation in volumetric plastic strain from the bottom face to the top face, with the maximum plastic strain occurring in the top region.

The relative density distribution at different stages of compaction processes is shown in Figure 4. During all stages of compaction, the high-density zone is formed at the top periphery while a low-density zone is formed at the bottom periphery. Due to friction, a nonuniform density is observed at the powder mold, which is consistent with the experimental observations reported in Ref. 1. The decompression stage has negligible impact on the relative density, unlike the stress plot, as relative density is dependent on plastic deformation which is irreversible.

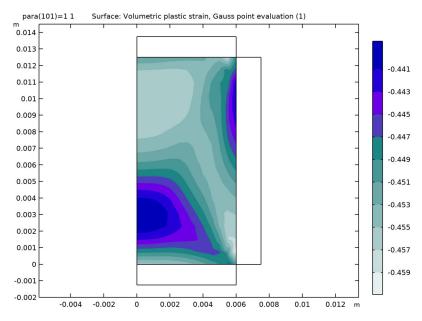


Figure 3: Volumetric plastic strain at the end of compaction.

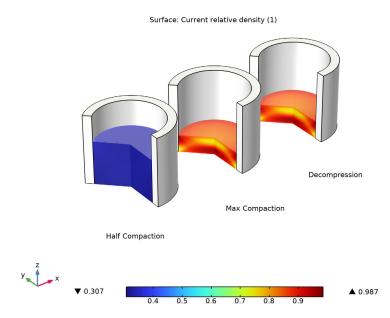


Figure 4: Relative density at different stages of compaction and decompression.

Figure 5 shows the punch pressure versus axial compaction in the compaction and decompression process. The yielding starts occurring at the beginning of the compaction process. The curve matches the numerical and experimental results presented in the Ref. 1.

The relative density and average relative density during the compaction process are shown in Figure 6. The difference between them can be better explained by the volume ratios presented in the same plot. The average relative density of the powder is related to the plastic volume ratio, while the tablet's relative density is related to the total volume ratio. The elastic deformation is small during the compaction process.

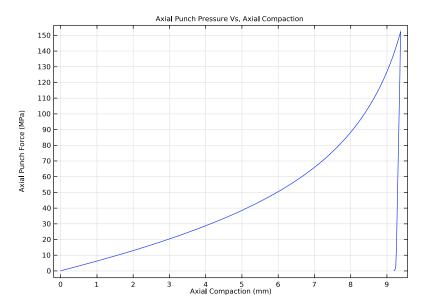


Figure 5: Axial punch pressure versus axial compaction.

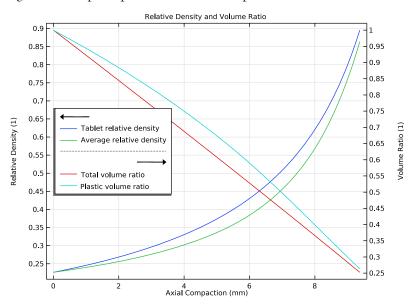


Figure 6: Relative density and volume ratio during axial compaction.

Notes About the COMSOL Implementation

In the compaction process, the interaction between the workpiece and the die as well as the workpiece and the punches is modeled using a contact node. The die and bottom punch are assumed to be rigid due to their high stiffness compared to the powder mold. As the bottom punch and die are rigid and fixed, they do not need to be modeled explicitly. In the contact node, the workpiece is taken as the destination boundary. To model this situation, the option called **Source external to current physics** is selected.

Reference

1. A. Baroutaji, S. Lenihan, and K. Bryan, "Combination of finite element method and Drucker-Prager Cap material model for simulation of pharmaceutical tableting process," Material Science and Engineering Technology, vol. 48, no. 11, 2017.

Application Library path: Nonlinear_Structural_Materials_Module/ Porous Plasticity/pharmaceutical tableting process

Modeling Instructions

From the File menu, choose New.

NEW

In the New window, click Model Wizard.

MODEL WIZARD

- I In the Model Wizard window, click 2D Axisymmetric.
- 2 In the Select Physics tree, select Structural Mechanics>Solid Mechanics (solid).
- 3 Click Add.
- 4 Click \bigcirc Study.
- 5 In the Select Study tree, select General Studies>Stationary.
- 6 Click M Done.

GEOMETRY I

Model parameters are available in text file.

GLOBAL DEFINITIONS

Parameters 1

- I In the Model Builder window, under Global Definitions click Parameters I.
- 2 In the Settings window for Parameters, locate the Parameters section.
- 3 Click **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file pharmaceutical_tableting_process_parameters.txt.

Young's Modulus

- I In the Home toolbar, click f(x) Functions and choose Global>Analytic.
- 2 In the Settings window for Analytic, type Young's Modulus in the Label text field.
- 3 In the Function name text field, type EE.
- 4 Locate the **Definition** section. In the **Expression** text field, type 111.96*exp(4.395*x).
- **5** Locate the **Units** section. In the table, enter the following settings:

Argument	Unit
х	1

- **6** In the **Function** text field, type MPa.
- 7 Locate the **Plot Parameters** section. In the table, enter the following settings:

Argument	Lower limit	Upper limit	Unit
x	0.3	1	I

Drucker Prager Parameter k

- I In the Home toolbar, click f(x) Functions and choose Global>Analytic.
- 2 In the Settings window for Analytic, type Drucker Prager Parameter k in the Label text field.
- 3 In the Function name text field, type Kd.
- 4 Locate the **Definition** section. In the **Expression** text field, type 0.2955*exp(4.5642* x)/sqrt(3).
- **5** Locate the **Units** section. In the table, enter the following settings:

Argument	Unit
x	1

6 In the **Function** text field, type MPa.

7 Locate the **Plot Parameters** section. In the table, enter the following settings:

Argument	Lower limit	Upper limit	Unit
x	0.6	0.875	1

Drucker Prager Parameter alpha

- I In the Home toolbar, click f(x) Functions and choose Global>Analytic.
- 2 In the Settings window for Analytic, type Drucker Prager Parameter alpha in the Label text field.
- 3 In the Function name text field, type Alpha.
- 4 Locate the **Definition** section. In the **Expression** text field, type tan((12.628*x+ 56.194) [deg]) / (3*sqrt(3)).
- **5** Locate the **Units** section. In the table, enter the following settings:

Argument	Unit
x	1

- 6 In the Function text field, type 1.
- 7 Locate the **Plot Parameters** section. In the table, enter the following settings:

Argument	Lower limit	Upper limit	Unit
x	0.6	0.875	1

Hardening Function

- I In the Home toolbar, click f(x) Functions and choose Global>Analytic.
- 2 In the Settings window for Analytic, type Hardening Function in the Label text field.
- 3 In the Function name text field, type Pbh.
- 4 Locate the **Definition** section. In the **Expression** text field, type -KIso*log(1+x/ Epvolmax).
- **5** Locate the **Units** section. In the table, enter the following settings:

Argument	Unit
x	1

6 In the Function text field, type Pa.

7 Locate the **Plot Parameters** section. In the table, enter the following settings:

Argument	Lower limit	Upper limit	Unit
x	-Epvolmax	0	I

GEOMETRY I

Rectangle I (rI)

- I In the Geometry toolbar, click Rectangle.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type R0.
- 4 In the Height text field, type H0.

Rectangle 2 (r2)

- I Right-click Rectangle I (rI) and choose Duplicate.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the **Height** text field, type H0/10.
- 4 Locate the **Position** section. In the **z** text field, type H0.

Rectangle 3 (r3)

- I Right-click Rectangle 2 (r2) and choose Duplicate.
- 2 In the Settings window for Rectangle, locate the Position section.
- 3 In the z text field, type -H0/10.

Rectangle 4 (r4)

- I Right-click Rectangle 3 (r3) and choose Duplicate.
- 2 In the Settings window for Rectangle, locate the Size and Shape section.
- 3 In the Width text field, type R0/4.
- **4** In the **Height** text field, type H0.
- **5** Locate the **Position** section. In the **r** text field, type R0.
- 6 In the z text field, type 0.
- 7 Click **Build All Objects**.

Form Union (fin)

- I In the Model Builder window, under Component I (compl)>Geometry I click Form Union (fin).
- 2 In the Settings window for Form Union/Assembly, locate the Form Union/Assembly section.

- 3 From the Action list, choose Form an assembly.
- 4 From the Pair type list, choose Contact pair.
- 5 In the Geometry toolbar, click Build All.

In subsequent steps, the die and punch are rigid domains. Hence use the toggle button in **Contact Pair** to switch the boundaries, so that the workpiece boundaries are chosen as destination boundaries.

DEFINITIONS

Contact Pair 2 (ab2)

- I In the Model Builder window, expand the Component I (compl)>Definitions node, then click Contact Pair 2 (ap2).
- 2 In the Settings window for Pair, click the 1 Swap Source and Destination button.

Contact Pair 3 (ab3)

- I In the Model Builder window, click Contact Pair 3 (ap3).
- 2 In the Settings window for Pair, click the 1 Swap Source and Destination button.

Add a nonlocal integration coupling operator to compute the axial force and pressure.

Integration | (intob|)

- I In the Definitions toolbar, click Nonlocal Couplings and choose Integration.
- 2 In the Settings window for Integration, locate the Source Selection section.
- 3 From the Geometric entity level list, choose Boundary.
- 4 Select Boundary 7 only.

Integration 2 (intoþ2)

- I Right-click Integration I (intop I) and choose Duplicate. Add a nonlocal integration coupling operator to compute the axial compaction.
- 2 In the Settings window for Integration, locate the Source Selection section.
- 3 Click Clear Selection.
- 4 Select Boundary 8 only.
- 5 Locate the Advanced section. Clear the Compute integral in revolved geometry check box.

Variables 1

- I In the Model Builder window, right-click Definitions and choose Variables.
- 2 In the Settings window for Variables, locate the Variables section.

3 In the table, enter the following settings:

Name	Expression	Unit	Description
Punchforce	<pre>intop1(-solid.sz)</pre>	N	Punch force
Punchpressure	Punchforce/A0	N/m²	Punch force
Rho	PowderMass/(A0* intop2(1))	kg/m³	Current powder density

Piecewise I (pw I)

- I In the **Definitions** toolbar, click \bigwedge **Piecewise**.
- 2 In the Settings window for Piecewise, type punchDisp in the Function name text field.
- **3** Locate the **Definition** section. Find the **Intervals** subsection. In the table, enter the following settings:

Start	End	Function
0	1	0.75*H0*x
1	2	0.75*H0-0.15*H0*(x-1)

- 4 Locate the Units section. In the Arguments text field, type 1.
- 5 In the Function text field, type m.

Domains 3 (die) is considered as rigid and fixed, hence there is no need to consider them in physics, only a mesh is required.

SOLID MECHANICS (SOLID)

- I In the Model Builder window, under Component I (compl) click Solid Mechanics (solid).
- 2 In the Settings window for Solid Mechanics, locate the Domain Selection section.
- 3 Click Clear Selection.
- 4 Select Domains 2 and 3 only.

Linear Elastic Material I

In the Model Builder window, under Component I (compl)>Solid Mechanics (solid) click Linear Elastic Material I.

Porous Plasticity I

- I In the Physics toolbar, click Attributes and choose Porous Plasticity.
- 2 In the Settings window for Porous Plasticity, locate the Porous Plasticity Model section.
- 3 From the Formulation list, choose Large strains.
- 4 From the Material model list, choose Capped Drucker-Prager.

- 5 Find the Isotropic hardening model subsection. From the list, choose Exponential.
- **6** In the p_{b0} text field, type Pb0.
- 7 Click to expand the Nonlocal Plasticity Model section. From the list, choose Implicit gradient.
- **8** In the $l_{\text{int,m}}$ text field, type 1.6[mm].

Contact I

In the Model Builder window, under Component I (compl)>Solid Mechanics (solid) click Contact I.

Friction 1

- I In the Physics toolbar, click Attributes and choose Friction.
- 2 In the Settings window for Friction, locate the Friction Parameters section.
- 3 In the μ text field, type 0.1.

Rigid Material I

- I In the Physics toolbar, click **Domains** and choose Rigid Material.
- 2 Select Domain 3 only.

Prescribed Displacement/Rotation I

- I In the Physics toolbar, click Attributes and choose Prescribed Displacement/Rotation.
- 2 In the Settings window for Prescribed Displacement/Rotation, locate the Prescribed Displacement section.
- **3** In the w_0 text field, type -punchDisp(para).

MATERIALS

Microcrystalline Cellulose (MCC)

- I In the Model Builder window, under Component I (compl) right-click Materials and choose Blank Material.
- 2 In the Settings window for Material, type Microcrystalline Cellulose (MCC) in the Label text field.
- **3** Select Domain 2 only.

4 Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Young's modulus	Е	<pre>EE(nojac(soli d.lemm1.popl1 .rhorel))</pre>	Pa	Young's modulus and Poisson's ratio
Poisson's ratio	nu	Nu	I	Young's modulus and Poisson's ratio
Density	rho	Rho	kg/m³	Basic
Initial void volume fraction	fO	FO	I	Poroplastic material model
Drucker-Prager alpha coefficient	alphaDrucker	Alpha(nojac(s olid.lemm1.po pl1.rhorel))	I	Drucker-Prager
Drucker-Prager k coefficient	kDrucker	<pre>Kd(nojac(soli d.lemm1.popl1 .rhorel))</pre>	Pa	Drucker-Prager
Isotropic hardening modulus	Kiso	KIso	N/m²	Mohr-Coulomb
Maximum plastic volumetric strain	epvolmax	Epvolmax	I	Mohr-Coulomb
Ellipse aspect ratio	Rcap	Rc	I	Mohr-Coulomb

MESH I

Mapped I

In the Mesh toolbar, click Mapped.

Distribution I

- I Right-click Mapped I and choose Distribution.
- 2 Select Boundaries 2, 4, and 11–14 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 In the Number of elements text field, type 1.

Distribution 2

- I In the Model Builder window, right-click Mapped I and choose Distribution.
- 2 Select Boundary 6 only.

- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 In the Number of elements text field, type 12.

Distribution 3

- I Right-click Mapped I and choose Distribution.
- 2 Select Boundary 5 only.
- 3 In the Settings window for Distribution, locate the Distribution section.
- 4 In the Number of elements text field, type 16.
- 5 In the Model Builder window, right-click Mesh I and choose Build All.

STUDY I

Step 1: Stationary

- I In the Model Builder window, under Study I click Step I: Stationary.
- 2 In the Settings window for Stationary, click to expand the Study Extensions section.
- 3 Select the Auxiliary sweep check box.
- 4 Click + Add.
- **5** In the table, enter the following settings:

Parameter name	Parameter value list	Parameter unit
para (Parameter)	range(0,0.01,1.1)	1

Use customized solver settings in order to get the faster convergence.

Solution I (soll)

- I In the Study toolbar, click Show Default Solver.
- 2 In the Model Builder window, expand the Solution I (soll) node.
- 3 In the Model Builder window, expand the Study I>Solver Configurations> Solution I (soll)>Stationary Solver I node, then click Parametric I.
- 4 In the Settings window for Parametric, click to expand the Continuation section.
- **5** Select the **Tuning of step size** check box.
- 6 In the Initial step size text field, type 1E-5.
- 7 In the Minimum step size text field, type 1E-5.
- 8 From the Predictor list, choose Automatic.
- 9 In the Model Builder window, under Study I>Solver Configurations>Solution I (soll)> Stationary Solver I click Fully Coupled I.

- 10 In the Settings window for Fully Coupled, click to expand the Method and Termination section.
- II From the Nonlinear method list, choose Constant (Newton).
- 12 In the Study toolbar, click **Compute**.

RESULTS

Stress (solid)

- I In the Settings window for 2D Plot Group, locate the Data section.
- 2 From the Parameter value (para (1)) list, choose 1.
- 3 In the Stress (solid) toolbar, click Plot.

First create the revolution datasets needed to create the plots used in the documentation.

Study I/Solution I (2) (soll)

- I In the Model Builder window, expand the Results>Datasets node.
- 2 Right-click Results>Datasets>Study I/Solution I (soll) and choose Duplicate.

Selection

- I In the Results toolbar, click \(\frac{1}{2} \) Attributes and choose Selection.
- 2 In the Settings window for Selection, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 Select Domain 4 only.

Revolution 2D I

- I In the Model Builder window, right-click Revolution 2D and choose Duplicate.
- 2 In the Settings window for Revolution 2D, locate the Data section.
- 3 From the Dataset list, choose Study I/Solution I (2) (soll).

Average I

In the Results toolbar, click More Datasets and choose Evaluation>Average.

Selection

- I In the Results toolbar, click hattributes and choose Selection.
- 2 In the Settings window for Selection, locate the Geometric Entity Selection section.
- 3 From the Geometric entity level list, choose Domain.
- 4 Select Domain 2 only.

Stress, 3D (solid)

- I In the Model Builder window, under Results click Stress, 3D (solid).
- 2 In the Settings window for 3D Plot Group, locate the Data section.
- 3 From the Parameter value (para (1)) list, choose 0.5.
- 4 Locate the Plot Settings section. Clear the Plot dataset edges check box.
- **5** Click to expand the **Plot Array** section. Select the **Enable** check box.
- **6** Locate the Color Legend section. From the Position list, choose Bottom.

Surface 2

- I Right-click Stress, 3D (solid) and choose Surface.
- 2 In the Settings window for Surface, locate the Data section.
- 3 From the Dataset list, choose Revolution 2D 1.
- 4 From the Solution parameters list, choose From parent.
- **5** Locate the **Expression** section. In the **Expression** text field, type 1.
- 6 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- 7 Locate the Coloring and Style section. From the Coloring list, choose Uniform.
- 8 From the Color list, choose Gray.
- **9** Click to expand the **Plot Array** section. Select the **Manual indexing** check box.

Material Appearance 1

- I Right-click Surface 2 and choose Material Appearance.
- 2 In the Settings window for Material Appearance, locate the Appearance section.
- 3 From the Appearance list, choose Custom.
- 4 From the Material type list, choose Steel.

Line 1

- I In the Model Builder window, right-click Stress, 3D (solid) and choose Line.
- 2 In the Settings window for Line, locate the Data section.
- 3 From the Dataset list, choose Revolution 2D 1.
- **4** Locate the **Expression** section. In the **Expression** text field, type 1.
- 5 Click to expand the **Title** section. From the **Title type** list, choose **None**.
- **6** Locate the Coloring and Style section. From the Coloring list, choose Uniform.
- 7 From the Color list, choose Black.
- 8 Click to expand the Plot Array section. Select the Manual indexing check box.

Surface I

- I In the Model Builder window, click Surface I.
- 2 In the Settings window for Surface, locate the Expression section.
- 3 From the Unit list, choose MPa.

Surface 3

- I Right-click Results>Stress, 3D (solid)>Surface I and choose Duplicate.
- 2 In the Settings window for Surface, locate the Data section.
- 3 From the Dataset list, choose Revolution 2D.
- 4 From the Parameter value (para (1)) list, choose 1.
- **5** Locate the **Title** section. From the **Title type** list, choose **None**.
- 6 Click to expand the Inherit Style section. From the Plot list, choose Surface 1.

Surface 4

- I In the Model Builder window, under Results>Stress, 3D (solid) right-click Surface 2 and choose **Duplicate**.
- 2 In the Settings window for Surface, locate the Plot Array section.
- **3** In the **Index** text field, type 1.

Line 2

- I In the Model Builder window, under Results>Stress, 3D (solid) right-click Line I and choose **Duplicate**.
- 2 In the Settings window for Line, locate the Plot Array section.
- 3 In the Index text field, type 1.

Surface 5

- I In the Model Builder window, under Results>Stress, 3D (solid) right-click Surface 3 and choose **Duplicate**.
- 2 In the Settings window for Surface, locate the Data section.
- 3 From the Parameter value (para (1)) list, choose 1.1.

Surface 6

- I In the Model Builder window, under Results>Stress, 3D (solid) right-click Surface 4 and choose **Duplicate**.
- 2 In the Settings window for Surface, locate the Plot Array section.
- 3 In the Index text field, type 2.

Line 3

- I In the Model Builder window, under Results>Stress, 3D (solid) right-click Line 2 and choose **Duplicate**.
- 2 In the Settings window for Line, locate the Plot Array section.
- 3 In the Index text field, type 2.

Stress, 3D (solid)

In the Model Builder window, click Stress, 3D (solid).

Table Annotation I

- I In the Stress, 3D (solid) toolbar, click More Plots and choose Table Annotation.
- 2 In the Settings window for Table Annotation, locate the Data section.
- 3 From the Source list, choose Local table.
- **4** In the table, enter the following settings:

x-coordinate	y-coordinate	z-coordinate	Annotation
-R0	0	-6[mm]	Half Compaction
3*R0	0	-10[mm]	Max Compaction
6*R0	0	-10[mm]	Decompression

- 5 In the Stress, 3D (solid) toolbar, click Plot.
- 6 Select the LaTeX markup check box.
- 7 Locate the Coloring and Style section. Clear the Show point check box.

Stress, 3D (solid)

- I Click the Show Grid button in the Graphics toolbar.
- 2 In the Model Builder window, click Stress, 3D (solid).
- 3 In the Stress, 3D (solid) toolbar, click Plot.

Relative Density

- I Right-click Stress, 3D (solid) and choose Duplicate.
- 2 In the Settings window for 3D Plot Group, type Relative Density in the Label text field.
- 3 Click to expand the Title section. From the Title type list, choose Manual.
- 4 In the Title text area, type Surface: Current relative density (1).
- 5 Clear the Parameter indicator text field.

6 Locate the Color Legend section. Select the Show maximum and minimum values check box.

Surface I

- I In the Model Builder window, expand the Relative Density node, then click Surface I.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Solid Mechanics> Porous plasticity>solid.lemm1.popl1.rhorel - Current relative density.
- 3 Locate the Coloring and Style section. Click Change Color Table.
- 4 In the Color Table dialog box, select Rainbow>Rainbow in the tree.
- 5 Click OK.

Surface 3

- I In the Model Builder window, click Surface 3.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Solid Mechanics> Porous plasticity>solid.lemm1.popl1.rhorel - Current relative density.

Surface 5

- I In the Model Builder window, click Surface 5.
- 2 In the Settings window for Surface, click Replace Expression in the upper-right corner of the Expression section. From the menu, choose Component I (compl)>Solid Mechanics> Porous plasticity>solid.lemm1.popl1.rhorel - Current relative density.

Relative Density

- I Click the Zoom Extents button in the Graphics toolbar.
- 2 In the Model Builder window, click Relative Density.
- 3 In the Relative Density toolbar, click Plot.
- 4 In the Home toolbar, click Add Predefined Plot.

ADD PREDEFINED PLOT

- I Go to the Add Predefined Plot window.
- 2 In the tree, select Study I/Solution I (I) (soll)>Solid Mechanics> Volumetric Plastic Strain (solid).
- 3 Click Add Plot in the window toolbar.
- 4 In the Home toolbar, click Add Predefined Plot.

RESULTS

Volumetric Plastic Strain (solid)

- I In the Model Builder window, under Results click Volumetric Plastic Strain (solid).
- 2 In the Settings window for 2D Plot Group, locate the Data section.
- 3 From the Parameter value (para (1)) list, choose 1.
- 4 Click to expand the Number Format section. Select the Manual color legend settings check box.
- 5 In the Precision text field, type 4.

Create a 1D plot of punch pressure for tableting processes.

Axial Punch Pressure Vs. Axial Compaction

- I In the Home toolbar, click In Add Plot Group and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Axial Punch Pressure Vs. Axial Compaction in the Label text field.
- **3** Click to expand the **Title** section. From the **Title type** list, choose **Label**.
- 4 Locate the **Plot Settings** section.
- 5 Select the x-axis label check box. In the associated text field, type Axial Compaction
- 6 Select the y-axis label check box. In the associated text field, type Axial Punch Force (MPa).

Global I

- I Right-click Axial Punch Pressure Vs. Axial Compaction and choose Global.
- 2 In the Settings window for Global, locate the y-Axis Data section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
Punchpressure	MPa	Punch Pressure

- 4 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- 5 In the **Expression** text field, type punchDisp(para).
- 6 From the Unit list, choose mm.
- 7 Click to expand the **Legends** section. Clear the **Show legends** check box.
- 8 In the Axial Punch Pressure Vs. Axial Compaction toolbar, click **Plot**.

Create a 1D plot of relative densities and volume ratios.

Relative Density and Volume Ratio

- I In the Home toolbar, click **Add Plot Group** and choose ID Plot Group.
- 2 In the Settings window for ID Plot Group, type Relative Density and Volume Ratio in the Label text field.
- 3 Locate the Data section. From the Parameter selection (para) list, choose Manual.
- 4 In the Parameter indices (I-III) text field, type range (1,1,101).
- **5** Locate the **Title** section. From the **Title type** list, choose **Label**.
- 6 Locate the Plot Settings section.
- 7 Select the x-axis label check box. In the associated text field, type Axial Compaction (mm).
- 8 Select the y-axis label check box. In the associated text field, type Relative Density (1).
- 9 Select the Two y-axes check box.
- 10 Select the Secondary y-axis label check box. In the associated text field, type Volume Ratio (1).

Global I

- I Right-click Relative Density and Volume Ratio and choose Global.
- 2 In the Settings window for Global, locate the y-Axis Data section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
((PowderMass/(A0*intop2(1)))/Rhof)	1	Tablet relative density

- 4 Locate the x-Axis Data section. From the Parameter list, choose Expression.
- **5** In the **Expression** text field, type punchDisp(para).
- 6 From the Unit list, choose mm.
- 7 Locate the **Legends** section. Find the **Include** subsection. Clear the **Solution** check box.

Global 2

- I Right-click Global I and choose Duplicate.
- 2 In the Settings window for Global, locate the Data section.
- 3 From the Dataset list, choose Average 1.
- 4 From the Parameter selection (para) list, choose Manual.

- 5 In the Parameter indices (I-III) text field, type range (1, 1, 101).
- **6** Locate the **y-Axis Data** section. In the table, enter the following settings:

Expression	Unit	Description
solid.lemm1.popl1.rhorel	1	Average relative density

Global 3

- I Right-click Global 2 and choose Duplicate.
- 2 In the Settings window for Global, locate the y-Axis Data section.
- **3** In the table, enter the following settings:

Expression	Unit	Description
solid.J	1	Total volume ratio
solid.Jp	1	Plastic volume ratio

Relative Density and Volume Ratio

- I In the Model Builder window, click Relative Density and Volume Ratio.
- 2 In the Settings window for ID Plot Group, locate the Plot Settings section.
- 3 In the table, select the Plot on secondary y-axis check box for Global 3.
- 4 Locate the Legend section. From the Position list, choose Middle left.
- 5 In the Relative Density and Volume Ratio toolbar, click **Plot**.