



Model created in COMSOL Multiphysics 6.4

# Permanent Magnet Motor in 3D

## Introduction


---

Permanent magnet (PM) motors are used in many high end applications, for example in electric and hybrid vehicles. An important design limitation is that the permanent magnets are sensitive to high temperature. The eddy current losses in the steel/iron parts of the motor can easily be reduced by laminating these. However, due to manufacturing limitations, the permanent magnets cannot easily be laminated so the heating can be quite substantial as illustrated in this model.

## Model Definition

---

An 18 pole permanent magnet motor is modeled in 3D. Sector symmetry and axial mirror symmetry is utilized to reduce the computational effort while capturing the full 3D behavior of the device. [Figure 1](#) shows the full PM motor.

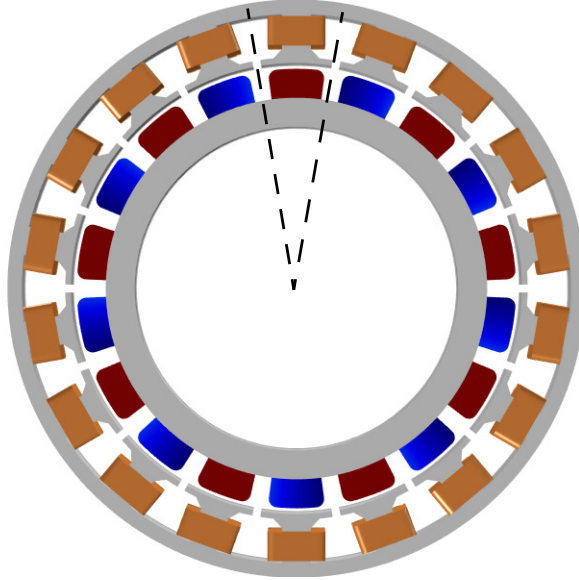

*Figure 1: Drawing of the permanent magnet motor showing how the rotor and stator iron (gray), stator winding (Cu) and permanent magnets (blue/red depending on radial magnetization) are constructed. The antisymmetric sector is indicated by the dashed line. In addition mirror symmetry in the axial (out-of-plane) direction is utilized.*

The conducting part of the rotor is modeled using Ampère's law:

$$\sigma \frac{\partial \mathbf{A}}{\partial t} + \nabla \times \left( \frac{1}{\mu} \nabla \times \mathbf{A} \right) = 0$$

whereas the nonconducting parts of both the rotor and stator are modeled using a magnetic flux conservation equation for the scalar magnetic potential:

$$-\nabla \cdot (\mu \nabla V_m - \mathbf{B}_r) = 0$$

Rotation is modeled using the ready-made physics interface for rotating machinery. The central part of the geometry, containing the rotor and part of the air-gap, is modeled as rotating relative to the coordinate system of the stator. The rotor and the stator are created as two separate geometry objects, so it is required to use an assembly (see the Geometry chapter in the *COMSOL Multiphysics Reference Manual* for details).

The electromagnetic losses in the magnets are computed with the Time to Frequency Losses study. This can later be used as a distributed, time-averaged, heat source in a separate heat transfer analysis (not included). The thermal time scale is typically much larger than the time variation of the eddy current losses so separating the electromechanical and thermal analyses is usually necessary for computational efficiency.

## Results and Discussion

Figure 2 shows the magnetic flux density for the motor in its stationary state, that is the initial conditions for the time-dependent simulation. In this state the coil current is zero.

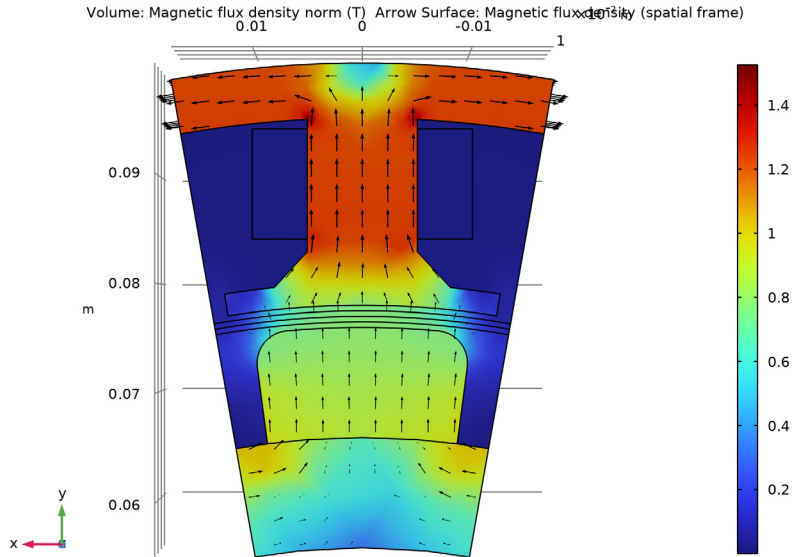


Figure 2: Magnetic flux density from the permanent magnets only with the rotor at rest.

Figure 3 shows the magnetic flux density for the motor after revolving one sector angle. In this plot the air and coil domains are excluded in order to get a better view.

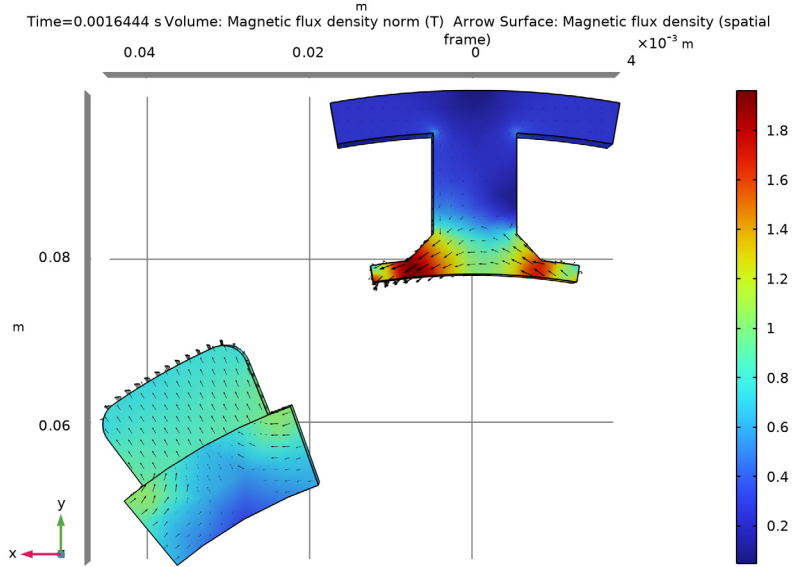


Figure 3: Magnetic flux density after revolving one sector angle.

Figure 4 shows the time evolution of the total eddy current losses in the magnet.

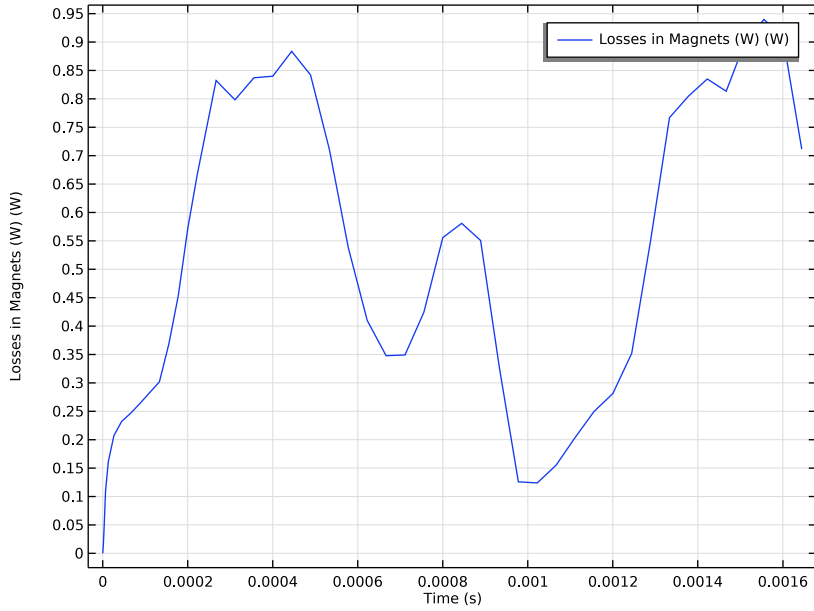


Figure 4: The eddy current loss in the magnets as a function of time.

Figure 5 shows the time averaged eddy current loss power in the magnet in a period.

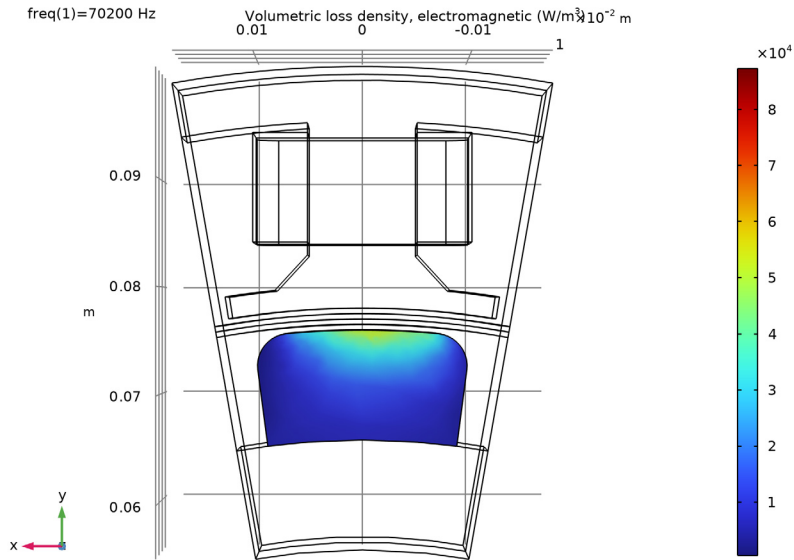


Figure 5: Time averaged eddy current loss power density in the magnet.

---

**Application Library path:** ACDC\_Module/Devices,\_Motors\_and\_Generators/  
pm\_motor\_3d


---

### *Modeling Instructions*


---

From the **File** menu, choose **New**.

#### **NEW**



In the **New** window, click  **Model Wizard**.

#### **MODEL WIZARD**

**1** In the **Model Wizard** window, click  **3D**.


**2** In the **Select Physics** tree, select **AC/DC > Electromagnetics and Mechanics > Rotating Machinery, Magnetic (rmm)**.

**3** Click **Add**.

- 4 Click  **Study**.
- 5 In the **Select Study** tree, select **General Studies > Stationary**.
- 6 Click  **Done**.

## GLOBAL DEFINITIONS

### *Parameters I*

- 1 In the **Model Builder** window, under **Global Definitions** click **Parameters I**.
- 2 In the **Settings** window for **Parameters**, locate the **Parameters** section.
- 3 Click  **Load from File**.
- 4 Browse to the model's Application Libraries folder and double-click the file `pm_motor_3d_parameters.txt`.


## GEOMETRY I

### *Import I (impI)*

- 1 In the **Geometry** toolbar, click  **Import**.
- 2 In the **Settings** window for **Import**, locate the **Source** section.
- 3 Click  **Browse**.
- 4 Browse to the model's Application Libraries folder and double-click the file `pm_motor_3d.mphbin`.
- 5 Click  **Import**.

### *Form Union (fin)*

An assembly must be used so that rotor and stator parts can be meshed independently.

- 1 In the **Model Builder** window, under **Component I (compI) > Geometry I** click **Form Union (fin)**.
- 2 In the **Settings** window for **Form Union/Assembly**, locate the **Form Union/Assembly** section.
- 3 From the **Action** list, choose **Form an assembly**.
- 4 Select the **Create imprints** checkbox.
- 5 In the **Geometry** toolbar, click  **Build All**.






Custom the magnetic material of the permanent magnet.

### Magnet

- 1 In the **Model Builder** window, under **Component 1 (comp1)** > **Materials** click **N50 (Sintered NdFeB) (mat3)**.
- 2 In the **Settings** window for **Material**, type Magnet in the **Label** text field.
- 3 Select Domain 14 only.

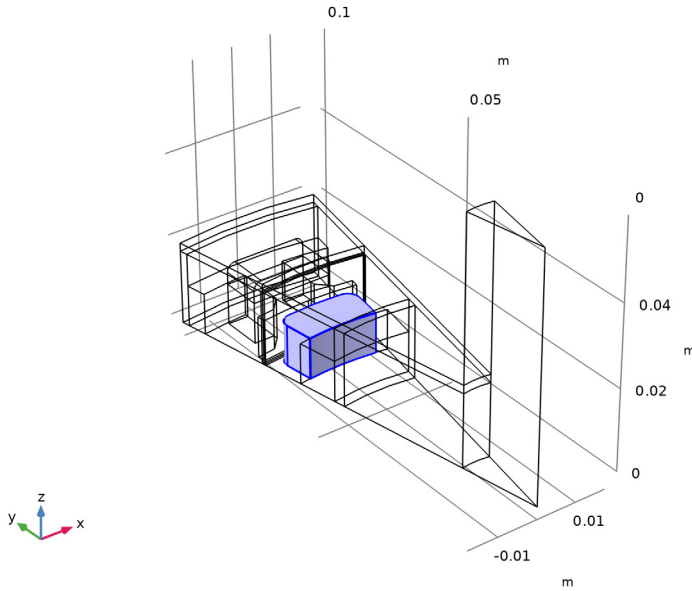


- 4 Locate the **Material Contents** section. In the table, enter the following settings:

Property	Variable	Value	Unit	Property group
Electric conductivity	sigma_iso ; sigma_ii = sigma_iso, sigma_ij = 0	7e5	S/m	Basic
Recoil permeability	murec_iso ; murec_ii = murec_iso, murec_ij = 0	1.02	l	Remanent flux density
Remanent flux density norm	normBr	1 [T]	T	Remanent flux density

### Aluminum (mat4)

- 1 In the **Model Builder** window, click **Aluminum (mat4)**.
- 2 Select Domains 1–3 only.

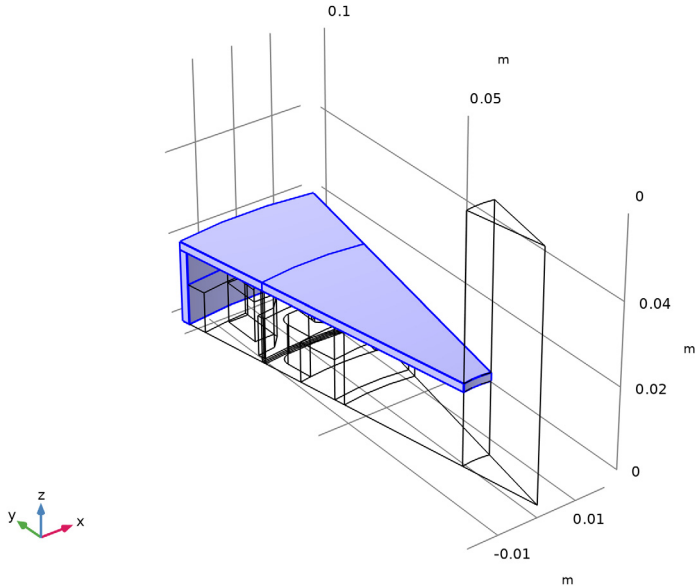


Some materials, like this one will not be used in the simulation but could be useful later, for example in a heat transfer simulation.

### Structural steel (mat5)

- 1 In the **Model Builder** window, click **Structural steel (mat5)**.


2 Select Domains 13, 15, and 16 only.

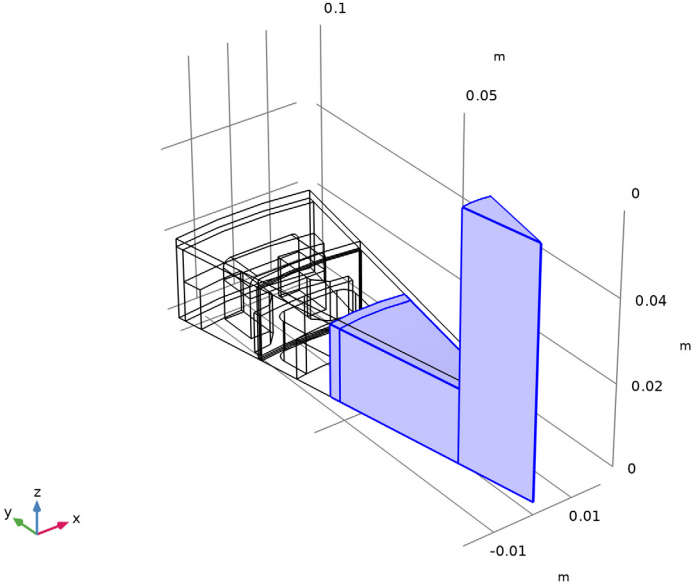

Copper (mat6)

1 In the **Model Builder** window, click **Copper (mat6)**.

2 Select Domains 7–9 only.

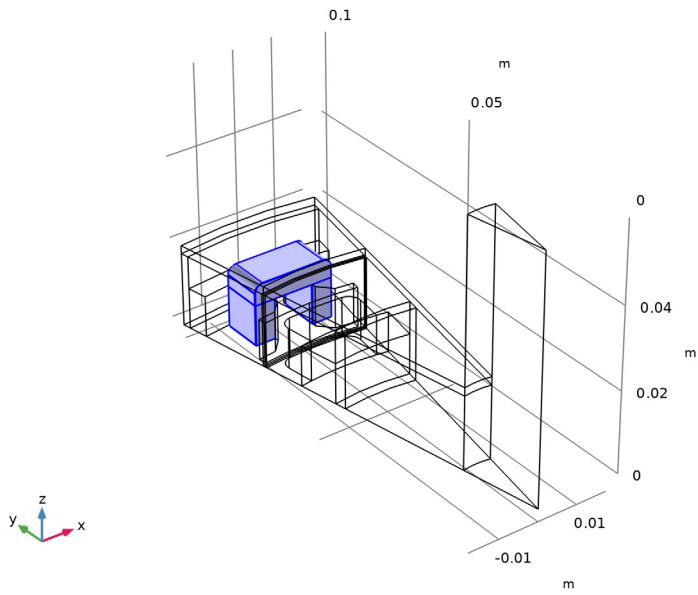


### **ROTATING MACHINERY, MAGNETIC (RMM)**



Proceed to set up the physics. Limit the electromagnetic simulation to the relevant domains.

1 In the **Model Builder** window, under **Component 1 (comp1)** click **Rotating Machinery, Magnetic (rmm)**.

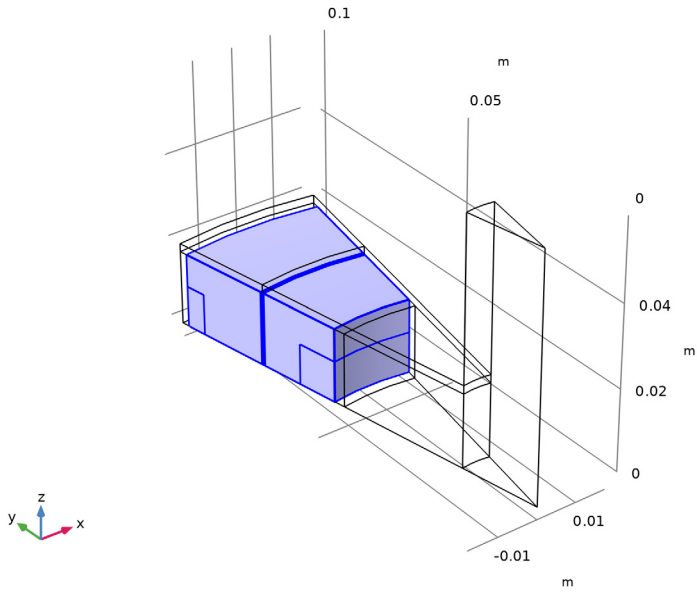
2 Select Domains 4–12 and 14 only.





#### *Magnetic Flux Conservation - air*

- 1 In the **Physics** toolbar, click  **Domains** and choose **Magnetic Flux Conservation**.
- 2 In the **Settings** window for **Magnetic Flux Conservation**, type Magnetic Flux Conservation - air in the **Label** text field.
- 3 Locate the **Domain Selection** section. Click  **Paste Selection**.
- 4 In the **Paste Selection** dialog, type 5-6, 10-11 in the **Selection** text field.

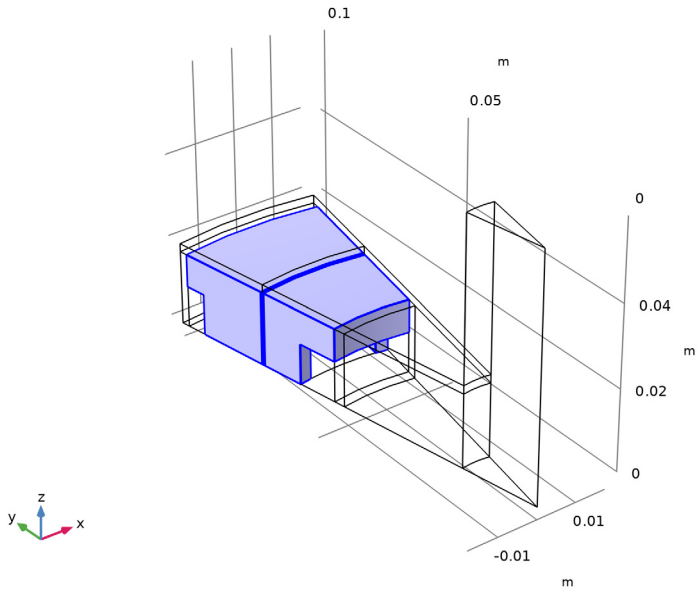
5 Click **OK**.



#### *Magnetic Flux Conservation - iron*

- 1 In the **Physics** toolbar, click  **Domains** and choose **Magnetic Flux Conservation**.
- 2 In the **Settings** window for **Magnetic Flux Conservation**, type Magnetic Flux Conservation - iron in the **Label** text field.
- 3 Locate the **Domain Selection** section. Click  **Paste Selection**.
- 4 In the **Paste Selection** dialog, type 12 in the **Selection** text field.

5 Click **OK**.

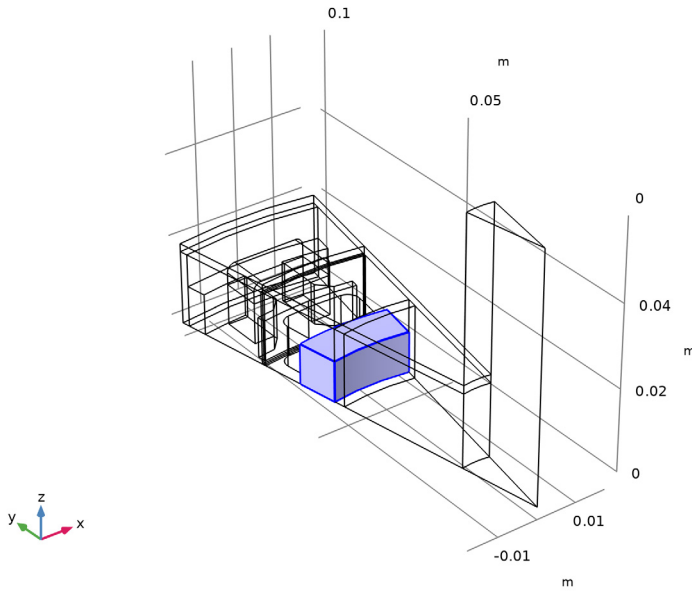

6 In the **Settings** window for **Magnetic Flux Conservation**, locate the **Constitutive Relation B-H** section.

7 From the **Magnetization model** list, choose **B-H curve**.

#### *Laminated Core, Ampère's Law 1*

Add a **Laminated Core** feature to represent the anisotropic magnetization properties of the stator core without having to resolve the electric steel sheets in detail.


1 In the **Physics** toolbar, click  **Domains** and choose **Laminated Core, Ampère's Law**.

2 In the **Settings** window for **Laminated Core, Ampère's Law**, locate the **Domain Selection** section.

3 Click  **Paste Selection**.

4 In the **Paste Selection** dialog, type 4 in the **Selection** text field.

5 Click **OK**.

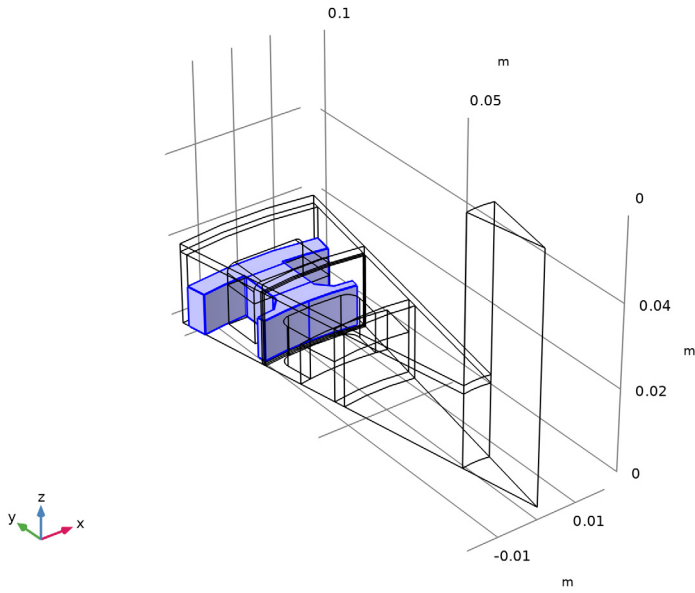

6 In the **Settings** window for **Laminated Core, Ampère's Law**, locate the **Lamination Model** section.

7 From the **Lamination model** list, choose **Direction based**.

8 Specify the **d** vector as


0	X
1	Z

#### *Conducting Magnet 1*

Now add a magnet. Leaving the default setting, electrical isolation on all boundaries is assumed. It is possible to change this assumption by changing the constraint for induced currents.

1 In the **Physics** toolbar, click  **Domains** and choose **Conducting Magnet**.

2 Select Domain 14 only.

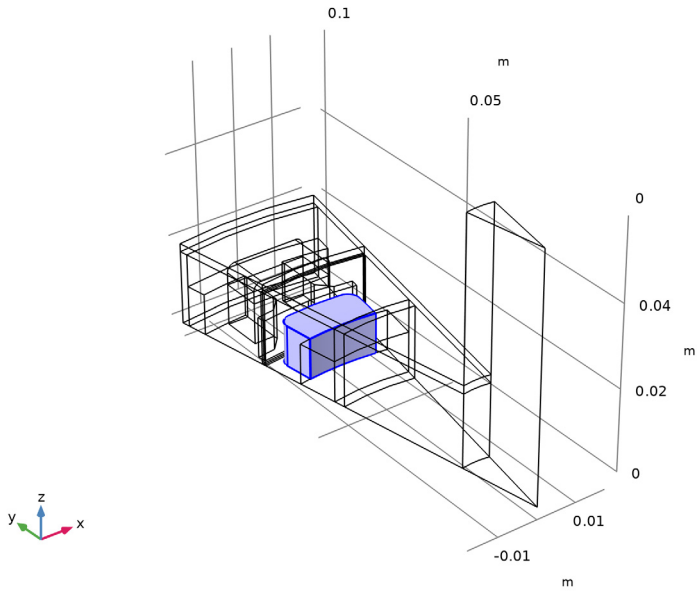

#### *Loss Calculation 1*

In the **Physics** toolbar, click  **Attributes** and choose **Loss Calculation**.

#### *North 1*

1 In the **Model Builder** window, click **North 1**.

2 Select Boundary 100 only.

#### *South 1*


1 In the **Model Builder** window, click **South 1**.

2 Select Boundary 99 only.

#### *Domain Coil 1*

1 In the **Physics** toolbar, click  **Domains** and choose **Domain Coil**.

2 Select Domains 7–9 only.

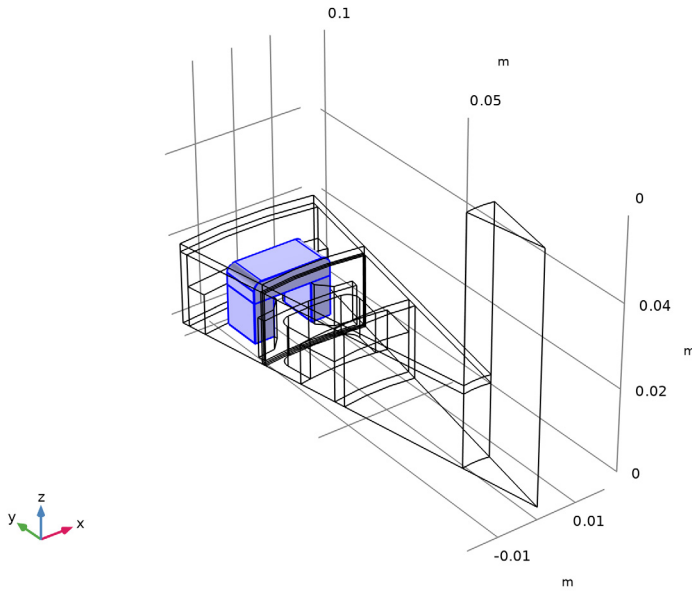

3 In the **Settings** window for **Domain Coil**, locate the **Coil** section.

4 From the **Conductor model** list, choose **Homogenized multiturn**.

5 In the  $I_{\text{coil}}$  text field, type  $I_0 \cdot \sin(\omega t)$ .

6 Locate the **Homogenized Conductor** section. In the  $N$  text field, type 1.

7 From the **Coil wire cross-section area** list, choose **User defined**.

8 Find the **High-frequency effective loss** subsection. Clear the **Include harmonic loss** checkbox.

9 In the  $a$  text field, type  $a_{\text{coil}}$ .

#### *Loss Calculation I*

In the **Physics** toolbar, click  **Attributes** and choose **Loss Calculation**.

#### *Geometry Analysis I*

1 In the **Model Builder** window, click **Geometry Analysis I**.


2 In the **Settings** window for **Geometry Analysis**, click to expand the **Symmetry Specification** section.


3 In the  $F_L$  text field, type 2.

This accounts for the fact that only one half of the coil is included.

Specify the current direction in the coil.

*Input 1*

- 1 In the **Model Builder** window, expand the **Geometry Analysis I** node, then click **Input 1**.
- 2 Select Boundary 43 only.  
Zoom out to see the direction arrow.
- 3 Click the  **Zoom Extents** button in the **Graphics** toolbar.

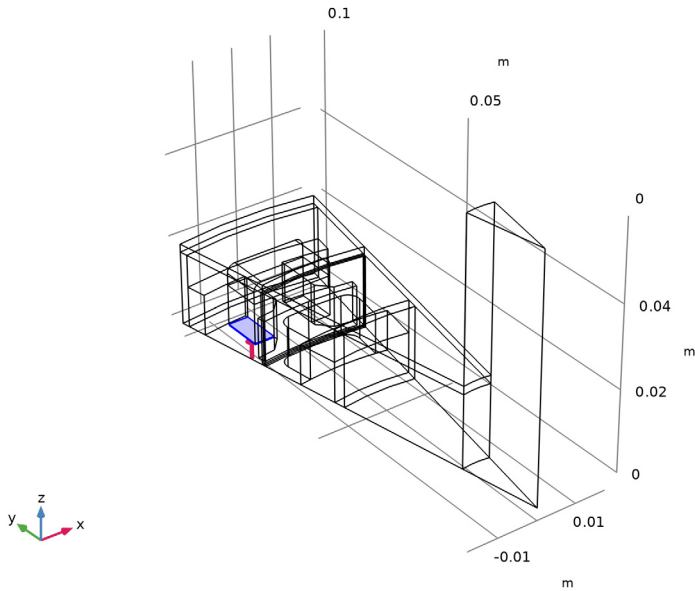


*Geometry Analysis 1*

In the **Model Builder** window, click **Geometry Analysis 1**.

*Output 1*

- 1 In the **Physics** toolbar, click  **Attributes** and choose **Output**.

2 Select Boundary 61 only.

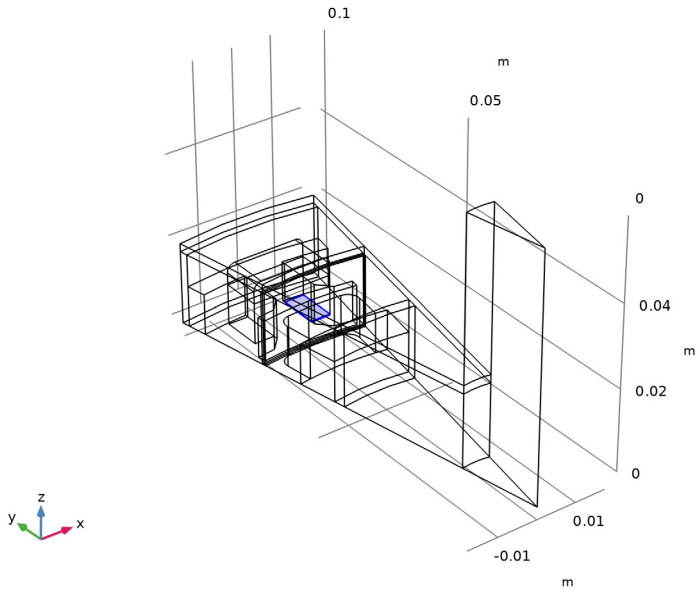

## ROTATING MACHINERY, MAGNETIC (RMM)

### *Domain Coil 1*


In the **Model Builder** window, collapse the **Component 1 (comp1) > Rotating Machinery, Magnetic (rmm) > Domain Coil 1** node.

## COMPONENT 1 (COMP1)

### *Rotating Domain 1*

1 In the **Physics** toolbar, click  **Moving Mesh** and choose **Rotating Domain**.

2 Select Domains 10–12 and 14 only.

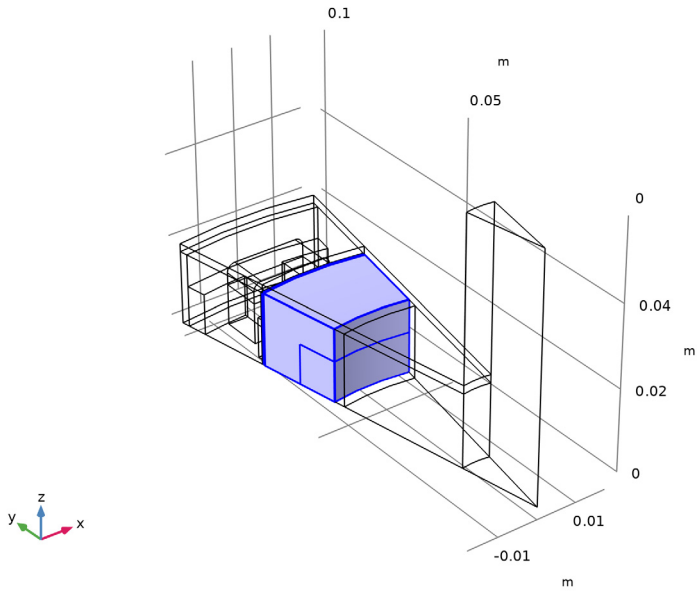

3 In the **Settings** window for **Rotating Domain**, locate the **Rotation** section.

4 In the  $\alpha$  text field, type `omega_rotor*t`.

5 Locate the **Axis** section. Specify the  $\mathbf{u}_{\text{rot}}$  vector as


0	X
0	Y
-1	Z

## ROTATING MACHINERY, MAGNETIC (RMM)

### Force Calculation I

1 In the **Physics** toolbar, click  **Domains** and choose **Force Calculation**.

2 Select Domains 12 and 14 only.

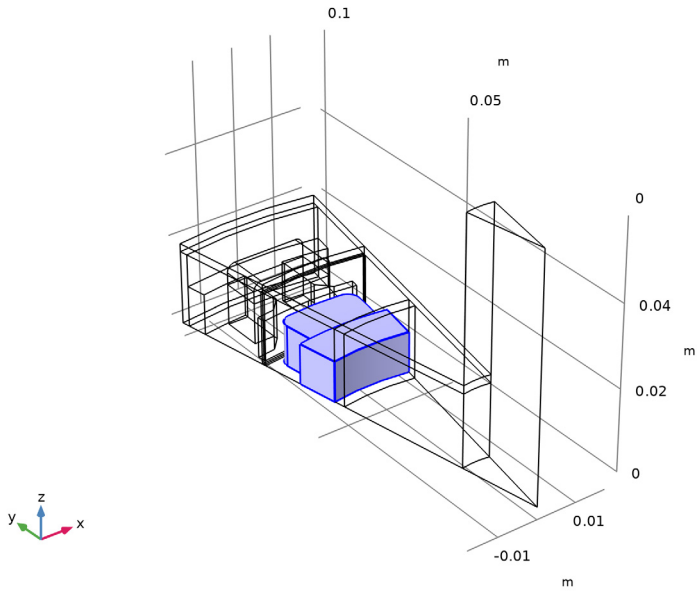

### *Gauge Fixing for A-Field 1*

Fix the gauge for the magnetic vector potential.


In the **Physics** toolbar, click  **Domains** and choose **Gauge Fixing for A-Field**.

### *Periodic Condition 1*

Set up the periodicity of the model. Use separate features for the stator and rotor and, for vector and scalar potentials respectively.

1 In the **Physics** toolbar, click  **Boundaries** and choose **Periodic Condition**.

2 Select Boundaries 26, 32, 71, and 72 only.

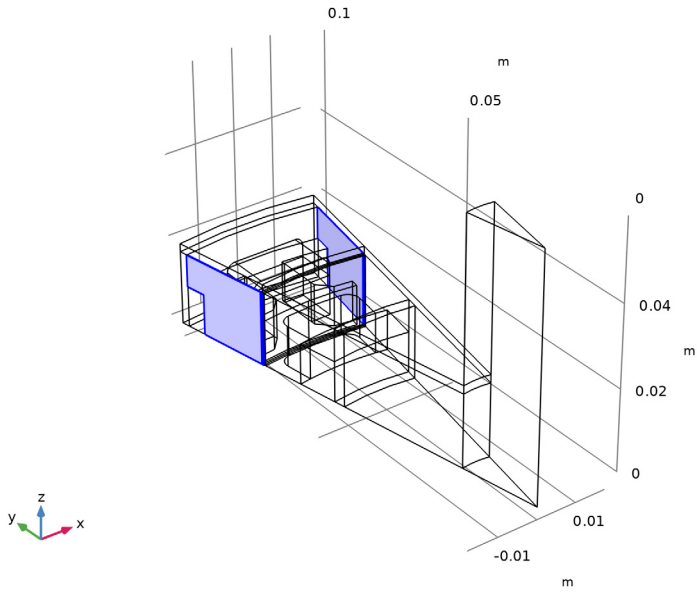

3 In the **Settings** window for **Periodic Condition**, locate the **Periodic Condition** section.

4 From the **Type of periodicity** list, choose **Antiperiodicity**.


#### *Periodic Condition 2*

1 Right-click **Periodic Condition 1** and choose **Duplicate**.


2 In the **Settings** window for **Periodic Condition**, locate the **Boundary Selection** section.

3 Click  **Clear Selection**.


4 Select Boundaries 23 and 73 only.

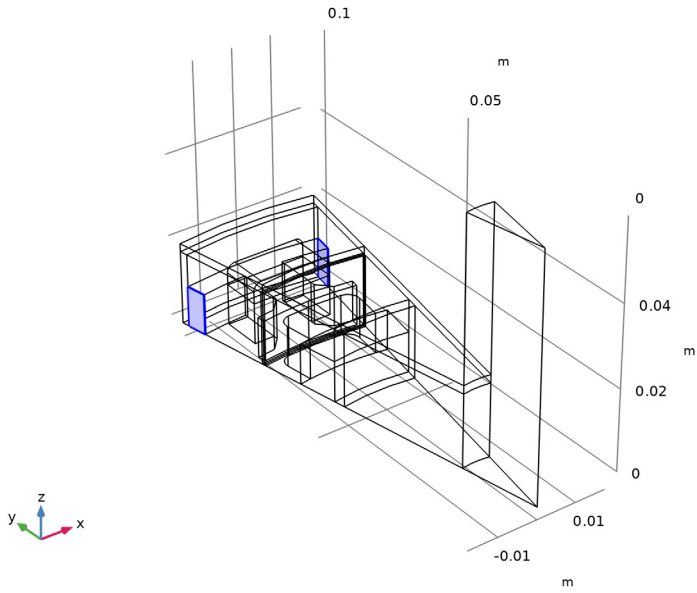

### Periodic Condition 3


- 1 Right-click **Periodic Condition 2** and choose **Duplicate**.
- 2 In the **Settings** window for **Periodic Condition**, locate the **Boundary Selection** section.
- 3 Click  **Clear Selection**.

4 Select Boundaries 74, 78, 82, and 113–115 only.

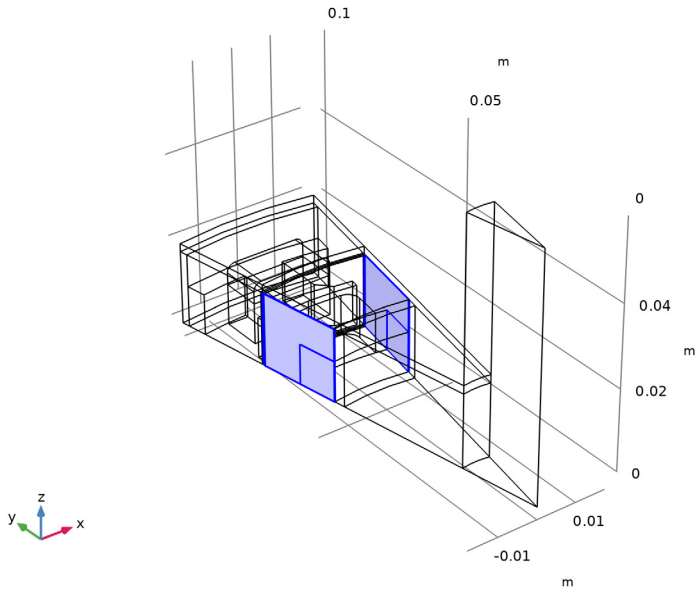


### *Sector Symmetry I*

Add the pair condition for the rotor-stator interface.

- 1 In the **Physics** toolbar, click  **Pairs** and choose **Sector Symmetry**.
- 2 In the **Settings** window for **Sector Symmetry**, locate the **Pair Selection** section.
- 3 Click **+ Add**.
- 4 In the **Add** dialog, select **Identity Boundary Pair 3 (ap3)** in the **Pairs** list.

5 Click **OK**.

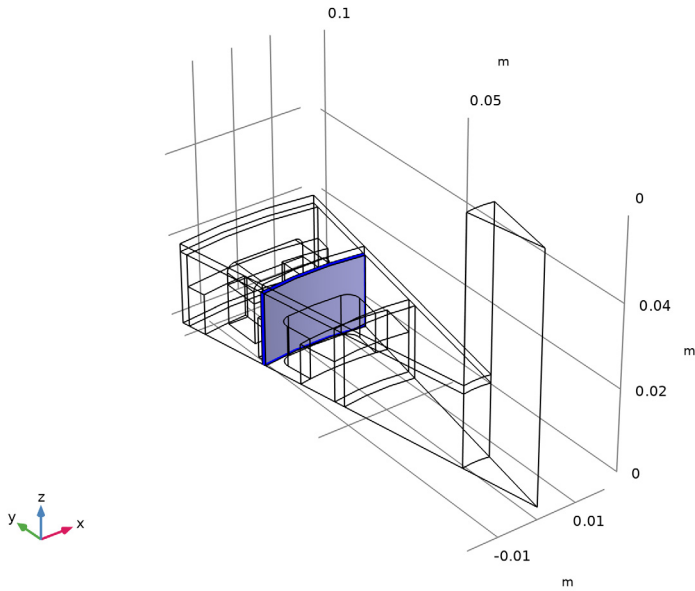

6 In the **Settings** window for **Sector Symmetry**, locate the **Sector Settings** section.

7 In the  $n_{\text{sect}}$  text field, type `n_sectors`.

8 From the **Type of periodicity** list, choose **Antiperiodicity**.

#### *Arkio Torque Calculation I*

Add the torque calculation by means of Arkio's method.

In the **Physics** toolbar, click  **Domains** and choose **Arkio Torque Calculation**.

#### **DEFINITIONS**

Set up variables and other definitions used to define customized output.


#### *Integration - Magnet*

1 In the **Definitions** toolbar, click  **Nonlocal Couplings** and choose **Integration**.


2 In the **Settings** window for **Integration**, type `Integration - Magnet` in the **Label** text field.

3 In the **Operator name** text field, type `intop1_magnet`.


4 Select Domain 14 only.

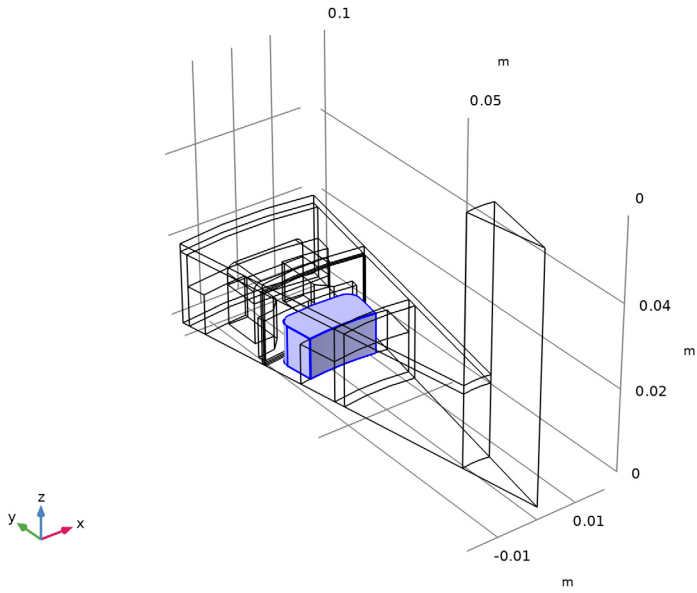

#### *Integration - Coil*


- 1 Right-click **Integration - Magnet** and choose **Duplicate**.
- 2 In the **Settings** window for **Integration**, type **Integration - Coil** in the **Label** text field.
- 3 In the **Operator name** text field, type **intop2\_coil**.
- 4 Locate the **Source Selection** section. Click  **Clear Selection**.

5 Select Domains 7–9 only.

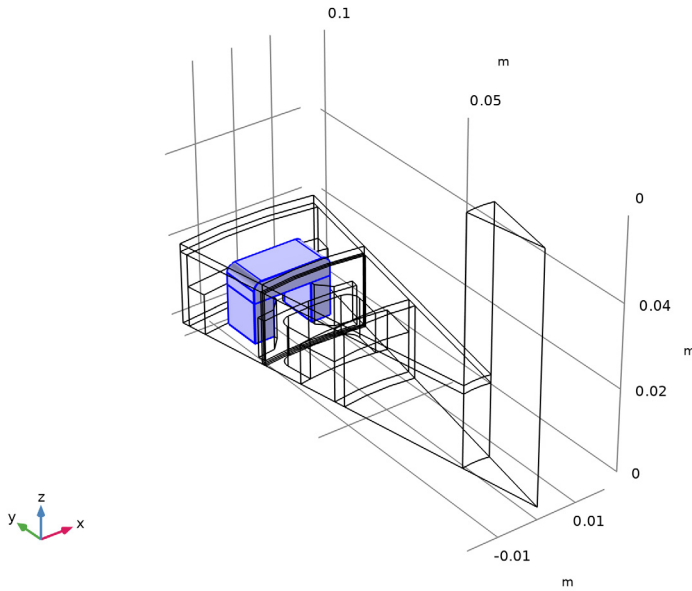

#### *Global Variable Probe 1 - Torque*

Define probes to be plotted while solving.

- 1 In the **Definitions** toolbar, click  **Probes** and choose **Global Variable Probe**.
- 2 In the **Settings** window for **Global Variable Probe**, type Global Variable Probe 1 - Torque in the **Label** text field.
- 3 Locate the **Expression** section. In the **Expression** text field, type  $rmm.Tax_1 * n\_sectors * 2$ .
- 4 Select the **Description** checkbox. In the associated text field, type Axial Torque (N\*m).

#### *Global Variable Probe 2 - Arkkio's Torque method*

- 1 Right-click **Global Variable Probe 1 - Torque** and choose **Duplicate**.
- 2 In the **Settings** window for **Global Variable Probe**, type Global Variable Probe 2 - Arkkio's Torque method in the **Label** text field.
- 3 Locate the **Expression** section. In the **Expression** text field, type  $rmm.Tark_1 * 2$ .
- 4 In the **Description** text field, type Arkkio's Torque Method (N\*m).

#### *Global Variable Probe 3 - Magnet Loss*

- 1 In the **Definitions** toolbar, click  **Probes** and choose **Global Variable Probe**.

- 2 In the **Settings** window for **Global Variable Probe**, type Global Variable Probe 3 - Magnet Loss in the **Label** text field.
- 3 Locate the **Expression** section. In the **Expression** text field, type  $\text{intop1\_magnet}(\text{rmm.Qh}) * \text{n\_sectors} * 2$ .
- 4 Select the **Description** checkbox. In the associated text field, type Losses in Magnets (W).
- 5 Click to expand the **Table and Window Settings** section. From the **Plot window** list, choose **New window**.

#### *Global Variable Probe 4 - Coil Loss*

- 1 Right-click **Global Variable Probe 3 - Magnet Loss** and choose **Duplicate**.
- 2 In the **Settings** window for **Global Variable Probe**, type Global Variable Probe 4 - Coil Loss in the **Label** text field.
- 3 Locate the **Expression** section. In the **Expression** text field, type  $\text{intop2\_coil}(\text{rmm.Qh}) * \text{n\_sectors} * 2$ .
- 4 In the **Description** text field, type Losses in Coils (W).

## **DEFINITIONS**

In the **Model Builder** window, collapse the **Component 1 (comp1) > Definitions** node.

### **ROTATING MACHINERY, MAGNETIC (RMM)**

In the **Model Builder** window, collapse the **Component 1 (comp1) > Rotating Machinery, Magnetic (rmm)** node.

### **MESH 1**

Next, create the mesh. Use the mesh suggested by the physics as a starting point.


- 1 In the **Model Builder** window, under **Component 1 (comp1)** click **Mesh 1**.
- 2 In the **Settings** window for **Mesh**, locate the **Physics-Controlled Mesh** section.
- 3 From the **Element size** list, choose **Fine**.
- 4 In the table, clear the **Use** checkbox for **Geometric Analysis, Detail Size**.
- 5 Right-click **Component 1 (comp1) > Mesh 1** and choose **Edit Physics-Induced Sequence**.

#### *Size*

In the **Model Builder** window, under **Component 1 (comp1) > Mesh 1** right-click **Size** and choose **Build Selected**.

Use a finer mesh on the side of the magnet facing the stator.

### Size 1

- 1 In the **Model Builder** window, right-click **Mesh 1** and choose **Size**.
- 2 In the **Settings** window for **Size**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Boundary**.
- 4 Select Boundaries 92, 100, and 109 only.
- 5 Locate the **Element Size** section. Click the **Custom** button.
- 6 Locate the **Element Size Parameters** section.
- 7 Select the **Maximum element size** checkbox. In the associated text field, type 0.0005.
- 8 Click  **Build Selected**.

The pair boundaries need a finer mesh on the destination boundary so custom meshing is needed for source and destination.


### Free Triangular 1

- 1 In the **Mesh** toolbar, click  **More Generators** and choose **Free Triangular**.
- 2 Select Boundary 36 only.


### Size 1


- 1 Right-click **Free Triangular 1** and choose **Size**.
- 2 In the **Settings** window for **Size**, locate the **Element Size** section.
- 3 Click the **Custom** button.
- 4 Locate the **Element Size Parameters** section.
- 5 Select the **Maximum element size** checkbox. In the associated text field, type 0.001.


### Free Triangular 2

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Mesh 1** right-click **Free Triangular 1** and choose **Duplicate**.
- 2 In the **Settings** window for **Free Triangular**, locate the **Boundary Selection** section.
- 3 Click  **Clear Selection**.
- 4 Select Boundary 75 only.


### Size 1

- 1 In the **Model Builder** window, expand the **Free Triangular 2** node, then click **Size 1**.
- 2 In the **Settings** window for **Size**, locate the **Element Size Parameters** section.
- 3 In the **Maximum element size** text field, type 0.001 / 1.25.
- 4 Click  **Build Selected**.


- 5 Click the  **Zoom Extents** button in the **Graphics** toolbar.

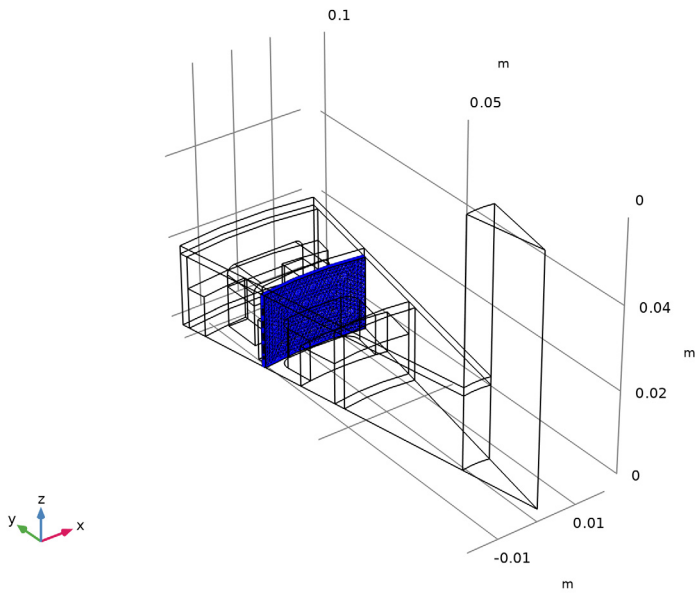

### *Free Triangular 3*

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Mesh 1** right-click **Free Triangular 2** and choose **Duplicate**.
- 2 In the **Settings** window for **Free Triangular**, locate the **Boundary Selection** section.
- 3 Click  **Clear Selection**.
- 4 Select Boundaries 23, 26, 32, 74, 78, and 82 only.


### *Size 1*


- 1 In the **Model Builder** window, expand the **Free Triangular 3** node, then click **Size 1**.
- 2 In the **Settings** window for **Size**, locate the **Element Size** section.
- 3 Click the **Predefined** button.
- 4 From the **Predefined** list, choose **Extra fine**.
- 5 Click  **Build Selected**.

The periodic boundaries need identical meshes and this part was set up by the physics.

### *Identical Mesh 3*

- 1 In the **Model Builder** window, under **Component 1 (comp1) > Mesh 1** right-click **Identical Mesh 3** and choose **Build Selected**.

- 2 Click the  **Zoom Extents** button in the **Graphics** toolbar.

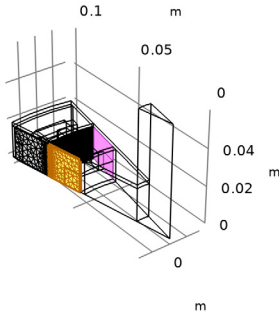

### *Free Tetrahedral I*

- 1 In the **Model Builder** window, click **Free Tetrahedral I**.
- 2 Select Domains 4–12 only.

Use the free tetrahedral mesh in all domains except the magnet.


### *Size I*

- 1 Right-click **Free Tetrahedral I** and choose **Size**.
- 2 In the **Settings** window for **Size**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Edge**.
- 4 Select Edges 105 and 124 only.
- 5 Locate the **Element Size** section. Click the **Custom** button.
- 6 Locate the **Element Size Parameters** section.
- 7 Select the **Maximum element size** checkbox. In the associated text field, type 0.001/2.




Use a boundary layer mesh to resolve the skin depth in the magnet.


- 8 Click  **Build Selected**.


### *Boundary Layers 1*

- 1 In the **Mesh** toolbar, click  **Boundary Layers**.
- 2 In the **Settings** window for **Boundary Layers**, locate the **Geometric Entity Selection** section.
- 3 From the **Geometric entity level** list, choose **Domain**.
- 4 Select Domain 14 only.

### *Boundary Layer Properties*

- 1 In the **Model Builder** window, click **Boundary Layer Properties**.
- 2 In the **Settings** window for **Boundary Layer Properties**, locate the **Boundary Selection** section.
- 3 Click  **Paste Selection**.
- 4 In the **Paste Selection** dialog, type 91-92, 94, 99-100, 109-110 in the **Selection** text field.
- 5 Click **OK**.
- 6 In the **Settings** window for **Boundary Layer Properties**, locate the **Layers** section.
- 7 In the **Number of layers** text field, type 5.
- 8 In the **Stretching factor** text field, type 1.8.
- 9 Click  **Build Selected**.
- 10 Click the  **Go to XY View** button in the **Graphics** toolbar three times.

II Click the  **Zoom Extents** button in the **Graphics** toolbar.

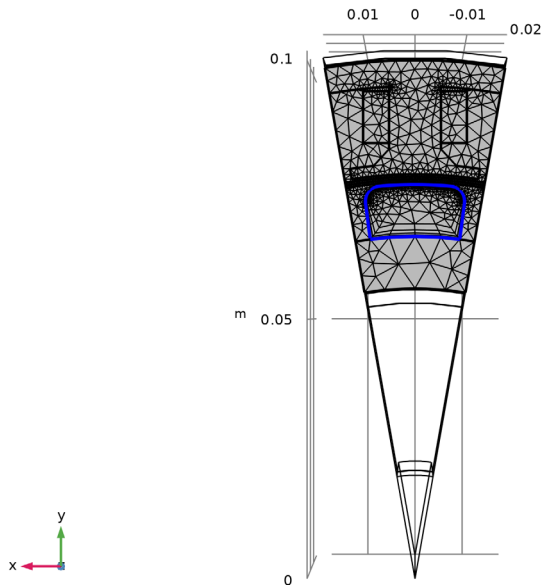



### STUDY I

Next set up the stationary study that will compute the initial conditions for the time-dependent simulation.

First, solve for the numeric coil.

- 1 In the **Model Builder** window, click **Study I**.
- 2 In the **Settings** window for **Study**, locate the **Study Settings** section.
- 3 Clear the **Generate default plots** checkbox.


#### Step 2: Coil Geometry Analysis

- 1 In the **Study** toolbar, click  **More Study Steps** and choose **Other > Coil Geometry Analysis**.
- 2 Right-click **Step 2: Coil Geometry Analysis** and choose **Move Up**.
- 3 In the **Study** toolbar, click  **Compute**.

### RESULTS

Create a custom plot.



### Magnetic Flux Density (stationary)


- 1 In the **Results** toolbar, click  **3D Plot Group**.
- 2 In the **Settings** window for **3D Plot Group**, type Magnetic Flux Density (stationary) in the **Label** text field.
- 3 Locate the **Plot Settings** section. From the **Frame** list, choose **Spatial (x, y, z)**.

### Volume 1

Right-click **Magnetic Flux Density (stationary)** and choose **Volume**.



### Arrow Surface 1

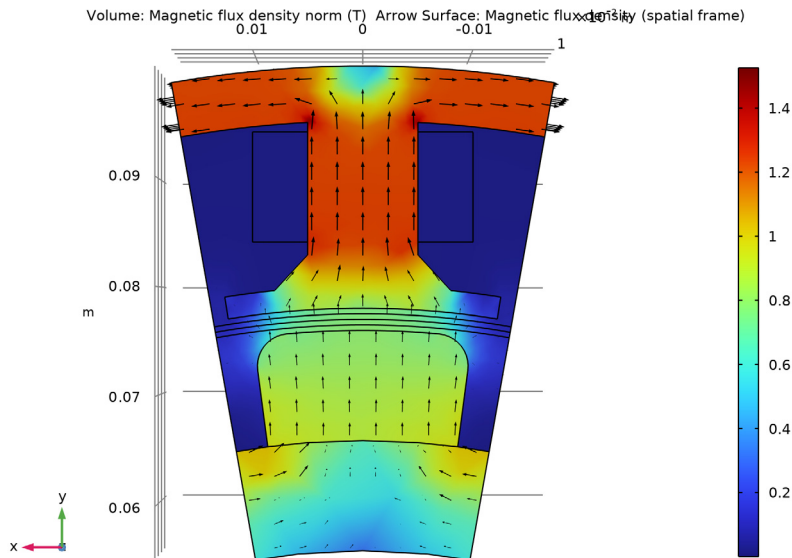- 1 In the **Model Builder** window, right-click **Magnetic Flux Density (stationary)** and choose **Arrow Surface**.
- 2 In the **Settings** window for **Arrow Surface**, locate the **Arrow Positioning** section.
- 3 In the **Number of arrows** text field, type 2000.
- 4 Locate the **Coloring and Style** section. From the **Color** list, choose **Black**.
- 5 In the **Magnetic Flux Density (stationary)** toolbar, click  **Plot**.
- 6 Click the  **Zoom Extents** button in the **Graphics** toolbar.



## ADD STUDY

Proceed to set up the time-dependent simulation using the stationary solution as initial condition. The latter is necessary as otherwise the permanent magnet would be interpreted as being switched on at  $t = 0$ , resulting in an unphysical solution.

- 1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **General Studies** > **Time Dependent**.
- 4 Click the **Add Study** button in the window toolbar.
- 5 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.

## STUDY 2

- 1 In the **Settings** window for **Study**, locate the **Study Settings** section.
- 2 Clear the **Generate default plots** checkbox.

### *Step 1: Time Dependent*

- 1 In the **Model Builder** window, under **Study 2** click **Step 1: Time Dependent**.
- 2 In the **Settings** window for **Time Dependent**, locate the **Study Settings** section.
- 3 In the **Output times** text field, type `range(0,time_one_cycle/25,1.5*  
time_one_cycle)`.

Proper setup of initial conditions and handling of variables that are not solved for, in this case variables used by the coil geometry analysis, requires some extra attention.

- 4 Click to expand the **Values of Dependent Variables** section. Find the **Initial values of variables solved for** subsection. From the **Settings** list, choose **User controlled**.
- 5 From the **Method** list, choose **Solution**.
- 6 From the **Study** list, choose **Study 1, Stationary**.
- 7 Find the **Values of variables not solved for** subsection. From the **Settings** list, choose **User controlled**.
- 8 From the **Method** list, choose **Solution**.
- 9 From the **Study** list, choose **Study 1, Stationary**.

These steps make sure that you get the desired initial values and use and output the desired values of whatever variables you are not solving for in the current study step.

### *Solution 3 (sol3)*

The setup of the time-dependent solver is almost finished but for models that take some considerable time to simulate, it is good practice to generate some customized graphical output while solving for debugging purposes.

In the **Study** toolbar, click  **Show Default Solver**.

## **RESULTS**

### *Study 2/Solution 3 (sol3)*

A dataset for the time-dependent solution was generated with the solver. Use this to create the desired plot to be shown while solving.

First, change the frame to plot in the observer's frame (spatial).

### *Current Density, Magnet (transient)*

Now, proceed to add the plot.

- 1 In the **Model Builder** window, expand the **Results > Datasets** node.
- 2 Right-click **Results** and choose **3D Plot Group**.
- 3 In the **Settings** window for **3D Plot Group**, type **Current Density, Magnet (transient)** in the **Label** text field.
- 4 Locate the **Data** section. From the **Dataset** list, choose **Study 2/Solution 3 (sol3)**.
- 5 Click to expand the **Selection** section. From the **Geometric entity level** list, choose **Domain**.
- 6 Select Domain 14 only.

### *Volume 1*

- 1 Right-click **Current Density, Magnet (transient)** and choose **Volume**.
- 2 In the **Settings** window for **Volume**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (comp1) > Rotating Machinery, Magnetic (Magnetic Fields) > Currents and charge > rmm.normj - Current density norm - A/m<sup>2</sup>**.

Plot the current density magnitude in the magnet only.

### *Arrow Surface 1*

- 1 In the **Model Builder** window, right-click **Current Density, Magnet (transient)** and choose **Arrow Surface**.
- 2 In the **Settings** window for **Arrow Surface**, click **Replace Expression** in the upper-right corner of the **Expression** section. From the menu, choose **Component 1 (comp1) >**

**Rotating Machinery, Magnetic (Magnetic Fields) > Currents and charge > rmm.Jx,..., rmm.Jz - Current density (spatial frame).**

- 3 Locate the **Arrow Positioning** section. In the **Number of arrows** text field, type 400.
- 4 Locate the **Coloring and Style** section. From the **Color** list, choose **Black**.

*Current Density, Magnet (transient)*

Make sure that the geometry outline is following the motion.

- 1 In the **Model Builder** window, click **Current Density, Magnet (transient)**.
- 2 In the **Settings** window for **3D Plot Group**, locate the **Plot Settings** section.
- 3 From the **Frame** list, choose **Spatial (x, y, z)**.

## STUDY 2

Finally activate the plotting during solution of the newly created plot group.


*Step 1: Time Dependent*

- 1 In the **Model Builder** window, under **Study 2** click **Step 1: Time Dependent**.
- 2 In the **Settings** window for **Time Dependent**, click to expand the **Results While Solving** section.
- 3 Select the **Plot** checkbox.
- 4 In the table, enter the following settings:

Plot group	Plot window
Current Density, Magnet (transient)	Graphics

Note that also the probes will be plotted at the internal step rate of the solver which is usually higher than the solution output rate.

Now, it is time to solve the model. This will take of the order of one hour - more or less depending on computer hardware.

- 5 In the **Study** toolbar, click  **Compute**.

## RESULTS

*Torque*


Inspect the probes, start with the torque plot.

Activate legends to distinguish between the curves.

- 1 In the **Model Builder** window, under **Results** click **Probe Plot Group 1**.
- 2 In the **Settings** window for **ID Plot Group**, type Torque in the **Label** text field.

### Probe Table Graph 1

- 1 In the **Model Builder** window, expand the **Torque** node, then click **Probe Table Graph 1**.
- 2 In the **Settings** window for **Table Graph**, click to expand the **Legends** section.

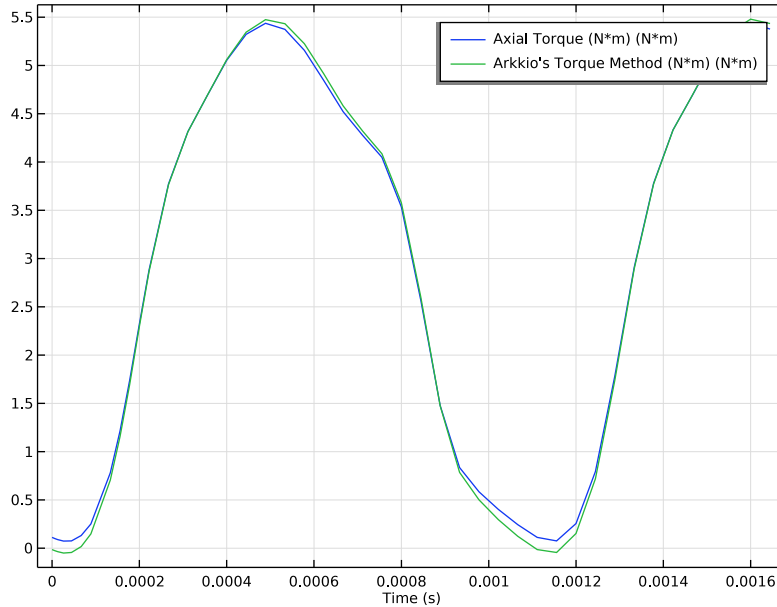

There is good agreement between Arkkio's torque and the torque computed using the Maxwell stress tensor.


Next, have a look at the eddy current losses in the magnet.

### Losses in Magnets

- 1 In the **Model Builder** window, expand the **Results > Probe Plot Group 2** node, then click **Probe Plot Group 2**.
- 2 In the **Settings** window for **ID Plot Group**, type `Losses in Magnets` in the **Label** text field.

### Probe Table Graph 1

1 In the **Model Builder** window, click **Probe Table Graph 1**.

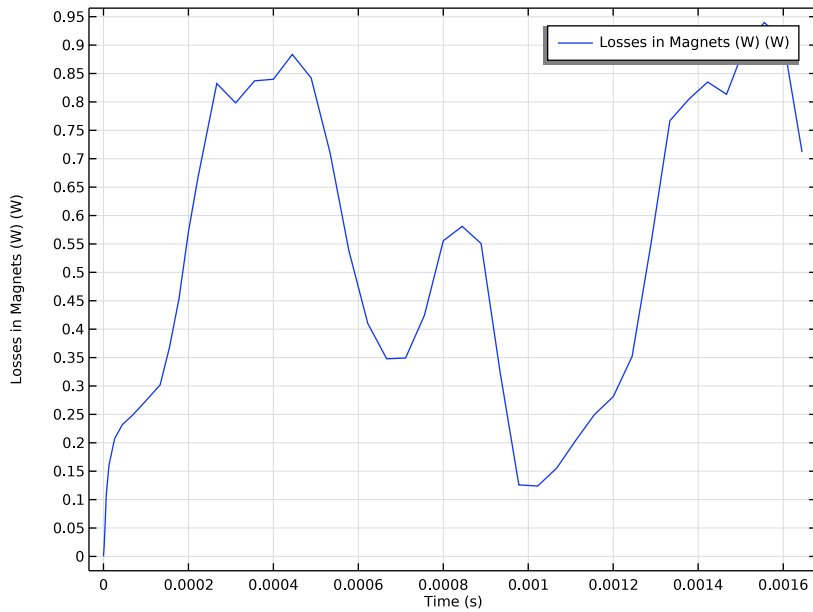

The magnet losses vary significantly over time.

Finally have a look at the losses in the coil.

### Losses in Coils


1 In the **Model Builder** window, expand the **Results > Probe Plot Group 3** node, then click **Probe Plot Group 3**.

2 In the **Settings** window for **ID Plot Group**, type **Losses in Coils** in the **Label** text field.

### Probe Table Graph 1

The coil has a prescribed sinusoidal current density giving rise to resistive losses in the copper.

1 In the **Model Builder** window, click **Probe Table Graph 1**.

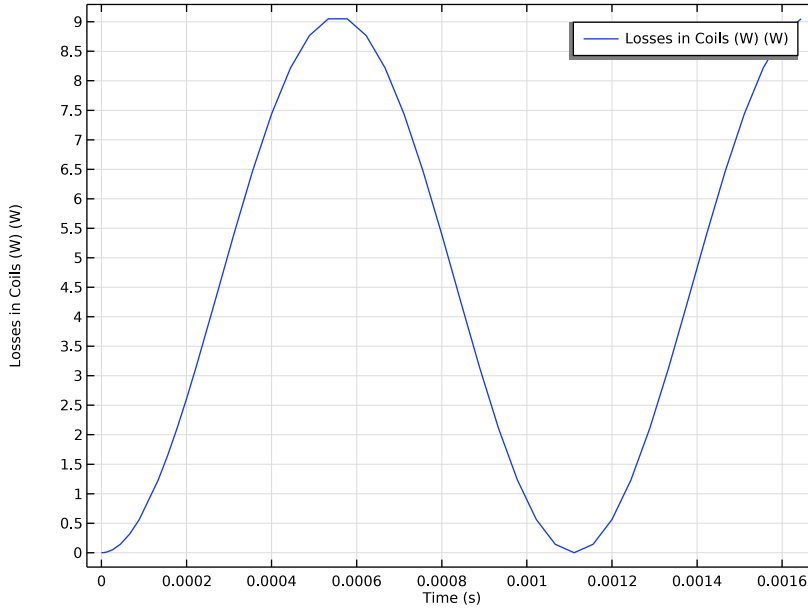

Next, proceed to create custom plots.

*Study 2/Solution 3 (5) (sol3)*

In the **Model Builder** window, under **Results** > **Datasets** right-click **Study 2/Solution 3 (sol3)** and choose **Duplicate**.

*Selection*

1 In the **Results** toolbar, click  **Attributes** and choose **Selection**.

2 In the **Settings** window for **Selection**, locate the **Geometric Entity Selection** section.


3 From the **Geometric entity level** list, choose **Domain**.

4 Select Domains 4, 12, and 14 only.

Datasets with selections can be used as an alternative to adding selections directly on the plot features.

Next, add a plot of the magnetic flux density.

*Magnetic Flux Density (transient)*

1 In the **Results** toolbar, click  **3D Plot Group**.



2 In the **Model Builder** window, click **3D Plot Group 6**.


- 3 In the **Settings** window for **3D Plot Group**, type **Magnetic Flux Density (transient)** in the **Label** text field.
- 4 Locate the **Data** section. From the **Dataset** list, choose **Study 2/Solution 3 (5) (sol3)**.
- 5 Locate the **Plot Settings** section. From the **Frame** list, choose **Spatial (x, y, z)**.

#### *Volume 1*

Right-click **Magnetic Flux Density (transient)** and choose **Volume**.



#### *Arrow Surface 1*

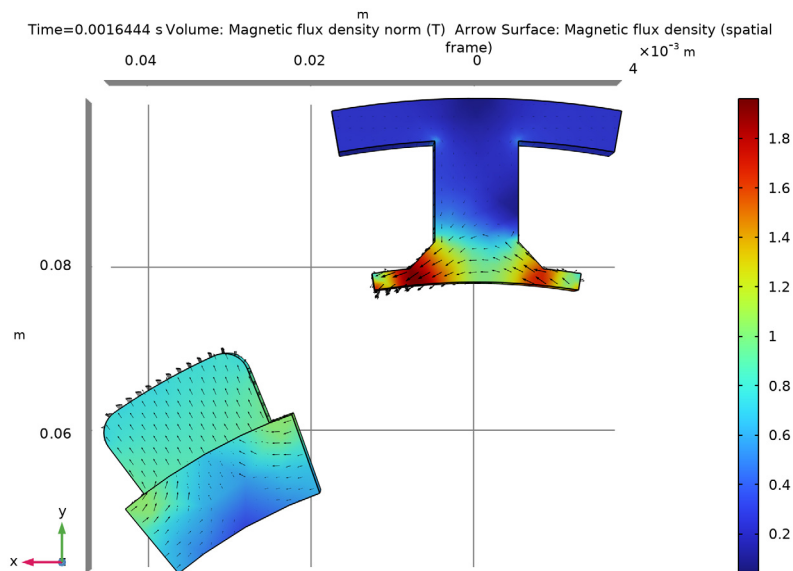- 1 In the **Model Builder** window, right-click **Magnetic Flux Density (transient)** and choose **Arrow Surface**.
- 2 In the **Settings** window for **Arrow Surface**, locate the **Arrow Positioning** section.
- 3 In the **Number of arrows** text field, type 2000.
- 4 Locate the **Coloring and Style** section. From the **Color** list, choose **Black**.
- 5 In the **Magnetic Flux Density (transient)** toolbar, click  **Plot**.
- 6 Click the  **Zoom Extents** button in the **Graphics** toolbar.



The magnetic flux density in the magnet and iron is shown.


## ADD STUDY

- 1 In the **Home** toolbar, click  **Add Study** to open the **Add Study** window.
- 2 Go to the **Add Study** window.
- 3 Find the **Studies** subsection. In the **Select Study** tree, select **Preset Studies for Selected Physics Interfaces > Time-to-Frequency Losses**.
- 4 Click the **Add Study** button in the window toolbar.
- 5 In the **Home** toolbar, click  **Add Study** to close the **Add Study** window.

## LOSS CALCULATION


- 1 In the **Settings** window for **Study**, locate the **Study Settings** section.
- 2 Clear the **Generate default plots** checkbox.
- 3 In the **Label** text field, type **Loss Calculation**.

### *Step 1: Time-to-Frequency Losses*

- 1 In the **Model Builder** window, under **Loss Calculation** click **Step 1: Time-to-Frequency Losses**.
- 2 In the **Settings** window for **Time-to-Frequency Losses**, locate the **Study Settings** section.
- 3 From the **Input study** list, choose **Study 2, Time Dependent**.
- 4 In the **Electrical period** text field, type `time_one_cycle`.
- 5 In the **Number of harmonics** text field, type `12`.
- 6 In the **Study** toolbar, click  **Compute**.

## RESULTS

### *Loss Density in Magnets*

- 1 In the **Results** toolbar, click  **3D Plot Group**.
- 2 In the **Settings** window for **3D Plot Group**, type **Loss Density in Magnets** in the **Label** text field.
- 3 Locate the **Data** section. From the **Dataset** list, choose **Loss Calculation/Solution 4 (sol4)**.

### *Volume 1*

- 1 Right-click **Loss Density in Magnets** and choose **Volume**.
- 2 In the **Settings** window for **Volume**, locate the **Expression** section.
- 3 In the **Expression** text field, type `rmm.Qh`.


### *Selection 1*


- 1 Right-click **Volume 1** and choose **Selection**.

2 Select Domain 14 only.

### Loss Density in Magnets

1 In the **Model Builder** window, under **Results** click **Loss Density in Magnets**.

2 In the **Loss Density in Magnets** toolbar, click  **Plot**.

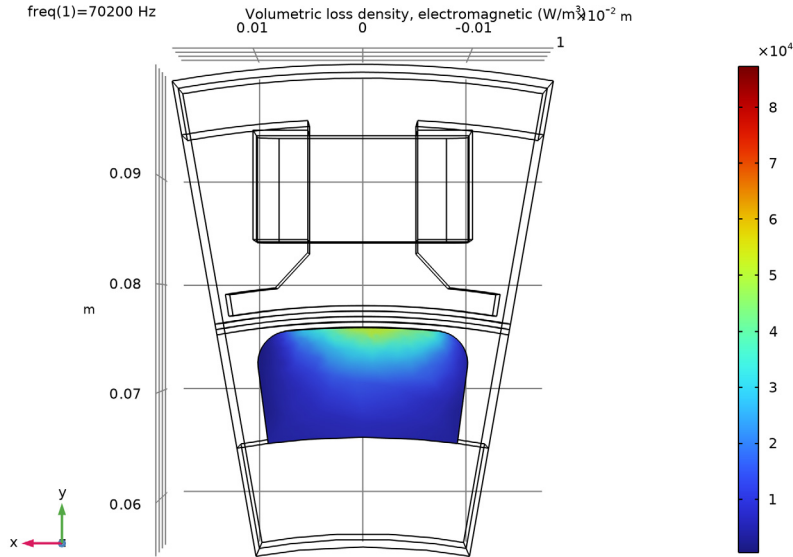

### Volume Integration 1

1 In the **Results** toolbar, click  **More Derived Values** and choose **Integration > Volume Integration**.

2 In the **Settings** window for **Volume Integration**, locate the **Data** section.

3 From the **Dataset** list, choose **Loss Calculation/Solution 4 (sol4)**.

4 Select Domain 14 only.

5 Locate the **Expressions** section. In the table, enter the following settings:

Expression	Unit	Description
$rmm.Qh * n\_sectors * 2$	W	Total loss power of the magnet

6 Click  **Evaluate**.

The total loss power of the magnet is about 0.5 W.

## **ROOT**

Finally add a suitable thumbnail to the model.

- 1** In the **Model Builder** window, click the root node.
- 2** In the root node's **Settings** window, locate the **Presentation** section.
- 3** Find the **Thumbnail** subsection. Click **Set from Graphics Window**.